




AMERICANFORGE&FOUNDRY"

Operation MANUAL


40 Gallon Parts Washer – Heavy Duty



Product No. 31400B

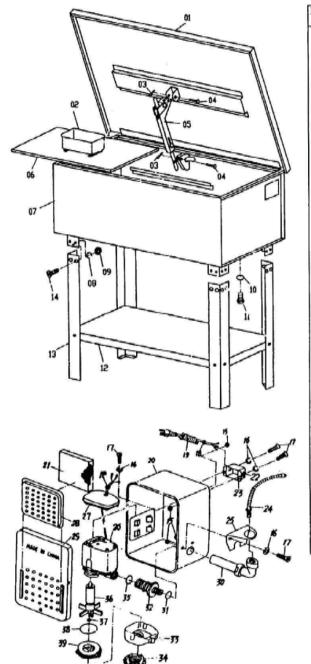

PARTS NO	DESCRIPTION	QTY
01	COVER	1
02	WORK BASKET	1 1
03	SPRING PAN	4
04	PIN	4
05	SAFETY PLATE	1 1
06	WORK SHELF	i
07	BODY	1
08	SPRING WASHER	24
09	NUT	24
10	O-RING	1
11	PLUG	1
12	SHELF	i
13	LEG	4
14	PAN SCREW	24
15	NUT	5
15	SPRING WASHER	5
17	SCREW	5
18	STRAIN RELIEF	2
19	CABLE AND PLUG	1
20	PUMP HOUSING	1
21	SCREEN	1
22	SWITCH	1
23	SWITCH BOX	1
24	FLEXIBLE PIPE	1
25	ELBOW SEAT	1
26	PUMP BODY	1
27	PUMP BACK COVER	1
28	FILTER COVER	1
29	PUMP HOUSING COVER	1
30	ELBOW	1
31	PLASTIC WASHER	1
32	SPIGOT	1
33	LOCATION OF KNOB	1
34	FILTER	1
35	SEALRING	1
36	IMPELLER	1
37	SHIN WASHER	2
38	SEALRING	1
39	IMPELLER HOLDER	1

 



Assembly Instructions

- 1. Remove machine from carton and inspect for any visual damage.
- 2. Remove parts inside the machine.
- 3. Lay clean and hard cardboard on floor and lay machine on its lid. (Make sure you hold cover closed when laying machine on its lid.)
- 4. Mount four legs on brackets with M6 X 12 Philips head screws and M6 keps nuts. **NOTE: DO NOT TIGHTEN**
- 5. Place lower shelf between legs with flat surface up and attach to legs with M6 X 12 Philips head screws and M6 keps nuts.
- 6. With legs pressed tight against lower shelf, tighten all screws to lower shelf.
- 7. Tighten all the screws installed in step 4.
- 8. Stand machine up, be careful to hold lid closed.
- 9. Put work shelf and basket into the machine.
- 10. Mount pump assembly into slot on the side of the tank and fasten to the tank using the two Philips head screws installed in the flange on the lower part of the switch housing, then place filter screen in position.
- 11. Plug machine into standard 115 volt 60 Hz grounded outlet as shown in Figure A.
- 12. Fill with no more than 22 Gallons of cleaning fluid.
- 13. Turn switch on. Fluid should now be flowing from the flexible spigot.

Specifications

Overall Dimensions	45-1/4" x 22" x 35"
Tank Dimensions	44-5/8" x 21-1/2" x 12-1/2"
Maximum Solvent Capacity	40 Gallons*
Working Capacity	22 Gallons
Max Pump Output Through Spigot	20L/min
Electrical Requirements	115 Volt / 60Hz / 0.5 Amp
Product Weight	99 lbs.



4FF AMERICANFORGE&FOUNDRY

Cleaning Solutions

Aqueous-based cleaning solution only.

WARNING

The pump of your Parts Washer may be damaged if you use solvents other than those listed above such as methyl ethyl ketone (MEK), Perchloroethylene or trichloroethylene.



Trouble Shooting

The only trouble you should ever experience with your Parts Washer is reduced volume flow or no flow of cleaning liquid from the flex hose nozzle. The probable cause is foreign matter in the flex hose.

Corrective Procedure


- 1. Check if indicator light on switch box is lit.
- 2. Using an insulated handle screwdriver, lightly touch tip of housing of motor. A light oscillation magnetic pull indicates power is reaching the motor.
- 3. Disconnect power plug, remove flex hose from pump flow-out line.
- 4. Remove front of pump housing by removing 3 screws. Clean any foreign matter lodged around impeller.
- 5. Reassemble in reverse order.



WARNING

- 1. Do not smoke near Parts Washer
- 2. Do not use Parts Washer near an open flame
- 3. Use only in a well ventilated area

Do not fill to maximum tank capacity Fill only to 22 Gallons working capacity

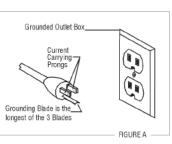




MODEL 31400 - 40 GALLON INDUSTRIAL PARTS WASHER

UPDATED 7-05

PART		KIT INCLUDES		
ORDER NUMBER	KIT DESCRIPTION	REF.#	DESCRIPTION	
31400K27		27	FLEXIBLE PIPE	
31400KA		28	PUMP	
31400K34		34	SWITCH	
31200AK06		6	SAFETY LEVER ea. (2 required)	
31200AK40		40	SCREEN	
31400K50 31400KHW		50 22	PLUG with GFCI BOLT X 24	
31400KHW		22	SPRING WASHER X 24	
		23	NUT X 24	
		38	STAR WASHER X 10	
		45	TAPPING SCREW X 10	
31400K25A	PUMP, HOUSING	17	NUT	
	MOTOR, CORD	25	PUM HOUSING	
	W/ GFCI	26	ELBOW	
		28	PUMP	
		30	HOSE	
		31	HOSE CLAMP	
		32	TAPPING SCREW	
		33	SWITCH BOX	
		34	SWITCH	
		35	TAPPING SCREW	
		36	POWER CORD	
		37	PAN SCREW	
		38	STAR WASHER	
		39 40	PUMP HOUSING COVER SCREEN	
		40	COVER	
		41	TAPPING SCREW	
		46	FEED THRU	
		47	NUT	
		48	FLEXIBLE PIPE	
		50	PLUG W/GFCI	
NOT AVAILABLE		1	TANK	
NOT AVAILABLE		2	COVER	
NOT AVAILABLE		4	BOLT	
NOT AVAILABLE		9	SAFETY PLATE	
NOT AVAILABLE		10	PIN	
NOT AVAILABLE		11	SPRING PIN	
NOT AVAILABLE		12	WASHER	
NOT AVAILABLE		17	NUT	
NOT AVAILABLE		19	PLUG	
		20	SHELF	
NOT AVAILABLE NOT AVAILABLE		21 25	LEG PUMP HOUSING	
NOT AVAILABLE	1	25 26	ELBOW	
NOT AVAILABLE	1	30	HOSE	
NOT AVAILABLE		31	HOSE CLAMP	
NOT AVAILABLE		32	TAPPING SCREW	
NOT AVAILABLE	1	33	SWITCH BOX	
NOT AVAILABLE	1	35	TAPPING SCREW	
NOT AVAILABLE		36	POWER CORD	
NOT AVAILABLE		37	PAN SCREW	
NOT AVAILABLE	1	39	PUMP HOUSING COVER	
NOT AVAILABLE	1	40	SCREEN	
NOT AVAILABLE		41	COVER	
NOT AVAILABLE		42	WORK SHELF	
NOT AVAILABLE		44	BASKET	
NOT AVAILABLE		46	FEED THRU	
NOT AVAILABLE		47	NUT	
NOT AVAILABLE		48	FLEXIBLE PIPE	

MODEL 31400 - PARTS WASHER EXPLODED VIEW

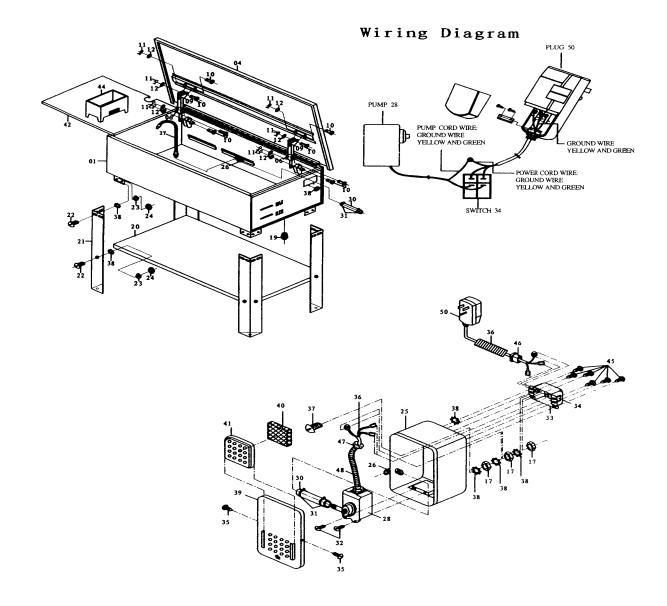

* ONLY PARTS WITH A "PART ORDER NUMBER" ARE AVAILABLE.

DO NOT COPY OR DISTRIBUTE THIS MATERIAL WITHOUT PERMISSION OF AFF, INC.



40 - Gallon Parts Washer

Model 31400

AFF Parts Washers are designed for fast and efficient cleaning of vehicle parts and subassemblies. All have durable baked enamel finishes and fusiblelinked fire covers for safety (always wear the appropriate face and hand protection when using a parts cleaner). Our complete line of parts washers and accessories are designed for use with waterbased

cleaners (aqueous) for faster, more efficient cleaning.

- 22-gallon working capacity
- 50 GPH pump output
- Safety GFCI plug at 110V/0.5A
- Removable work shelf and parts basket
- Comes with model PWBRUSH Flo-thru parts cleaning brush
- UL Listed on complete unit
- 45" x 21-1/4" x 35-5/8" overall dimensions
- Ship weight 107 lbs.





Model 31200A 20 Gallon Parts Washer



Model 8622A 50:1 Air Operate Grease Unit



Model 8895 24 Gallon Waste Oil Drain / Evac.

If you're looking for <u>quality cleaning and janitorial</u> made by AFF, we've you covered.