



Remove pusher rod from machine.
Insert strip of staples.
Replace pusher rod.

STAPLE PENETRATION

For best penetration with any gun tacker, raise the rear of the gun slightly off the work and bear down on the front end to prevent recoil when operating. The power spring on the T59 will drive well into

The power spring on the T59 will drive well into all ordinary woods. Remove pusher rod A.
Remove screw and nut from hole B.
Pull down entire inside frame for complete cleaning.

1. Press latch to release pusher rod.

Lightly push rod forward until it stops. Visible projected part of rod indicates amount of staples remaining in track.