


## PARTS BREAKDOWN

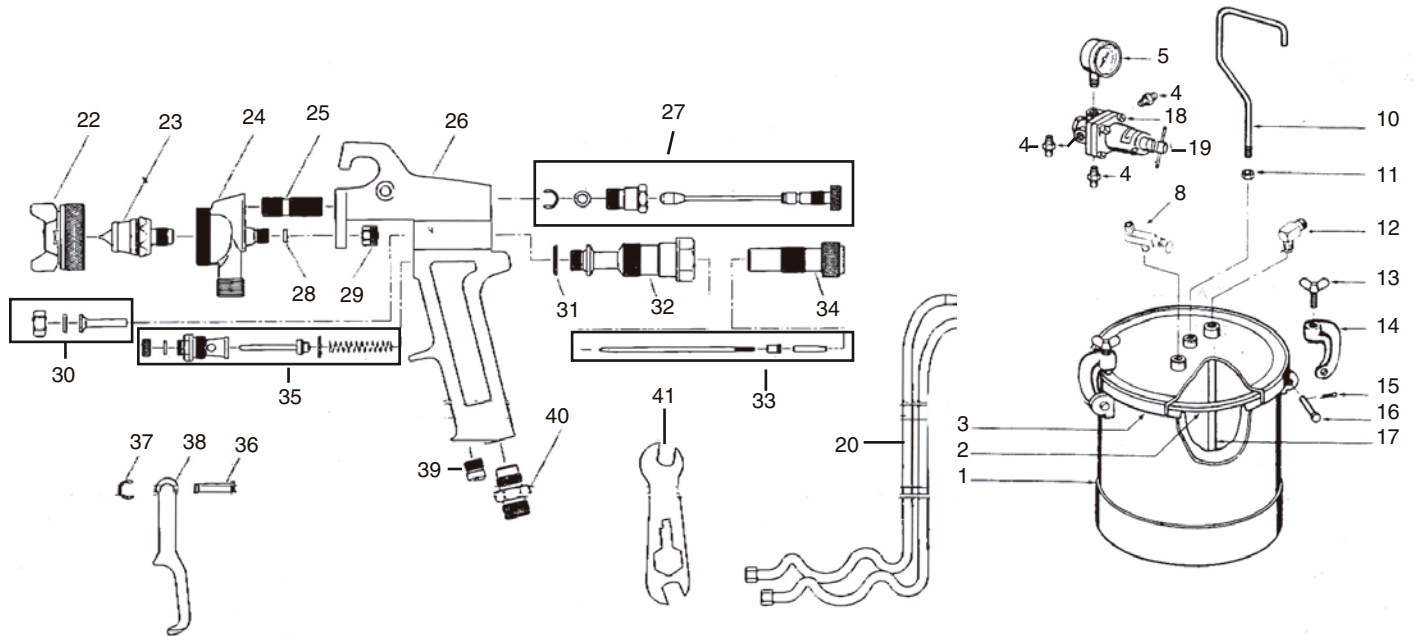

## Parts List

Index No.	Part No.	Description	Qty
1	PT2.4-A01	Tank Shell Assembly (2301)	1
2	PT2.4-A02	Lid Gasket (2302)	1
3	PT2.4-A03	Lid Assembly (2303)	1
4	PT2.4-A04	Adapter (2304)	3
5	PT2.4-A05	Gauge (2305)	1
8	PT2.4-A08	Swivel Adapter (2308)	1
10	PT2.4-A10	Handle (2310)	1
11	PT2.4-A11	Hex Nut (2311)	1
12	PT2.4-A12	Street Elbow (2312)	1
13	PT2.4-A13	Thumb Screw (2313)	4
14	PT2.4-A14	Yoke Assembly (2314)	4
15	PT2.4-A15	Cotter Pin (2315)	4
16	PT2.4-A16	Hinge Pin (2316)	1
17	PT2.4-A17	Fluid Tube (2317)	1
18	PT2.4-A18	Air Regulator and Gauge (2318)	1
19	PT2.4-A19	Adjusting Screw (2319)	1
20	MBL3812	12' Hose Assembly (MBL3812)	1
21	PT2.4G	Gun only	1
22	PT2.4G-01	Air Cap	1

Index No.	Part No.	Description	Qty
23	PT2.4G-02	Fluid Nozzle	1
24	PT2.4G-03	Head	1
25	PT2.4G-04	Screw	1
26	PT2.4G-05	Gun Body	1
27	PT2.4G-06	Spreader Adjusting Valve Set	1
28	PT2.4G-07	Packing	1
29	PT2.4G-08	Needle Valve Packing Seat	1
30	PT2.4G-09	Valve Stem	1
31	PT2.4G-10	Gasket	1
32	PT2.4G-11	Needle Valve Guide	1
33	PT2.4G-12	Fluid Needle Assembly	1
34	PT2.4G-13	Fluid Adjusting Screw	1
35	PT2.4G-14	Air Valve Assembly	1
36	PT2.4G-15	Trigger Stud	1
37	PT2.4G-16	Trigger Stopper	1
38	PT2.4G-17	Trigger	1
39	PT2.4G-18	Nut	1
40	PT2.4G-19	Air connection	1
41	PT2.4G-20	Spanner	1