

# technical service bulletin

Bulletin # 5503-31910

The ATD-5503 [circuit tester](#) is advertised as having no need for a grounding cable or wire. While this is true, it isn't complete information.

The REASON there is no ground cable or wire needed is because the user needs to be grounded and touching the metal part of the tester while using it, essentially becoming the ground wire himself.

For best results, the user should be touching bare metal on the automobile.

Thank you,

A handwritten signature in black ink, appearing to be "P. M. [unclear]".