



# Instruction Manual

## NSP-2422B/R

Please read these instructions before using this product. They include important safety and operation information.

### WARNINGS

- NOT FOR USE ABOVE HAZARDOUS LOCATIONS
- DO NOT use in explosive atmospheres, near flammable liquids, or where explosion proof lamps are required.
- DO NOT use in the proximity of vehicles or equipment when there is a risk of flammable liquids coming into contact with the flashlight.
- DO NOT expose the batteries to water or salt water, or allow the batteries to get wet.
- DO NOT store the batteries with metallic objects that may cause a short circuit.
- Immediately discontinue use of the batteries if they emit an unusual smell, feel hot, change color, change shape or appear abnormal in any way.
- Keep out of the reach of children.

### INSTALLING OR CHANGING BATTERIES

- Unscrew the lens bezel.
- Remove the reflector / battery carrier.
- Install 3 AA batteries in the carrier. Please pay attention to the orientation of the batteries as indicated by the "+" and "-" markings on the inside of the carrier.
- Replace reflector / battery carrier in flashlight housing. Align reflector / battery carrier with the switch.
- Replace the lens bezel.

### OPERATION

The 2422B/R has two body switches that control the flashlight and the floodlight. The flashlight and floodlight functions can be operated independently and together.

- Top Switch Partial Press = Momentary Flashlight
- Top Switch Press Until Click = Constant-on Flashlight
- Bottom Switch Press Until Click = Constant-on Floodlight
- One Press Until Click of Both Switches = Dual-Light (both the Flashlight and the Floodlight at the same time)