



Instruction Manual

NSR-9940XL

US PATENT 9,713,217

THANK YOU FOR SELECTING THE NIGHTSTICK NSR-9940XL!

Please read these instructions before using your 9940XL. They include important safety and operation information. Be sure to charge the 9940XL fully before the first use. A battery is fully charged when the charger light is green.



STROBE WARNING

Exposure to strobing lights may cause dizziness, disorientation, and nausea. A very small percentage of people suffer from photosensitive epilepsy and may experience seizures or blackouts triggered by strobing lights.

INITIAL USE

Fully charge the 9940XL before the first use, or if the battery is new or has been unused for several months. The maximum charge time required is approximately 6 hours.

DAILY USE

- Use only the supplied Nightstick charger, battery and AC or DC adapter. For best performance, charge the 9940XL when the flashlight beam starts to dim.
- Connect the AC power adapter to the charger. The LED indicator will not be illuminated at this point.
- With the flashlight facing forward, snap the 9940XL into the charger until the contacts snap into place.
- The LED indicator changes to constant red indicating the 9940XL is properly inserted into the charger and is in fact charging. The LED indicator remains red until the battery is fully charged. At full charge, the LED indicator turns green.
- The total time to full charge the 9940XL varies depending on the remaining charge in the battery pack.
- To confirm a full charge, keep the 9940XL in the charger and turn it on. The LED indicator will change to red. Turn off the 9940XL. If the 9940XL is fully charged, the LED indicator will turn green. If not, it remains red until the charge is completed and the LED indicator turns green. The 9940XL will now be fully charged.

OPERATION

The 9940 has seven light modes: momentary flashlight, full brightness flashlight, medium brightness flashlight, low brightness flashlight, floodlight, dual-light and strobe. The 9940 has two body switches providing access to all modes.

Momentary Flashlight Mode

Lightly press the top body switch for momentary operation. Release the switch to turn the light off.

Constant-on

Press the top body switch until it clicks and then release for constant-on in high-brightness mode. Press and release the top body switch again to turn the light off.

Select Brightness Level

Press and hold down the top body switch. The light will cycle from high to medium to low and then back up again at a rate of approximately one mode per second. The light will continue to cycle up and down through the various modes as long as the top body switch is held down. When the desired brightness level is reached, simply release the top body switch, and the light will remain in that brightness mode. Press and release the top body switch to turn the light off.

Floodlight

Press the bottom body switch until it clicks and then release for floodlight mode. Press and release the bottom body switch again to turn the light off.

Dual-Light

Dual-Light allows the user to turn on both the Flashlight (at any brightness level) and the Floodlight, at the same time. First select the appropriate brightness level of the flashlight using the directions above. Next press and release the bottom switch to activate the floodlight. Both the Flashlight and the Floodlight are now running. Press and release both the top and bottom body switches to turn the light off.

Strobe Function

From off or any mode, rapidly double click the switch to activate the strobe function running at full brightness. Press and release the body switch to turn the light off.

WARNINGS

- Lithium-ion batteries must be used and charged properly. Improper use can result in serious injury, fire, or death.
- NOT FOR USE IN HAZARDOUS LOCATIONS. Do not use this product in explosive atmospheres, near flammable liquids, or where explosion proof or intrinsically safe lighting is required.
- DO NOT use this product in the proximity of vehicles or equipment when there is a risk of flammable liquids coming into contact with the flashlight.
- Light can become hot while on. To prevent damage DO NOT cover or place next to any potentially flammable materials while in use.
- Do not leave the battery in direct sunlight or use or store the battery inside cars in hot weather.
- Do not expose the battery to water or salt water, or allow the battery to get wet.
- Do not store the battery with metallic objects that may cause a short circuit.
- Immediately discontinue use of the battery if the battery emits an unusual smell, feels hot, changes color, changes shape or appears abnormal in any way.
- Keep out of the reach of children.



[View other flashlights made by Bayco on our website.](#)