

INS-8900-12

# Operating Instructions for Model 8900 Series Retractable Reel Multiple Patents Pending

Electrical Rating - All models use 125 Volts 60 Hz

 ${\bf CAUTION}$  - TO REDUCE THE RISK OF ELECTRIC SHOCK AND FIRE - PULL PLUG WHEN SERVICING, CONNECTING/DISCONNECTING FROM THE CORD REEL OR WHEN RE-LAMPING

#### CAUTION

DO NOT use this cord reel in explosive atmospheres, near flammable liquids, or where explosion proof lamps are required.

DO NOT use in the proximity of vehicles or equipment when there is a risk of flammable liquids coming into contact with the hand lamp

DO NOT immerse in water

DO NOT use in areas where water can accumulate or in rain or mist **CAUTION:** Risk of Electric Shock – For Light Duty Dry Location Use Only

GENERAL USE CORD REEL ONLY. NOT FOR HARD USE. FOR INDOOR DRY LOCATION USE ONLY

WARNING: NOT FOR USE ABOVE HAZARDOUS LOCATIONS CAUTION: DO NOT USE IN HAZARDOUS LOCATIONS AS REQUIRED BY THE CANADIAN ELECTRICAL CODE, PART I

#### IMPORTANT SAFETY INSTRUCTIONS

This product has a 3 prong polarized plug on the power cord. Do not attempt to bypass this safety feature by removing the round plug and defeat his safety feature. This plug will fit into a grounded outlet only one way. If the plug does not fit fully into the outlet, contact a qualified electrician. Never use with a two wire extension cord.

CAUTION: PULL OUT CORD TO FULL LENGTH WHEN USING RECEPTACLE CAUTION: DO NOT ALLOW THE CORD TO RETRACT BY ITSELF AS DAMAGE OR

INJURY MAY OCCUR FROM EXCESSIVE REWIND SPEED CAUTION: Drywall will not hold the weight of the reel assembly

**CAUTION:** Read and understand mounting instructions before attempting installation and use of this product

<u>Thank you for purchasing this Bayco cord reel</u>. Please read these instructions before using.

#### OPERATION

To operate, plug into a 120 Volt 60 HZ grounded outlet. For units with 3 or 4 outlets the LED in the receptacle block lights when power is applied.

## **FEATURES**

- The cord on the reel has a polarized 3 prong plug
- · Mounts on ceiling or wall
- · Adjustable cord-stop.


| Model   | Receptacle | Wire Gage   | Cord   |                  |
|---------|------------|-------------|--------|------------------|
| Wodel   | Amperage   | wife Gage   | Length |                  |
| 8903    | 13         | 14/3 SJTW   | 50 ft  | 3 outlets        |
| 8904    | 15         | 12/3 SJTW   | 50 ft  | 4 outlets        |
| 8904-40 | 13         | 12/3 331 11 | 40 ft  | 4 0011615        |
| 8906    | 15         | 12/3 SJEOW  | 50 ft  | 4 outlets        |
| 8907    | 12         | 14/3 SJTW   | 50 ft  | 13 W Fluorescent |
| 8908    | 12         | 14/3 SJTW   | 50 ft  | 26 W Fluorescent |

# MOUNTING INSTRUCTIONS

## Ceiling or Wall Installation

- Select a location within 2 feet of an electrical outlet. The outlet for a garage door opener is desirable.
- Remove the knobs holding the mounting bracket to the reel. Locate a ceiling joist and using the mounting bracket as a template, mark the holes so they are centered on the ceiling joist.
- Drywall will not hold the weight of the reel assembly, so locate a ceiling joist or wall stud and using the mounting bracket as a template, mark the holes so they are centered on the ceiling joist or stud.
- 4. Attach the mounting bracket to the stud using the 2 wood screws provided.
- Align the holes on the side of the reel with the holes in the side of the mounting bracket and insert the knobs. Tighten knobs securely.

Adjust the cord stop to hold the receptacle at the desired length when the cord is retracted.

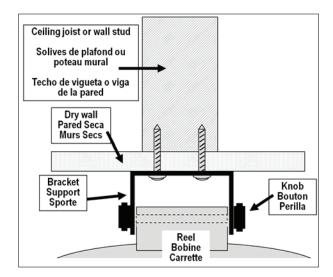



#### SAFETY / CARE

- Caution: do not allow the cord to retract by it self as damage or injury may occur from excessive rewind speed.
- Adjust the cord stop to hold the receptacle at the desired length when the cord is retracted.
- Before cleaning the reel always unplug from the power source.
- Clean the outside of the cord reel only. Use a soft cloth with mild detergent. Do not
  use petroleum based to clean the cord reel. Never immerse the cord reel or
  receptacles or work lights in water. Dry thoroughly before attempting to reattach to
  power source.

#### WARRANTY

#### PRODUCTS COVERED UNDER THIS LIMITED WARRANTY:

This product is warranted to the original purchaser for 1 year and only covers failures due to defects in materials or workmanship. If this product is used for rental purposes, the warranty term is reduced to 90 days from the date of purchase.

# NOT COVERED

The warranty does not cover normal wear and tear or cosmetic damage. The Limited Warranty also does not cover damages which occurred in shipment or failures which are caused by accidents, misuse, abuse, faulty installation and lightning damage.

Consequential damages, incidental damages or incidental expenses, including damage to property. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, which may vary from state to state. This warranty does not apply to certain Bayco professional products that carry a specific warranty unique to those products.

## **WARRANTY CLAIMS - USA**

Contact Bayco for USA warranty claims. Call and Bayco Customer Service will provide a Return Goods Authorization (RGA) to facilitate rapid warranty action. After receiving the RGA, send the product (shipping prepaid) to BAYCO. Include a dated proof of purchase and a brief description of the defect with your name, address and phone number. Your product will either be repaired or replaced at the option of Bayco and returned as soon as practical, but no later than 45 days after being received by Bayco.

## **WARRANTY CLAIMS - CANADA**

Return the product to the place where purchased with a dated proof of purchase and a brief description of the defect with your name, address and phone number. Your product will either be replaced or purchase price refunded.

#### REQUEST FOR WARRANTY ACTION

If you have any questions about this warranty or any other Bayco product inquiries contact BAYCO.