



## Instructions for Model 918

### 18 Watt Fluorescent Work Light



Electrical Rating - All models use 125 Volts 60 Hz

**CAUTION - TO REDUCE THE RISK OF ELECTRIC SHOCK AND FIRE - PULL PLUG WHEN SERVICING, CONNECTING/DISCONNECTING FROM THE LAMP OR WHEN RE-LAMPING - USE ONLY 13 WATT OR SMALLER BULB**

#### CAUTION

DO NOT use in explosive atmospheres, near flammable liquids, or where explosion proof lamps are required.

DO NOT use in the proximity of vehicles or equipment when there is a risk of flammable liquids coming into contact with the hand lamp.

DO NOT immerse in water.

DO NOT use in areas where water can accumulate or in rain or mist.

**CAUTION:** Risk of Electric Shock – For Light Duty Dry Location Use Only.

#### IMPORTANT SAFETY INSTRUCTIONS

This product has a 3 prong polarized plug on the power cord. Do not attempt to bypass this safety feature by removing the round plug and defeat his safety feature. This plug will fit into a grounded outlet only one way. If the plug does not fit fully into the outlet, contact a qualified electrician. Never use with a two wire extension cord.

**WARNING: NOT FOR USE IN HAZARDOUS LOCATIONS**

**CAUTION: DO NOT USE IN HAZARDOUS LOCATIONS AS REQUIRED BY THE CANADIAN ELECTRICAL CODE, PART I**

#### **OPERATION**

Plug into 120 Volt 60 Hz polarized outlet. Notice the polarized plug and insert properly. Operate switch. Lamp may flash several times before lighting.

Some models have a 3-wire grounded outlet as a power source for electrical tools or other appliances not exceeding 6.4 AMPS. The outlet will also accept a two-wire polarized plug.

#### **BULB REPLACEMENT**

1. Disconnect the work light from electrical outlet.
  2. Remove the top cap and hang hook assembly from the tube.
  3. Remove the 2 screws located on the back of the light.
  4. Slide the lens up to expose the bulbs.
  5. Grasping the bulb at the top, rock the bulb back and forth while carefully pulling up on bulb to remove and discard the old bulb.
  6. Insert new bulb in socket and bulb holder. Be sure bulb is properly seated against the bulb-holder.
  7. Slide the lens back into place.
  8. Align the holes in the lens with the holes in the back of the light. Replace the screws.
  9. Replace the cap and hang hook assembly.
  10. Restore power connection and test lamp by pressing the power switch
- NOTE: Even new lamps will flash several times before lighting.

#### **REPLACEMENT BULBS**

Use PL-9 twin-tube fluorescent bulb.

A replacement lamp may be obtained from Bayco products.