



INS-651-12

## Operating Instructions for Model 651 13 Watt Fluorescent Light on Retractable Reel *Multiple Patents Pending*

Electrical Rating - All models use 125 Volts 60 Hz

**CAUTION** - TO REDUCE THE RISK OF ELECTRIC SHOCK AND FIRE - PULL PLUG WHEN SERVICING, OR WHEN RE-LAMPING - USE ONLY 13 WATT OR SMALLER BULB

### CAUTION

DO NOT use this cord reel in explosive atmospheres, near flammable liquids, or where explosion proof lamps are required.  
DO NOT use in the proximity of vehicles or equipment when there is a risk of flammable liquids coming into contact with the hand lamp  
DO NOT immerse in water  
DO NOT use in areas where water can accumulate or in rain or mist  
**CAUTION:** Risk of Electric Shock – For Light Duty Dry Location Use Only

**GENERAL USE CORD REEL ONLY. NOT FOR HARD USE. FOR INDOOR DRY LOCATION USE ONLY FOR LIGHT DUTY RESIDENTIAL USE ONLY**

**WARNING: NOT FOR USE ABOVE HAZARDOUS LOCATIONS**

**CAUTION: DO NOT USE IN HAZARDOUS LOCATIONS AS REQUIRED BY THE CANADIAN ELECTRICAL CODE, PART I**

**IMPORTANT SAFETY INSTRUCTIONS:** This product has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless the plug can be fully inserted. Do not attempt to defeat this safety feature.

**CAUTION: DO NOT ALLOW THE CORD TO RETRACT BY ITSELF AS DAMAGE OR INJURY MAY OCCUR FROM EXCESSIVE REWIND SPEED**

**CAUTION:** Drywall will not hold the weight of the reel assembly

**CAUTION:** Read and understand mounting instructions before attempting installation and use of this product

Thank you for purchasing this Bayco cord reel. Please read these instructions before using.



### OPERATION

- To operate, plug into a 120 Volt 60 Hz grounded outlet.
- Pull out desired length of cord. Notice a clicking noise when pulling. Cord will stay at the desired length during clicking and rewind after a pull past the clicking noise. Extended length when retracted can be adjusted by sliding plastic ball to desired position.
- Move I-O switch to "I" position. Lamp may flash several times before lighting, especially in cold weather. Turn off by moving switch to "O" position.

**CAUTION: DO NOT ALLOW CORD TO RETRACT BY ITSELF, AS DAMAGE TO CORD END FITTINGS MAY OCCUR FROM EXCESSIVE REWIND SPEED.**

**TO CLEAN OUTSIDE OF UNIT:** Unplug the unit before cleaning and dry thoroughly before re-using. Use a soft cloth with mild detergent. **DO NOT** use solvents such as gasoline, turpentine, etc., to clean the unit. **NEVER** immerse the reel or cord end fittings (receptacles or lamps) in water.

### FEATURES

- 13 watt fluorescent work light
- The cord is 20ft long; with polarized plug.
- Mounts on ceiling or wall
- Adjustable cord stop.


### BULB REPLACEMENT

- Unplug the light from the outlet.
- Use fingernail or edge of knife blade to lift out plastic stud in base of lamp holder.
- Carefully pull tube from handle.
- Remove lamp from the lamp holder and discard.
- Insert new lamp in socket in handle. Make sure both lamp contacts on bottom of lamp are inserted properly into the socket.
- Slide tube assembly over lamp and insert top of lamp into slot cut in top lamp holder. Lamp should just penetrate slot in lamp holder.
- Align hole in tube with hole in handle and install the plastic stud. Press in firmly until fully seated.

### MOUNTING

#### Ceiling or Wall Installation

- Select a location within 2 feet of an electrical outlet. The outlet for a garage door opener is desirable.
- Drywall will not hold the weight of the reel assembly, so locate a ceiling joist or wall stud and using the mounting bracket as a template, mark the holes so they are centered on the ceiling joist or stud.
- Attach the mounting bracket to the stud using the 2 wood screws provided.
- Align the holes on the side of the reel with the holes in the side of the mounting bracket and insert the pin.
- Place the retaining ring on the pin and twist until the entire ring is through the hole in the pin. **DO NOT operate this reel without the retaining ring in place on the pin.**

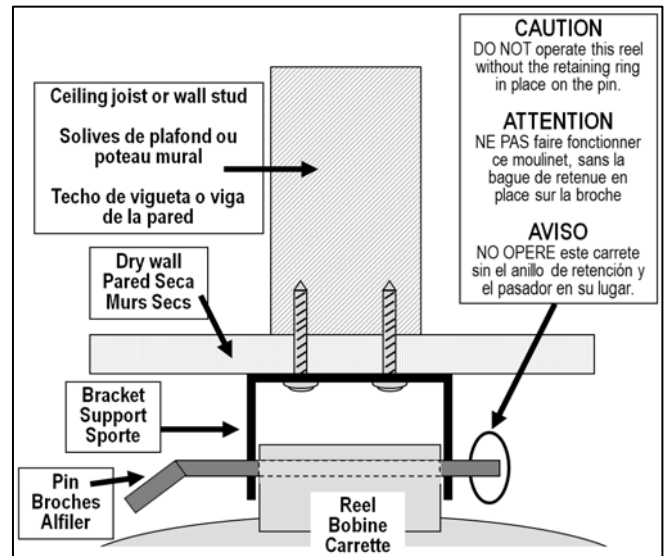

### SAFETY / CARE

- Caution: do not allow the cord to retract by it self as damage or injury may occur from excessive rewind speed.
- Adjust the cord stop to hold the receptacle at the desired length when the cord is retracted.
- Before cleaning the reel always unplug from the power source.
- Clean the outside of the cord reel only. Use a soft cloth with mild detergent. Do not use petroleum based to clean the cord reel. Never immerse the cord reel or receptacles or work lights in water. Dry thoroughly before attempting to reattach to power source.