



Instruction Manual

SLR-2120

THANK YOU FOR PURCHASING THE SLR-2120 RECHARGEABLE UNDER HOOD WORK LIGHT. SAVE THESE INSTRUCTIONS.



Please read these instructions before using your work light. Be sure to charge the work light before the first use.

- CAUTION: Do not use this work light in explosive atmospheres, near flammable liquids, or where explosion-proof lamps are required. Do not immerse in water.
- CAUTION: For light duty work only.

CHARGING

INITIAL USE

Fully charge the work light before the first use. If the battery is new or has been unused for several months, several charge and discharge cycles may be needed to reach full battery capacity. To reach maximum performance, run the light to completely discharge the battery and then recharge. Each charge cycle will extend the operation time until maximum capacity is achieved. The charge time for maximum capacity is approximately 4 hours.

REGULAR USE

- Use only the supplied AC or DC charging adapter.
- For best performance, charge the work light when the LED's start to dim.
- Connect the AC power adapter to the light. The red indicator will light.
- The red light indicates the work light is being charged. The red light remains on until the battery is fully charged. At full charge, the light turns green. The total time to full charge varies depending on the remaining charge in the battery pack.
- Keep the work light plugged into the charger to maintain a trickle charge.

TIPS TO EXTEND BATTERY LIFE

- The work light Lithium-ion internal battery pack does not have a memory effect. Charging the work light often helps extend its useful life.
- A new work light or one that has not been used for a long period of time may not accept a full charge initially. This is normal and does not indicate a problem. Fully discharge and then charge the unit several times to condition the battery pack for full capacity. As the battery pack capacity increases the charge time shortens.
- Charge the unit after each use, whether the work light is fully discharged or not.
- Store the work light at room temperature

OPERATION

TURNING THE WORK LIGHT ON/OFF

The work light has two switches that work in tandem, one in each of the handles. The light can be controlled by either switch regardless of which switch is pressed first.

THE SWITCHES HAVE 3 FUNCTIONS:

- First press - Full-Power: All LEDs on
- Second press - Half-Power: Only one row of LEDs on
- Third press - All LEDs off

MOUNTING OPTIONS

USING THE SPRING-LOADED CARRIER:

- Snap the work light into the spring-loaded carrier.
- Hook one end of the carrier on the hood. While holding the light, extend the opposite hook to grasp the other edge of the hood
- Rotate and position the light as needed - The light can be rotated in the carrier approximately 90° for optimal illumination

USING THE HANGER-HOOKS:

- Rotate the centers of each end handle to expose the recessed hanger-hook. Grasp the hanger-hook and rotate each out in to position for use
- Hang the light using one or both hooks

USING THE END-MAGNETS:

- Remove the work light from the spring-loaded carrier.
- Attach the light handle to a steel object to hang the light vertically. The magnets are strong enough to support the light's weight using one or both sets of magnets.

WARNING: DO NOT HANG ANYTHING FROM THE LIGHT WHILE MAGNETICALLY ATTACHED

CLEANING:

- Disconnect the light from the power source
- Wipe with a clean dry soft cloth
- Do not use any solvent or abrasive cleaners

