



BLACK&DECKER®

ULTRABRIGHT LED SPOTLIGHT
INSTRUCTION MANUAL



Catalog Number SL3WAKB

Thank you for choosing Black & Decker!

READ ALL INSTRUCTIONS

⚠ **WARNING:** Read all instructions before operating spotlight. Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.

SAFETY GUIDELINES / DEFINITIONS

⚠ **DANGER:** Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

⚠ **WARNING:** Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

⚠ **CAUTION:** Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

CAUTION: Used without the safety alert symbol indicates potentially hazardous situation which, if not avoided, may result in property damage.

RISK OF UNSAFE OPERATION. When using tools or equipment, basic safety precautions should always be followed to reduce the risk of personal injury. Improper operation, maintenance or modification of tools or equipment could result in serious injury and property damage. There are certain applications for which tools and equipment are designed. Manufacturer strongly recommends that this product NOT be modified and/or used for any application other than for which it was designed. Read and understand all warnings and operating instructions before using any tool or equipment.

IMPORTANT SAFETY INSTRUCTIONS

⚠ **WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK:**

- Do not put light in water or other liquid. Do not place or store appliance where it can fall or be pulled into a tub or sink.
- Keep light lamp away from materials that may burn.
- Do not clean this appliance with a water spray or the like.

⚠ **CAUTION: TO REDUCE THE RISK OF INJURY OR PROPERTY DAMAGE:**

- 3W LED gets hot quickly. Do not touch hot lens, guard or enclosure.
- Do not drop or throw spotlight. It contains glass and alkaline batteries.
- Keep sharp objects away from lens — it is glass and can break.

• **AVOID DANGEROUS ENVIRONMENTS:**

- Don't use the light in damp or wet locations. This unit is NOT waterproof. Do not immerse light in water or other liquids.
- Do not operate the light near flammable liquids or in gaseous or explosive atmospheres. Internal sparks may ignite fumes causing personal injury.
- Do not expose this unit to extremely high temperatures, flames or sparks.

• **TO REDUCE THE RISK OF INJURY,** close supervision is necessary when the light is used near children.

• **STORE IDLE APPLIANCES INDOORS.** When not in use, appliances should be stored indoors in dry and high or locked-up places – out of reach of children.

• **Use of accessories and attachments.** Use only attachments recommended or sold by the manufacturer.

• **CHECK DAMAGED PARTS.** Before further use of the light, a guard or other part that is damaged should be carefully checked to determine that it will operate properly and perform its intended function. A part that is damaged should be properly repaired or replaced by manufacturer unless otherwise indicated elsewhere in this instruction manual. Have defective switches replaced by manufacturer. Do not use tool if switch does not turn it on and off.

- Do not operate this unit with a missing or damaged lens.
- Do not touch the LED surface at any time.

- Never look directly into the light or shine the light into another person's eyes.
- Do not disassemble the main body of the unit. Other than the 4 "AA" size dry cell batteries, there are no user-replaceable parts.

⚠ **WARNING: Batteries can explode, or leak, and can cause injury or fire. To reduce this risk:**

- Carefully follow all instructions and warnings on the battery label and package.
- Always insert batteries correctly with regard to polarity (+ and –), marked on the battery and the equipment.
- Do not short battery terminals.
- Do not charge batteries.
- Do not mix old and new batteries. Replace all of them at the same time with new batteries of the same brand and type.
- Remove dead batteries immediately and dispose of per local codes.
- Do not dispose of batteries in fire.
- Keep batteries out of reach of children.
- Remove batteries if the device will not be used for several months.

"Transporting batteries can possibly cause fires if the battery terminals inadvertently come in contact with conductive materials such as keys, coins, hand tools and the like. The US Department of Transportation Hazardous Material Regulations (HMR) actually prohibit transporting batteries in commerce or on airplanes (i.e. packed in suitcases and carryon luggage) UNLESS they are properly protected from short circuits. So when transporting individual batteries, make sure that the battery terminals are protected and well insulated from materials that could contact them and cause a short circuit."

SAVE THESE INSTRUCTIONS


INTRODUCTION

Congratulations on purchasing your new spotlight. Read this Instruction Manual and follow the instructions carefully before using your new spotlight.

FEATURES

- Ultra-bright 3 watt LED beam
- Powered by four (4) "AA" alkaline dry cell batteries (may be sold separately)
- Hi/Low settings extend runtime
- Comfortable pistol grip
- Low battery voltage LED indicator
- Trigger lock

Controls and Functions

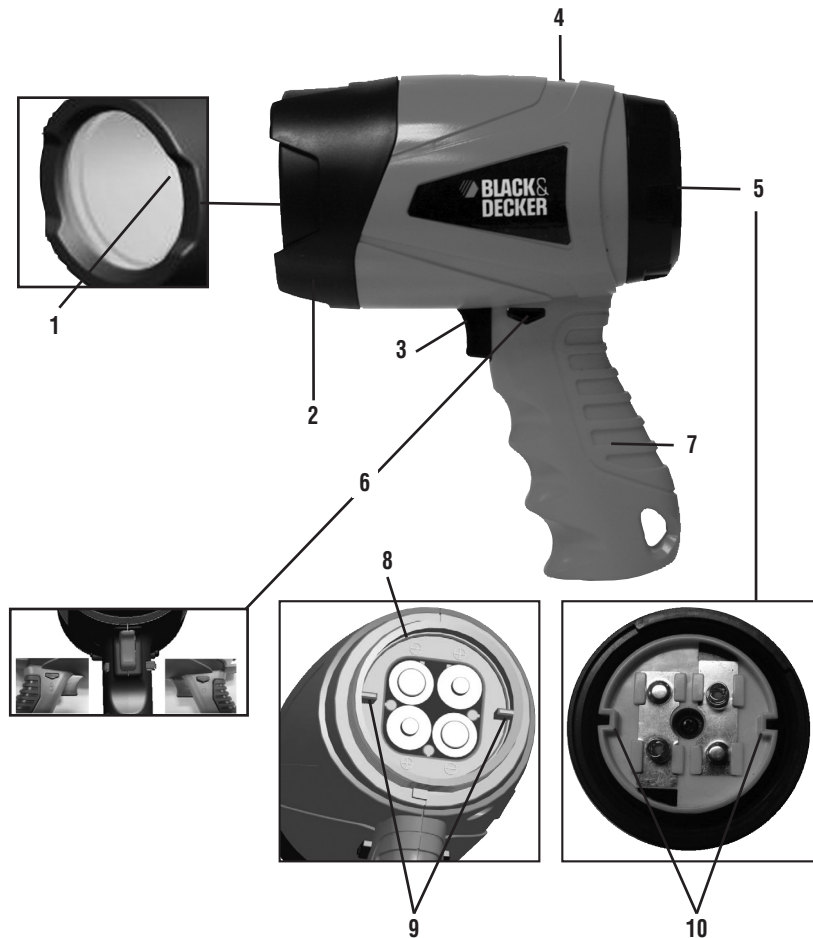

- | | |
|--------------------------------------|------------------------------------------------------------------------------------------------------|
| 1. 3 watt LED bulb | 7. Pistol Grip Handle |
| 2. Rubber Bezel | 8. Battery Compartment containing four (4) "AA" alkaline dry cell batteries (may be sold separately) |
| 3. On/Off Trigger | 9. Ribs (align and fit into the two corresponding grooves in the end cap) |
| 4. Low Battery Voltage LED Indicator | 10. End Cap detail showing grooves |
| 5. End Cap | |
| 6. Trigger Lock | |

POWER SUPPLY

The unit is powered by four "AA" alkaline dry cell batteries (may be sold separately). You must install the batteries (following the directions in the next paragraph) before first use and whenever the Low Battery Voltage LED Indicator flashes red to indicate that battery power is low.

Unscrew the end cap on the back of the unit (counter-clockwise) and remove it. Insert batteries as described in compartment, observing the cautions that follow. Replace the end cap on the unit by first aligning the two grooves of end cap to fit over the two ribs in the battery compartment; then screwing the end cap in a clockwise direction to secure. Do NOT overtighten.

Note: Use only "AA" alkaline dry cell batteries in this unit.

CAUTIONS

- When replacing the "AA" alkaline dry cell batteries: DO NOT mix old and new batteries. Always insert batteries correctly with regard to polarity (+ and -), marked on the battery and the battery compartment. Remove dead batteries immediately and dispose of per local codes.
- Follow all warnings regarding batteries in the Important Safety Instructions section of this manual.

OPERATING INSTRUCTIONS

Operating the Spotlight

The On/Off Trigger turns the unit on and off, and is also used to choose either the high or low brightness setting.

1. Press and hold the On/Off Trigger once to use the spotlight in its high (brightest) setting.
2. Release the On/Off Trigger to turn the unit off.

or

1. Press the On/Off Trigger twice, then hold the Trigger, to use the spotlight in its low (dimmiest) setting.
2. Release the On/Off Trigger to turn the unit off.

Using the Trigger Lock

To lock the spotlight in the on position, press the On/Off Trigger once (brightest setting) or twice (dimmiest setting) and hold, then press the Trigger Lock to the locked position. The spotlight will stay on until the Trigger Lock is pressed to the unlocked position and the On/Off Trigger is released.

If the On/Off Trigger is released when the Trigger Lock is pressed to the locked position, the spotlight will be locked in the off position. To turn the spotlight on again, press the Trigger Lock to the unlocked position before pressing the On/Off Trigger.

TROUBLESHOOTING

Problem	Solution
Light will not operate	<ol style="list-style-type: none"> 1. The End Cap may be loose. Screw the End Cap clockwise to secure. Do not over-tighten. 2. The batteries may be completely discharged. Replace the batteries following the directions given in this manual. 3. If the light does not operate after replacing the batteries and tightening the back cover, contact manufacturer.

CARE AND MAINTENANCE

Never submerge the unit in liquids of any kind. If the unit gets dirty, gently clean the outer surfaces of the closed body casing with a soft cloth moistened with a mild solution of water and detergent.

Except for the batteries, there are no user-serviceable parts inside. Contact the manufacturer if any components have become worn or broken.

Safe Battery Disposal

Refer to the Safety Warnings in the front of this Instruction Manual when selecting and replacing batteries. Always dispose of used batteries properly.

⚠ WARNING: TO REDUCE THE RISK OF INJURY/EXPLOSION:

- Do not dispose of batteries in fire as this may result in an explosion.
- Do not expose the unit containing batteries to fire or intense heat as it may explode.

SPECIFICATIONS

Bulb:	3 watt LED bulb
Power source:	4 "AA" alkaline batteries (may be sold separately)