


SPLITTING BRICKS


 Pull the Hairpin Cotter Pin and the Back Height Adjustment Pin to adjust the back height of one of the three height adjustment spaces. Then reinsert the Back Height Adjustment Pin and the Hairpin Cotter Pin.

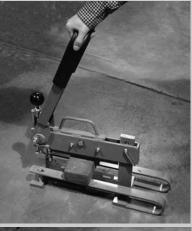


 Then, with the handle in the "up" position, place the brick in the center of the blades underneath the Blade Hinge Pin. For accurate angle cutting, use our optional Cutting Guide Table (sold separately).



 If the bottom blade is not touching the brick, adjust the bottom base spring height by tightening down both Bottom Base Hex Bolts until the table height is equal to the bottom blade.

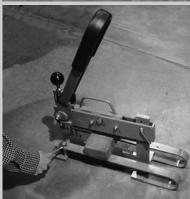

4. Next, adjust the Tension Knob so that the top blade is flush with brick. Push down the handle by using the black rubber covering on the handle to split the brick.

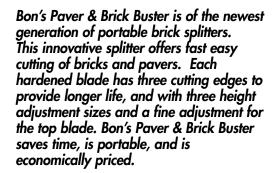

Bottom Blade Replacement – Do not attempt to pry the welded clamps. Use the following instructions to replace the bottom blade or to change the cutting side of the blade. Remove both Base Hex Bolts and the Base Springs. Then, remove the bottom Allen Bolt. After you remove the bottom Allen Bolt, pull the Hairpin Cotter Pin and remove the Back Height Adjustment Pin. The Top Throat Assembly is then able to be separated from the bottom base. The blade can then be easily removed. Reversing the above instructions, assemble the unit back together and you are ready to start using Bon's Paver & Brick Buster again.


Top Blade Replacement – Do not attempt to break the welded clamps. Remove the Hairpin Cotter Pin and remove the Back Height Adjustment Pin. Then, the Top Throat Assembly can be pushed forward. Then remove one of the Snap Rings and the Top Hinge Pin. The Top Blade Assembly can then be removed and the blade changed. Reversing the above instructions, assemble the unit back together and the unit is ready to use again.

Maintenance

Be sure to grease the Blade Hinge Pin and Tension Knob regularly. Keep the splitter clean.



ALWAYS WEAR SAFETY GLASSES WHEN OPERATING UNIT TO AVOID INJURY.

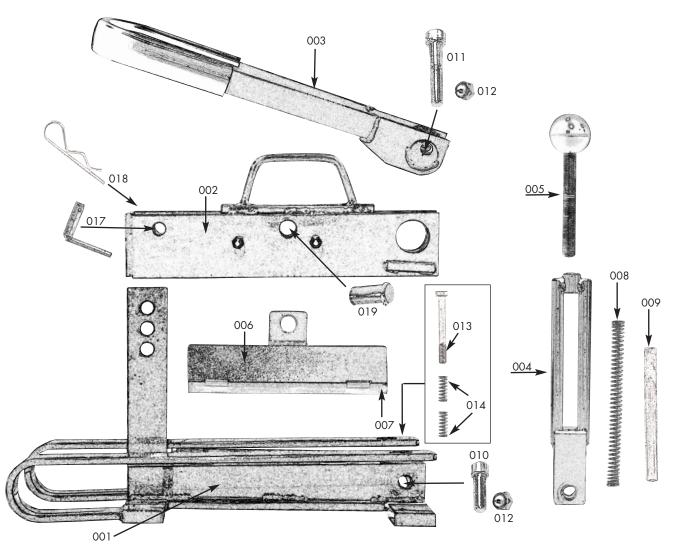

| Par | Parts List | | | | | | | | | |
|--------|------------|--------|--|-----------|--------|-------|--------|---|--------|--|
| Ref # | Key # | Part # | Detail | Qty/Unit | Ref # | Key # | Part # | Detail Q | ty/Uni | |
| 11-590 | 001 | 50-660 | Bottom Base | 1 | 11-590 | 012 | 50-670 | Lock Nut ⁵ / ₈ " | 2 | |
| 11-590 | 002 | 50-661 | Top Throat Assembly w/ | | 11-590 | 013 | 50-671 | Hex Bolt $\frac{5}{16}$ " x 3 $\frac{1}{8}$ " | 2 | |
| | | | Carry Handle | 1 | 11-590 | 014 | 50-672 | Base Spring $^{1}/_{2}$ " x 1 $^{3}/_{8}$ " | 4 | |
| 11-590 | 003 | 50-662 | Splitter Handle | 1 | 11-590 | 015 | 50-673 | Hex Bolt $\frac{5}{16}$ " x 1 $\frac{5}{8}$ " | 2 | |
| 11-590 | 004 | 50-663 | Front Height Adjustment | 1 | 11-590 | 016 | 50-674 | Lock Nut ⁵ / ₁₆ " | 2 | |
| 11-590 | 005 | 50-664 | Tension Knob | 1 | 11-590 | 017 | 50-675 | Back Height Adjustment Pin | 1 | |
| 11-590 | 006 | 50-665 | Top Blade Asbly w/ Blad | e Clamp 1 | 11-590 | 018 | 50-676 | Hairpin Cotter Pin | 1 | |
| 11-590 | 007 | 11-548 | Blade | 2 | 11-590 | 019 | 50-677 | Blade Hinge Pin | 1 | |
| 11-590 | 800 | 50-666 | | _ | 11-590 | 020 | 50-678 | Snap Rings for Blade Hinge F | Pin 2 | |
| | | | 5/8" x 8 1/4" | 1 | 11-590 | 021 | 50-679 | Felt Bushing for Handle | 2 | |
| 11-590 | 009 | 50-667 | Steel Rod $\frac{3}{8}$ " x 5 $\frac{5}{16}$ " | 1 | 11-590 | 022 | 50-680 | Felt Bushing for Front Height | Adi 2 | |
| 11-590 | 010 | 50-668 | Allen Bolt $\frac{5}{8}$ " x 3 $\frac{1}{2}$ " | 1 | , | | 22000 | . s zssg .or rrom riolgm | | |
| 11-590 | 011 | 50-669 | Allen Bolt $\frac{5}{8}$ " x 5" | 1 | | | | | | |

