



# QUICK START

QUICK START GUIDE



## 200962

2500W Dual Fuel Inverter Generator

### **⚠ WARNING:**

Read the ENTIRE operator's manual to become familiar with the features of the product before operating.

Failure to operate the product correctly can result in damage to the product, personal property and cause serious injury or even death.

**CHAMPION**  
GLOBAL POWER EQUIPMENT

# 1.


Open shipping carton.  Assembly > Unboxing



# 2.

Add oil.  Assembly > Add Engine Oil.

Recommended: 10W-30, up to 16.9 fl. oz. (500 ml) DO NOT overfill.

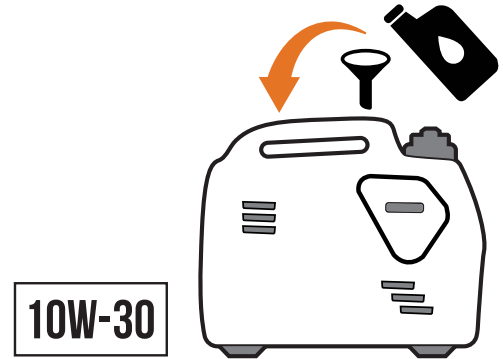

# 3.

Move the generator outdoors.

Move generator to an open, outdoor area. Point exhaust away. Never run generator in enclosed areas (e.g., not in house or garage).

Keep all objects at least 5 feet (1.5 m) from generator. Heat from the muffler and exhaust gas can ignite combustible materials.




# 4.


Add fuel.  Assembly > Add Fuel: Gasoline

DO NOT use E15 or E85.

\_\_\_\_\_ or \_\_\_\_\_

Connect propane cylinder.

 Assembly > Add Fuel: Propane (LPG)

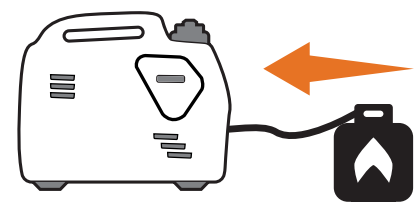


## 5.

DO NOT plug in any electrical devices.



**NEVER START OR STOP THE GENERATOR WITH ELECTRICAL DEVICES CONNECTED OR TURNED ON!**

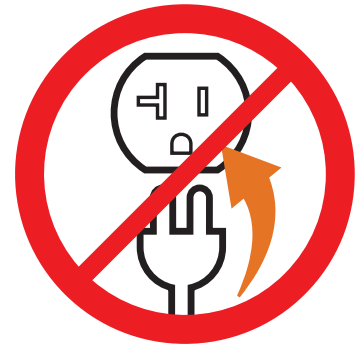


## 6.

### For Gasoline Operation

Turn the fuel cap **vent lever** to the “ON” (I) position.


### For Propane Operation

Open the propane tank valve.

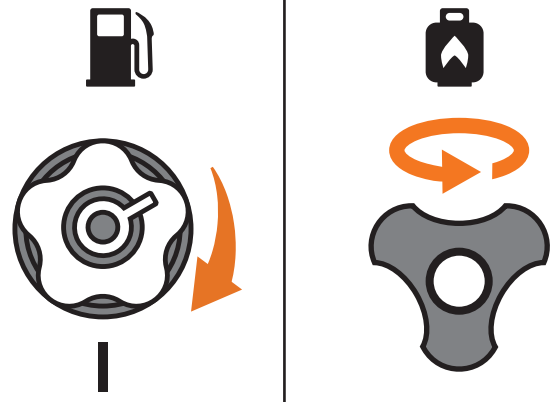

## 7.

Turn the **dial** to the “CHOKE” position.

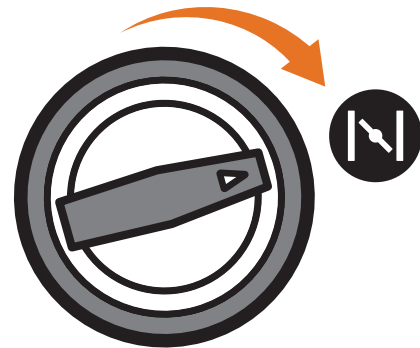

## 8.

### For Gasoline Operation

Pull the **recoil** to start the engine.

### For Propane Operation

Pull the **recoil 3-5 times** to prime the engine.




## 9.

### For Gasoline Operation

Turn the **dial** to the gasoline “RUN” position.

### For Propane Operation


Turn the **dial** to the propane “RUN” position.

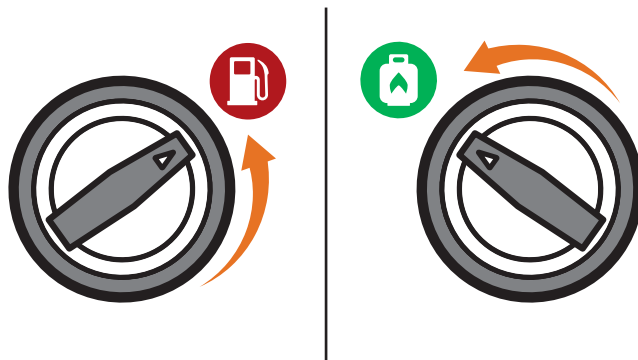

## 10.

### For Propane Operation

Pull the **recoil** to start the engine.

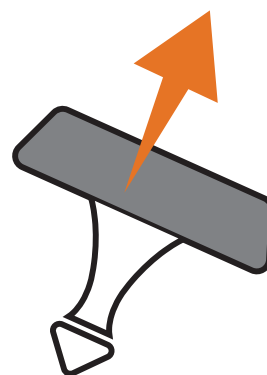

## 11.

**Plug in.** 📖 Operation > Connecting Electrical Loads.

