

How to Change Backing Plate:

- 1 Insert DA polisher wrench between the counterweight housing and backing plate.
- 2 Hold the spindle with the wrench and unscrew the backing plate by hand.
- 3 Line up the backing plate spindle thread and screw directly into the DA spindle.
- 4 Make sure the included washer stays in place around the backing plate threads.
- 5 Continue counter-holding the DA spindle with the wrench and screw backing plate in tightly by hand.
- 6 Test fitment by turning machine by hand and make necessary adjustments if machine binds up.

Time

2 - 5 Minutes

Expertise

Beginner

Prep

None

What Else You'll Need

- [Dual Action Polisher](#)

Looking for [dependable auto detailing & care?](#) Rely on [Chemical Guys](#) for quality and long-lasting products.