

How to Change Backing Plate:

- 1 Lock rotary polisher mechanism with the locking button located at the top of the unit.
- 2 Line up the rotary backing plate with the output shaft threads of the machine.
- 3 Gently screw the backing plate down in place until it locks against the bottom of the threads.
- 4 To remove, lock the polisher mechanism and unscrew the backing plate from the machine.

Time

2 - 5 Minutes

Expertise

Beginner

Prep

None

What Else You'll Need

- Rotary Action Polisher

Looking for dependable auto detailing & care? Rely on Chemical Guys for quality and long-lasting products.