



# Dynabug "Model T" Vacuum Sander

Models:

57928 — 4-1/4" x 4-1/2" Thick, Vac, Vinyl Pad

57929 — 4-1/4" x 4-1/2" Thick, Vac, Hook Pad


Air Motor and Machine Parts

## WARNING

Always operate, inspect and maintain this tool in accordance with the Safety Code for portable air tools (ANSI B186.1) and any other applicable safety codes and regulations. Please refer to Dynabrade's Warning/Safety Operating Instructions for more complete safety information.

### Index Key

No.	Part #	Description
1	57986	Throttle Lever
2	57913	Housing (Vinyl)
	57914	Housing (Hook)
3	57988	Inlet Hose Assembly
4	12156	O-Ring
5	96492	Button Head Screws (4)
6	57982	Clip Retainer
7	96493	Set Screw
8	57971	Vac Base Plate
9	57942	Vacuum Tube
10	57981	Turbine Wheel Assembly
11	97121	O-Ring
12	57983	Base Plate Door
13	57979	Motor Shaft
14	57972	Vacuum Plate Assembly
15	95405	Button Head Screw (4)
16	56286	Vinyl Pad - 57928
	56285	Hook Pad - 57929
17	95979	Pin
18	01464	Seal
19	01472	Tip Valve
20	01468	Spring
21	01494	Inlet Bushing
22	57093	Vac Adapter
23	57066	Muffler Body
24	56027	Muffler Insert
25	57028	Muffler Cap
26	95697	Snap Ring
27	01025	O-Ring
28	01477	Valve Stem
29	57064	Speed Regulator

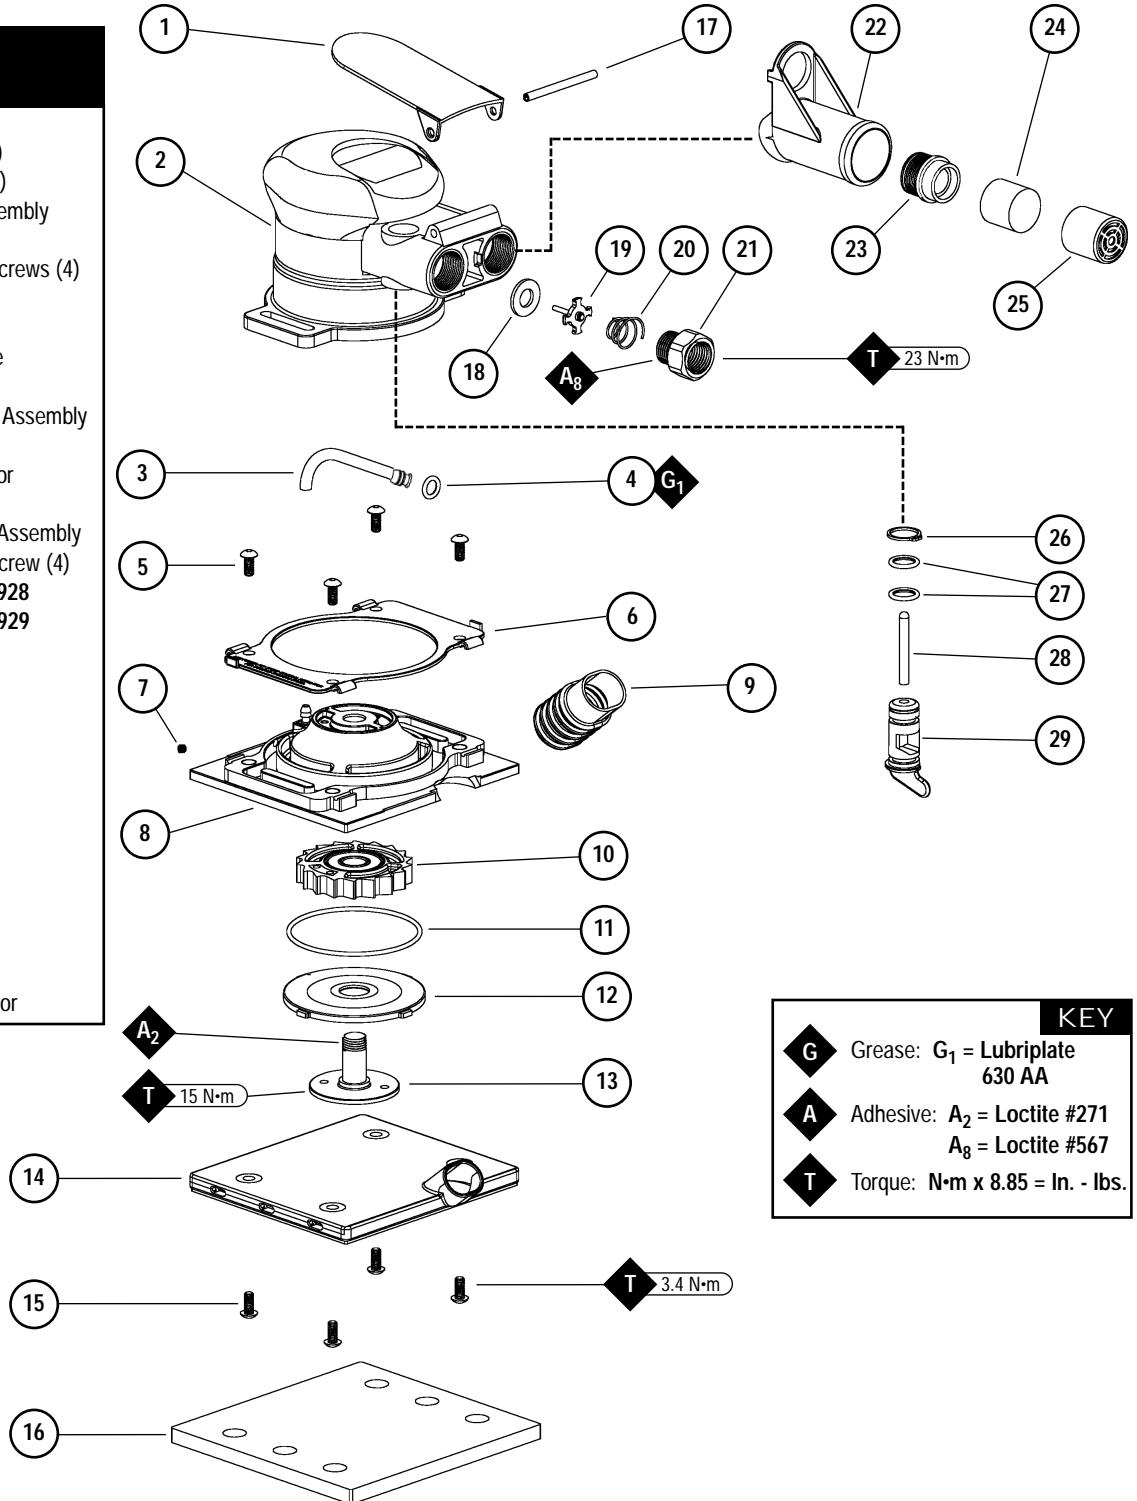

KEY	
<b>G</b>	Grease: G <sub>1</sub> = Lubriplate 630 AA
<b>A</b>	Adhesive: A <sub>2</sub> = Loctite #271 A <sub>8</sub> = Loctite #567
<b>T</b>	Torque: N·m x 8.85 = In. - lbs.

## *Important Operating, Maintenance and Safety Instructions*

**Carefully read all instructions before operating or servicing any Dynabrade® Abrasive Power Tool.**

**Warning:** Hand, wrist and arm injury may result from repetitive work motion and overexposure to vibration.

### Operating Instructions:

**Warning:** Eye, face, sound, respiratory, and body protection must be worn while operating power tools. Failure to do so may result in serious injury or death. Follow safety procedures posted in workplace.

1. With power source disconnected from tool, securely fasten abrasive/accessory on tool.
2. Install air fitting into inlet bushing of tool. **Important:** Secure inlet bushing of tool with a wrench before attempting to install the air fitting to avoid damaging valve body housing.
3. Connect power source to tool. Be careful not to depress throttle lever in the process.

### Maintenance Instructions:

1. Check tool speed regularly with a tachometer. If tool is operating at a higher speed than the RPM marked on the tool, the tool should be serviced to correct the cause before use.
2. Some silencers on air tools may clog with use. Clean and replace as required.
3. Use only genuine Dynabrade replacement parts. To reorder replacement parts, specify the **Model #**, **Serial #**, and **RPM** of your machine.
4. A Motor Tune-Up Kit (P/N **96169**) is available which includes assorted parts to help maintain motor in peak operating condition. Please refer to Dynabrade's Preventative Maintenance Schedule for a guide to expectant life of component parts.
5. Mineral spirits are recommended when cleaning the tool and parts. Do not clean tool or parts with any solvents or oils containing acids, esters, ketones, chlorinated hydrocarbons or nitro carbons.

### Safety Instructions:

Products offered by Dynabrade should not be converted or otherwise altered from original design without expressed written consent from Dynabrade, Inc.



- **Important:** User of tool is responsible for following accepted safety codes such as those published by the American National Standards Institute (ANSI).
- Always disconnect power supply before changing abrasive/accessory or making machine adjustments.
- Inspect abrasives/accessories for damage or defects prior to installation on tools.
- Please refer to Dynabrade's Warning/Safety Operating Instructions Tag (Reorder No. **95903**) for more complete safety information.

### Notice

All Dynabrade motors use the highest quality parts and metals available and are machined to exacting tolerances. The failure of quality pneumatic motors can most often be traced to an unclean air supply or the lack of lubrication. Air pressure easily forces dirt or water contained in the air supply into motor bearings causing early failure. It often scores the cylinder walls and the rotor blades resulting in limited efficiency and power. Our warranty obligation is contingent upon proper use of our tools and cannot apply to equipment which has been subjected to misuse such as unclean air, wet air or a lack of lubrication during the use of this tool.

Model Number	Motor HP (W)	Motor RPM	Sound Level	Maximum Air Flow CFM/SCFM (LPM)	Air Pressure PSIG (Bars)	Weight Pound (kg)	Length Inch (mm)	Height Inch (mm)
57928	N/A	20,000	72 dB(A)	1/9 (255)	90 (6.2)	1 (.5)	5 (127)	3 (76)
57929	N/A	20,000	83 dB(A)	1/9 (255)	90 (6.2)	1 (.5)	5 (127)	3 (76)

Additional Specifications: Air Inlet Thread 1/4" NPT • Hose Size 1/4" (6 mm)

# Motor Assembly/Disassembly Instructions – Vacuum “Model T” Dynabug

**Important: Manufacturers warranty is void if tool is disassembled before warranty expires.**

A complete Repair Kit, part number **96169**, is available which includes special tools for correct disassembly/assembly of tool.

## To Disassemble

1. Disconnect tool from power source.
2. Remove sanding pad (if necessary).
3. Unscrew **96492** Button Head Screws (8).
4. Remove **57942** Vacuum Tube.
5. Separate and remove **57972** Vacuum Plate Assembly from **57971** Vacuum Base Plate.
6. Lift **57982** Clip Retainer up about 1/2", to expose **57971** Vacuum Base Plate.
7. Remove **57988** Hose from **57971** Vacuum Base Plate.
8. Disassemble housing assembly from base plate assembly, by pulling apart.
9. Invert assembly and insert spanner wrench to **57979** Motor Shaft, and remove (left-hand threads).
10. Remove **57981** Turbine Wheel Assembly. **Note:** Turbine orientation of wheel assembly on motor shaft.

## To Assemble:

**Important:** Be certain parts are clean and in good repair before assembling.

1. Replace **57981** Turbine Wheel Assembly on motor shaft using the same orientation as when it was disassembled.
2. Slide **57983** Base Plate Door onto **57979** Motor Shaft.
3. Apply a slight amount of #271 Loctite® (or equivalent) to **57979** Motor Shaft threads, torque 15 N•m/133 in. - lbs.
4. Install subassembly into base plate assembly.
5. Apply a slight amount of grease to the flared end of **57988** Inlet Hose and assemble onto housing. Install **12156** O-Ring. Slide other end of tube over barb fitting in base plate (use adhesive if necessary).
6. Install housing assembly onto base plate assembly.
7. Slide **57982** Clip Retainer down onto **57971** Vacuum Base Plate and install (4) **96492** Button Head Screws, torque 3.4 N•m/30 in. - lbs.
8. Re-attach **57972** Vacuum Plate Assembly to **57971** Vacuum Base Plate. Secure with (4) **96492** Button Head Screws.
9. Re-attach **57942** Vacuum Tube to outlet hole of **57972** Vacuum Plate Assembly.

**Tool Assembly Complete. Please allow 30 minutes for adhesives to cure before operating tool.**

## Valve and Speed Regulator Assemblies:

1. Secure housing in vice using **57092** Collar or padded jaws.
2. Remove **01494** Inlet Bushing, **01468** Spring, **01472** Tip Valve and **01464** Seal from housing.
3. Remove **95697** Snap Ring. Pull the speed regulator and valve stem out of the housing. Remove the **01025** O-Rings (2).
4. Place new **01025** O-Rings (2) on the speed regulator and place in housing with valve stem. Install new **95697** Snap Ring.
5. Place new **01464** Seal in housing. Using tweezers or needle nose pliers, place the tip valve into housing so that the pin goes through the valve stem hole. Place new **01468** Spring into housing so small end is towards tip valve.
6. Place 1 drop of #567 Loctite® (or equivalent) on the threads of the inlet bushing and tighten into housing to 23 N•m/200 in. - lbs.

**Note:** This tool is an oil-free Dynabrade Tool. Therefore no air lube should be placed into the tool. Operate the machine for approximately 30 seconds before application to workpiece to determine if machine is working properly and safely.

Loctite® is a registered trademark of the Loctite Corp.

# Optional Accessories

## Coated Abrasive Sheets & Discs For Dynabug "Model T" Finishing Sanders

### 5" (127mm) Diameter PSA & Hook-Face Discs

#### Aluminum Oxide Discs / Reattachable

Abrasive Grit			125 Discs = Unit.
36	40	60	
93311	93312	93313	

#### Premium Aluminum Oxide Discs / PSA Mounted

Abrasive Grit					
80	100	120	150	180	220
93101	93102	93103	93104	93105	93106

120 Grit & Coarser – 125/Roll; 10 Rolls = Unit. 150 Grit & Finer – 175/Roll; 6 Rolls = Unit. Complete rolls only. **Note:** Other grits available upon request.

#### Silicon Carbide Discs / PSA Mounted

Abrasive Grit					
80	100	120	150	180	220
93051	93052	93053	93054	93055	93056

120 Grit & Coarser – 125/Roll; 8 Rolls = Unit. 150 Grit & Finer – 250/Roll; 4 Rolls = Unit. Complete rolls only. **Note:** Other grits available upon request.

## Reattachable & Non-Adhesive Abrasive Sheets

#### Coated Aluminum Oxide Sheet Abrasives

Sheet Size	Description	Abrasive Grit			
		80	120	180	320
4-1/2" (114mm) x 4-1/4" (108mm)	PSA w/Liner	93860	93861	93862	93863
4-1/2" (114mm) x 4-1/4" (108mm)	Hook-Face	93870	93871	93872	93873
Unit = 100 Sheets					




#### 96169 Motor Tune-Up Kit

- Includes assorted parts to help maintain and repair motor.



#### 98846 Hook-Face Backing

- A replacement Hook-Face Backing for 57972 Square Base Plate.

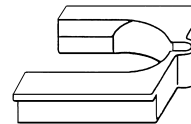

#### 57092 Repair Collar

- Specially designed collar for use in vise to prevent damage to motor housing during disassembly/assembly.



#### 50971 Lock Ring Tool

- Lock Ring Tool has a 3/8 in. square socket for use with 3/8 in. drive; breaker bar, ratchet head, or torque wrenches.

