


80 Series V Multimeter Quick Reference Guide

⚠ See Users Manual for "Safety Information" and complete operating information.


Fuse Test

🎵 + LEAD = 🔌 OK

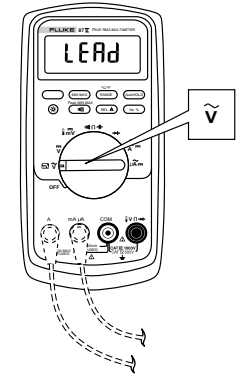

Test Lead Alert


🎵 + LEAD = ⓪

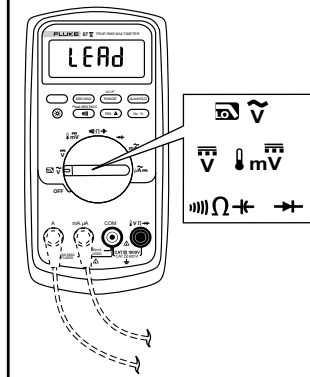


Voltage \tilde{V} \bar{V} mV

\tilde{V} + 🔌 = \tilde{V} Low Pass (87 Only)


\tilde{V} \bar{V} mV

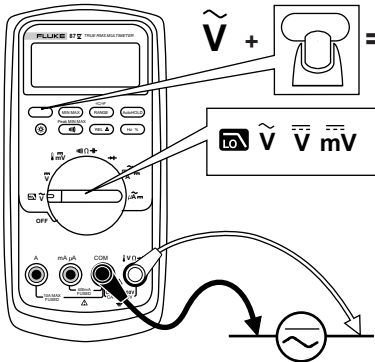


Temperature (87 Only) ↓

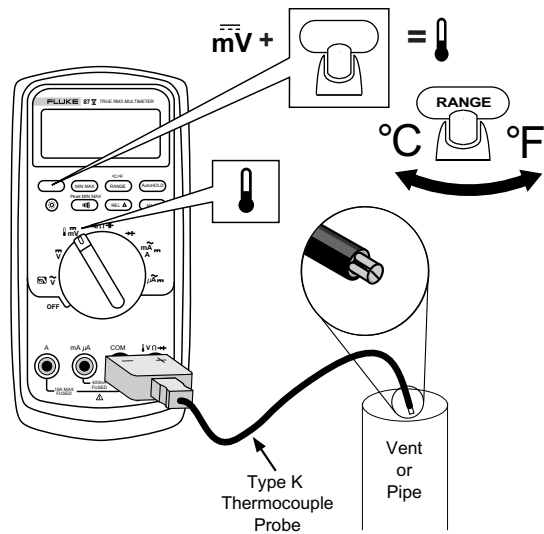


Resistance Ω

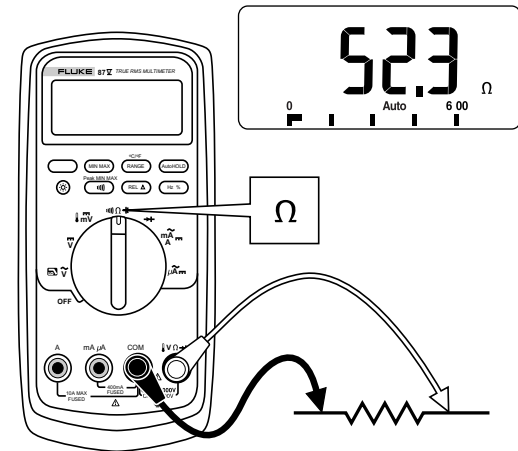


Conductance nS

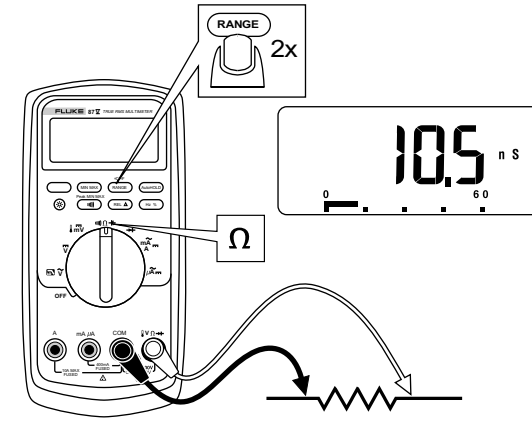


Continuity 🎵

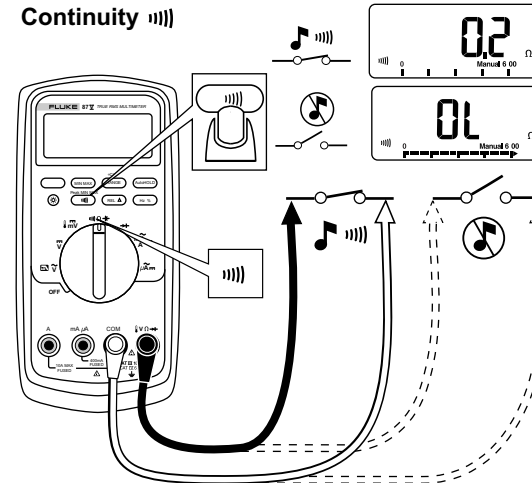





Capacitance \bar{C}

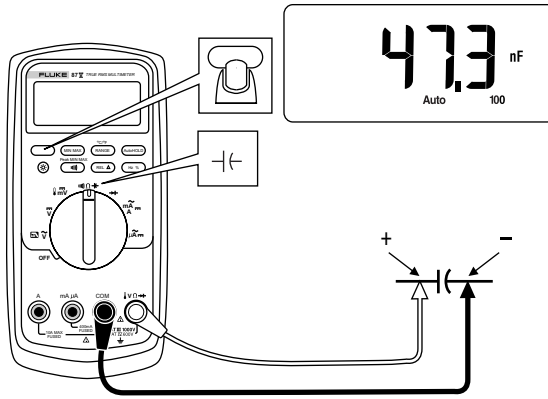


Current \tilde{A} , \bar{A} , $\mu\tilde{A}$, mA, \bar{A} , $\mu\bar{A}$

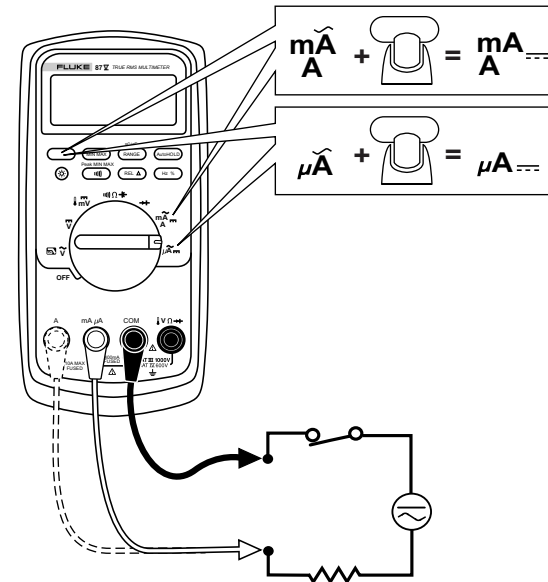


Diode Test →

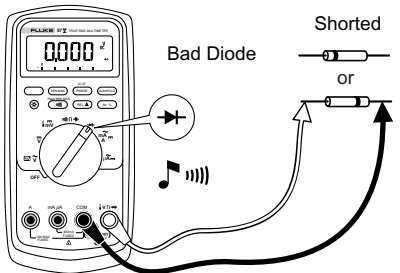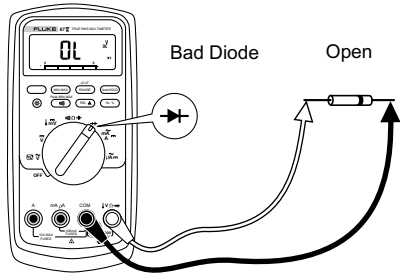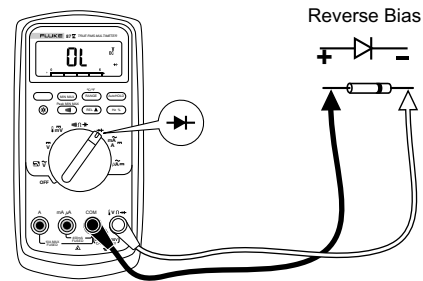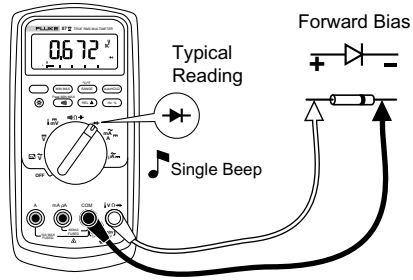


Frequency Hz

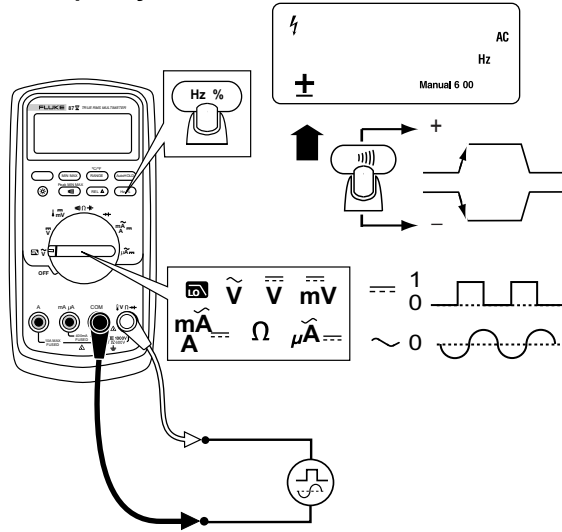


Duty Cycle %

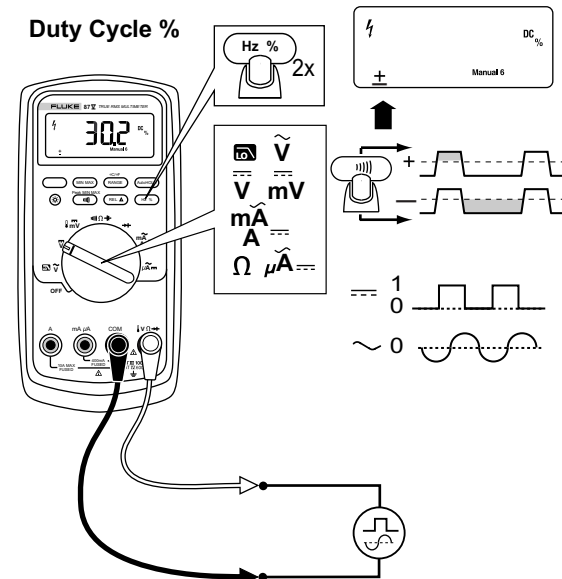


Min, Max, Average MIN MAX

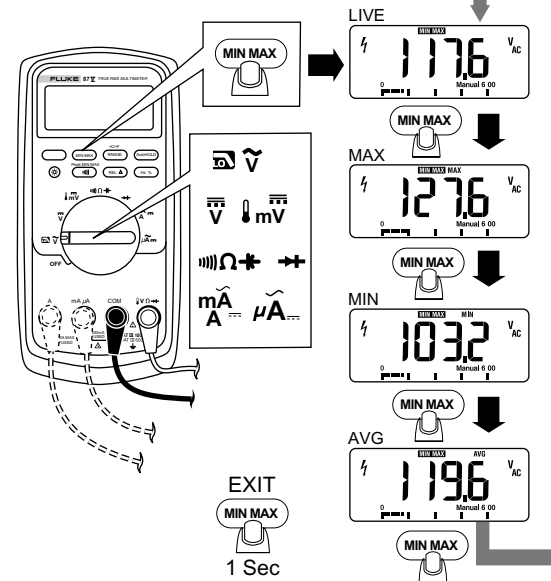


AutoHOLD HOLD

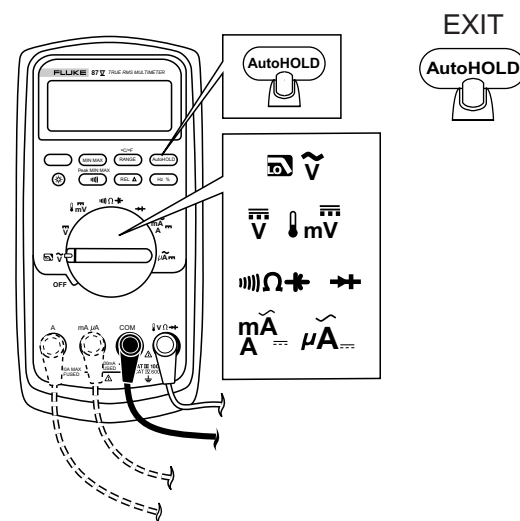

Relative Δ

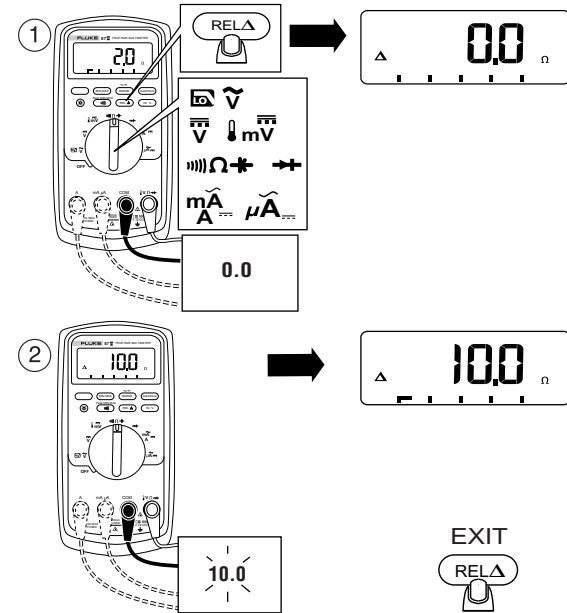

Hi Res Mode (87 Only)

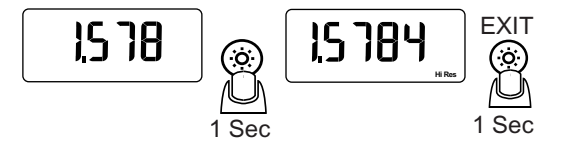

ToolPak

