

# PROFINISHER 500




1528



1529



1515

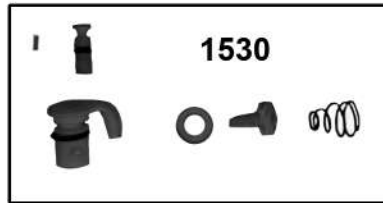

1530



1552



1541B



1320



1810-1NS



1321-CW



1524



1521



1523S



1810



1545



1820-P



1519-1



1320-1



800



1712-2NS



1342-1



1712-1NS



1542



1544



760



1520

## **Model 500 Replacement Parts**

<b>Part No</b>	<b>Description</b>
760	ProFinisher™ Low Profile 6" PSA Pad
761	ProFinisher™ Low Profile 6" HOOK Pad
800	Pad Wrench
1320	Hub Lock Ring
1320-1	Spindle Lock Ring
1321-CW	Bearing Plate Washer Only
1342-1	Bearing Spacer
1515	Housing
1519-1	Crank & Drive Assembly (500 Series)
1520	Lock Ring
1521	Bearing Cup
1523S	Motor Vane Set (5)
1524	Rotor
1528	Cap
1529	Trigger
1530	Air Control Assembly
1541B	Blue Air Inlet
1542	Bearing Shield
1544	Spindle
1545	Shroud
1552	Muffler
1712-1NS	Lower Spindle Bearing
1712-2NS	Upper Spindle Bearing
1810	Bearing
1810-1NS	Motor Bearing
1820P	Woodruff Key