

Owner's Instructions



Part No.: L1455


Air Powered Grease Gun

CAUTION:

Read all instructions and warnings before operating this product; otherwise, warranty may be voided.

SAVE THESE INSTRUCTIONS!

READ ALL INSTRUCTIONS!

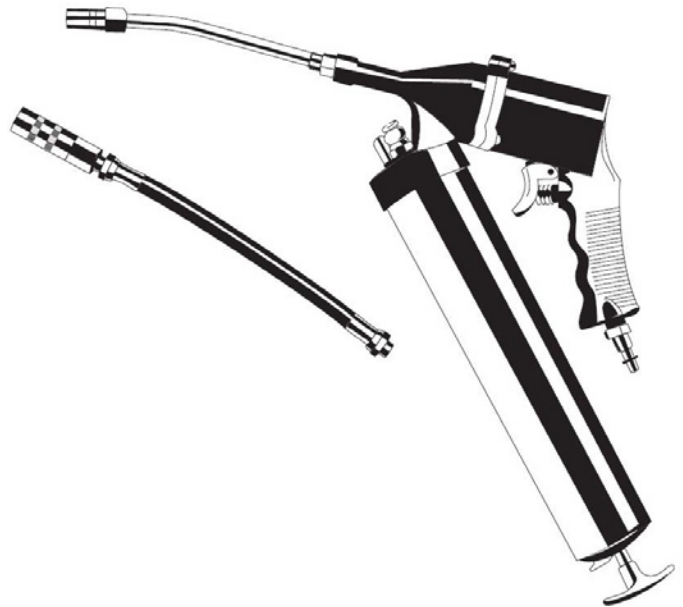

- **Operation**
- **Trouble Shooting**
- **Repair Kit**

OPERATION (See Figure 1-5)

1. Unscrew head assembly from gun barrel.
2. Pull plunger rod handle out until it stops.
- 3a. Remove plastic bottom cap from grease cartridge and drop cartridge (open end down) into gun barrel
- 3b. Push cartridge down until lip seats tightly on top of gun barrel. Then remove upper cap from cartridge.
4. Screw head assembly back on gun barrel.
5. Depress tab (A) then push plunger rod (B) back into barrel.

How to Bulk Load

Suction Loading Procedure (See Figure 6)

- Unscrew head assembly from gun barrel. Insert open end of gun barrel two inches below surface of grease.
- Slowly pull back plunger rod handle (drawing in grease). Screw head assembly back on gun barrel.
- Depress plunger rod release tab, then push plunger rod back into barrel.
- Depress bleeder valve button to release air.

Manual Grease Filler Pump Loading Procedure

- Wipe grease filler nipple clean.
- Insert gun head loader fitting into valve of loader pump
- Pump grease until gun is filled. When barrel is full the rod can be pulled out without spring tension.

Do not load gun with air operated grease pump as damage to unit will occur and warranty will be voided.

TROUBLESHOOTING

When reloading this grease gun it helps to twist the cartridge the last one to two inches into the barrel; this helps center the follower rod. When the follower rod is released into a new grease cartridge, either the rubber-lipped follower or the edge of the spring may catch on the end of the grease cartridge tube - especially cardboard tubes. It can be freed by:

1. Resetting the cartridge end by pulling out the follower rod handle (with a slight wiggle and twist motion) and then releasing it.
2. Rap with the wood handle end of a hammer to encourage the follower and spring to drop into the cartridge end.

Repair Part	Description
L2461	Grease gun filler nipple, 1/8in. MNPT
RP004039	Short spring
RP004055	Barrel with plunger rod assembly
RP004056	Handle housing set
RP004057	Seal kit
RP004058	Extension tube with coupler and adaptor
RP004059	Grease gun head with vent and filter
RP009135	Whip Hose and Coupler

