MODEL 3866



PRESETABLE METERING CONTROL VALVE

Series "A"



the flow.

above the "0" zero, which releases the lock bar automatically stopping





If meter is mishandled, the lock bar (item 16) can become bent and screw may fail to contact lock pawl (Item 17). If this happens, the meter will not shut off at preset amount, frequent inspection is recommended.



DO NOT TURN POINTER IN A COLCKWISE DIRECTION AS THIS WILL DAMAGE METER. The pointer can only be returned to the zero stop in a counterclockwise direction after delivery.

DIAL TOTALS 16 QUARTS/12 LITERS GRADUATION 1/2 QUART/1 LITER

SERVICE PARTS

Item	Part No.	Qty.	Description	Item	Part No.	Qty.	Description
1	242911	1	Shroud Protector	20	236400	1	Pin Lock Pawl
2	68410-12	1	Shroud	21	68410-2	2	Screw
3	66871 -5	4	Shroud Screw	22			
4	242913	1	Knob Assembly	23	68410-4	2	Quad Ring
5	70457-1	1	Dial Assembly	24	69304-2	1	Cam
6	66871-3	2	Clutch Spring	25	69304-4	1	Trigger Assembly
7	66871-4	2	Clutch Roller	26	69304-24	1	Hand Guard
8	70457-3	1	Compound Gear Assembly	27		1	** Valve Sleeve Assembly
9	70457-4	1	Preset Knob Drive Cam	28		1	** Valve Seat Assembly
10	66871-54	1	Worm Assembly	29	69304-3	1	Spring
11	50541	1	Set Screw	30	68410-27	1	Screen
12	69304-23	1	Washer	31	243176	1	O-Ring
13	70457-7	4	Screw	32	243175	1	Adapter
14	69795-3	1	Register Assembly	33	66871-111	1	Upper Driving Pawl Gear Assembly
15	69304-14	1	E-Ring	34	68410-15	1	Chamber and Piston Assembly
16	69304-5	1	Lockbar	35	66871-12	1	O-Ring
17	69304-13	1	Lock Pawl	36	68410-14	1	Сар
18	69304-12	1	Lock Pawl Spring	37	271700	1	Valve Assembly
19	237388	1	Packing Kit				

* May be purchased separately

** See valve assembly item 37