

SERVICE PARTS		
PARTS	QTY	DESCRIPTION
740	1	Control valve
815	1	Air coupler
11659	1	Air nipple
45761	1	Control valve hanger
46007	1	Drum cover kit
50060	4	Hex head cap screw
50113	2	Hex head cap screw
50754	2	Hex nut
75084	1	High pressure hose
81387	1	Universal swivel
82399	1	Swivel
82050	1	Pump
274327	1	Follower

REFER TO SEPARATE INSTRUCTIONS FOR:		
740	Control valve	Section F3, Page 2 Series
815	Coupler	Section G9 Page 2 Series
81387	Universal swivel	Section F1 Page 2 Series
82399	Swivel	Section F1 Page 2 Series
84192	Caster & dolly	Section K5 Page 8 Series
82050	Pump	Section A5, Page 7 Series

Model 6917 Grease Pump 50:1



ASSEMBLY

Assemble control valve hanger (45761) to drum cover as shown.

Assemble pump to drum cover top with four screws as shown.

If pumping a heavy grease that requires a follower, place an optional follower into the grease in the open 120 pound drum.


Place drum cover assembly onto drum. Screw in the three thumb screws to secure drum cover to drum.

Place pump through drum cover and through follower if used.

Assemble delivery hose, swivel and control valve as shown. Connections must be tight and leak proof.

Screw air nipple into air motor and attach air coupler to air delivery hose.

Unit is operational when air delivery hose is connected to pump.

 **WARNING**

READ ALL SAFETY INSTRUCTIONS INCLUDED IN 740 CONTROL VALVE AND 82050 PUMP OWNERS MANUALS. THIS PUMP CREATES PRESSURES UP TO 7,500 P.S.I.