




# 1/2" Air Ratchet Wrench

## Item No : NE-488



● The consumable parts ▲ The replacement parts ★ The non-replacement parts

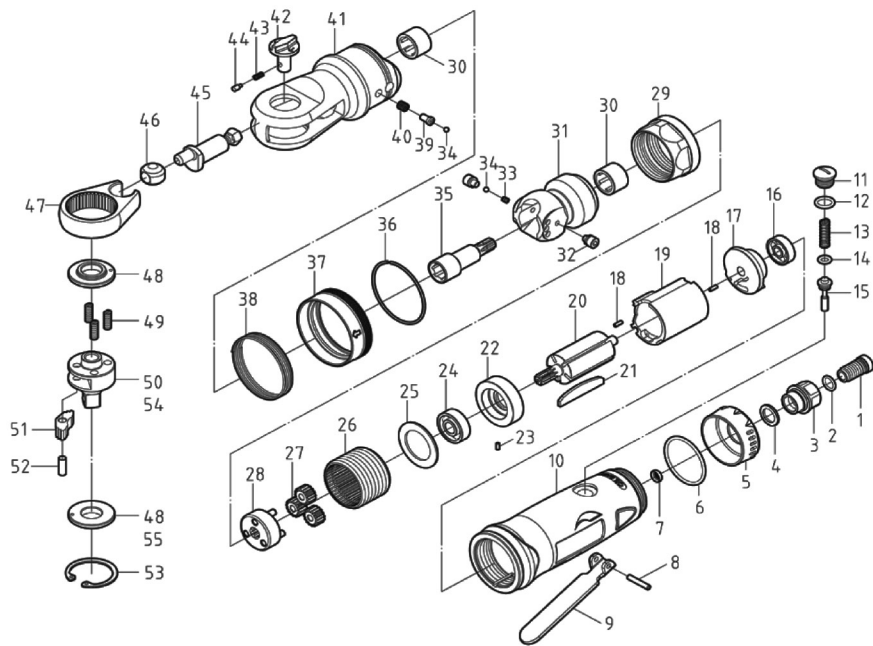

# Part List NE-488

	NO.	PART NO.	DESCRIPTION	Q'TY
★	1	NE-488P01	Screw	1
●	2	NE-488P02	O-Ring	1
★	3	NE-488P03	Air Inlet Bushing	1
★	4	NE-488P04	Washer	1
★	5	NE-488P05	Exhaust Deflector	1
●	6	NE-488P06	O-Ring	1
★	7	NE-488P07	Air Strainer	1
★	8	NE-488P08	Spring Pin	1
★	9	NE-488P09	Throttle Lever	1
★	10	NE-488P10	Motor Housing	1
★	11	NE-488P11	Throttle Valve Plug	1
●	12	NE-488P12	O-Ring	1
★	13	NE-488P13	Spring Pin	1
●	14	NE-488P14	O-Ring	1
★	15	NE-488P15	Valve Stem	1
▲	16	NE-488P16	Ball Bearing	1
▲	17	NE-488P17	Rear End Plate	1
●	18	NE-488T18	Spring Pin ( 2pcs)	1 SET
★	19	NE-488P19	Cylinder	1
★	20	NE-488P20	Rotor	1
●	21	NE-488T21	Rotor Blade ( 5pcs)	1 SET
▲	22	NE-488P22	Front End Plate	1
●	23	NE-488P23	Position Pin	1
▲	24	NE-488P24	Ball Bearing	1
★	25	NE-488P25	Washer	1
★	26	NE-488P26	Internal Gear	1
●	27	NE-488T27	Planet Gear ( 3pcs)	1 SET

	NO.	PART NO.	DESCRIPTION	Q'TY
★	28	NE-488P28	Idle Spindle	1
★	29	NE-488P29	Clamp Nut	1
▲	30	NE-488T30	Needle Bearing ( 2pcs)	1 SET
★	31	NE-488P31	Seat Ratchet Housing	1
★	32	NE-488T32	Screw ( 2pcs)	1 SET
●	33	NE-488P33	Spring	1
●	34	NE-488T34	Steel Ball ( 2pcs)	1 SET
▲	35	NE-488P35	Anvil	1
▲	36	NE-488P36	Snap Ring	1
★	37	NE-488P37	Bit Sleeve	1
●	38	NE-488P38	Spring	1
●	39	NE-488P39	Pin	1
●	40	NE-488P40	Spring	1
★	41	NE-488P41	Ratchet Housing	1
★	42	NE-488P42	Reverse Button	1
●	43	NE-488P43	Spring	1
●	44	NE-488P44	Lock Pin	1
▲	45	NE-488P45	Crank Shaft	1
▲	46	NE-488P46	Drive Bushing	1
▲	47	NE-488P47	Ratchet Yoke	1
★	48	NE-488P48	Thrust Washer(3/8")	1
●	49	NE-488T49	Spring ( 3pcs)	1 SET
▲	51	NE-488P51	Ratchet Pawl	1
●	52	NE-488P52	Dowel Pin	1
★	53	NE-488P53	Retaining Ring	1
★	54	NE-488P54	Ratchet Anvil(1/2")	1
★	55	NE-488P55	Thrust Washer(1/2")	1

Learn more about power tools we have.