




Air Angle Grinder

Item No : QB-144 QB-164



● The consumable parts ▲ The replacement parts ★ The non-replacement parts

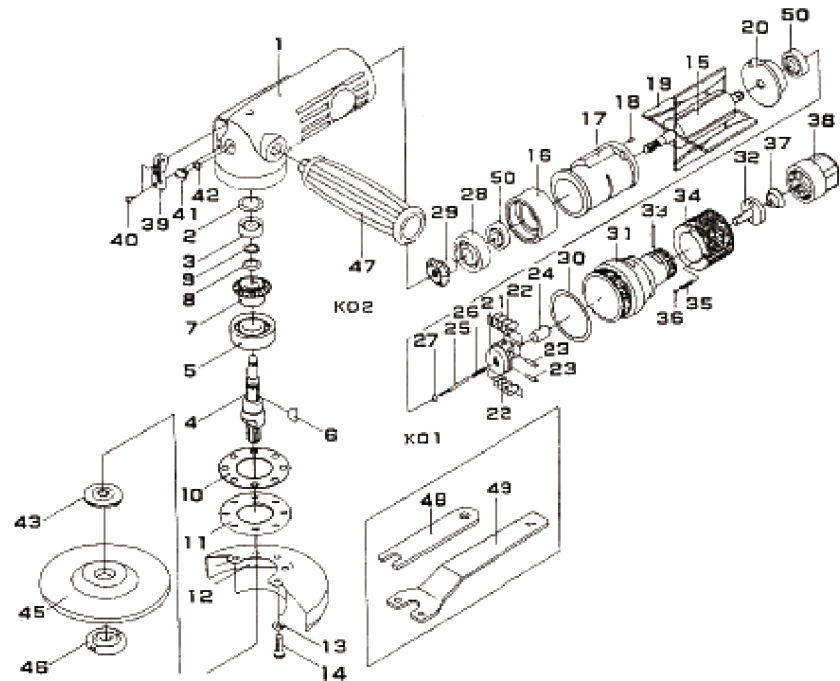

Part List QB-144 QB-164

NO.	PART NO.	DESCRIPTION	Q'TY
★	1	QB-144P01 Motor Housing	1
▲	2	QB-144P02 Seal Plate	1
▲	3	QB-144P03 Ball Bearing	1
★	4	QB-144P04 Arbor (M10xP1.5)	1
		QB-164P04 Arbor (3/8"-24)	1
●	5	QB-144P05 Ball Bearing	1
▲	6	QB-144P06 Woodruff Key	1
●	7	QB-144P07 Bevel Gear	1
★	8	QB-144P08 Wave Washer	1
▲	9	QB-144P09 External Stop Ring	1
▲	10	QB-144P10 Gasket	1
★	11	QB-144P11 Retainer	1
★	12	QB-144P12 4" Center Wheel Guard	1
★	13	QB-144T13 Spring Washer (5PCS)	1 SET
★	14	QB-144T14 Hex Socket Head Cap Bolt (5PCS)	1 SET
★	15	QB-144P15 Rotor	1
▲	16	QB-144P16 Front End Plate	1
★	17	QB-144P17 Cylinder	1
★	18	QB-144P18 Spring Pin	1
●	19	QB-144T19 Rotor Blade (4PCS)	1 SET
▲	20	QB-144P20 Rear End Plate	1
★	21	QB-144P21 Governor	1
★	22	QB-144T22 Pendulum (8PCS)	1 SET
★	23	QB-144T23 Spring Pin (2PCS)	1 SET
★	24	QB-144P24 Plunger	1
★	25	QB-144P25 Adjust Screw	1

NO.	PART NO.	DESCRIPTION	Q'TY
★	26	QB-144P26 Spring	1
★	27	QB-144P27 Adjust Nut	1
●	28	QB-144P28 Ball Bearing	1
●	29	QB-144P29 Bevel Pinion	1
●	30	QB-144P30 O-Ring	1
★	31	QB-144P31 Governor Housing	1
★	32	QB-144P32 Throttle Valve	1
★	33	QB-144P33 Needle Roller	1
★	34	QB-144P34 Valve Ring	1
★	35	QB-144P35 Valve Spring	1
★	36	QB-144P36 Steel Ball	1
★	37	QB-144P37 Coil Spring	1
★	38	QB-144P38 Valve Joint	1
★	39	QB-144P39 Exhaust Deflector	1
★	40	QB-144T40 Tapping Screw (2PCS)	1 SET
★	41	QB-144P41 Plug	1
●	42	QB-144P42 O-ring	1
★	43	QB-144P43 Flange (M10xP1.5)	1
		QB-164P43 Flange (3/8"-24)	1
●	45	QB-144P45 4" Grinding Wheel	1
★	46	QB-144P46 Flange Nut (M10xP1.5)	1
		QB-164P46 Flange Nut (3/8"-24)	1
★	47	QB-144P47 Handle	1
★	48	QB-144P48 Wrench (A)	1
★	49	QB-144P49 Wrench (B)	1
●	50	QB-144T50 Ball Bearing (2PCS)	1 SET
●		QB-144T01 Bevel Gear Assembly (07.29)	1 SET

Learn more about air tools and compressors we have.