


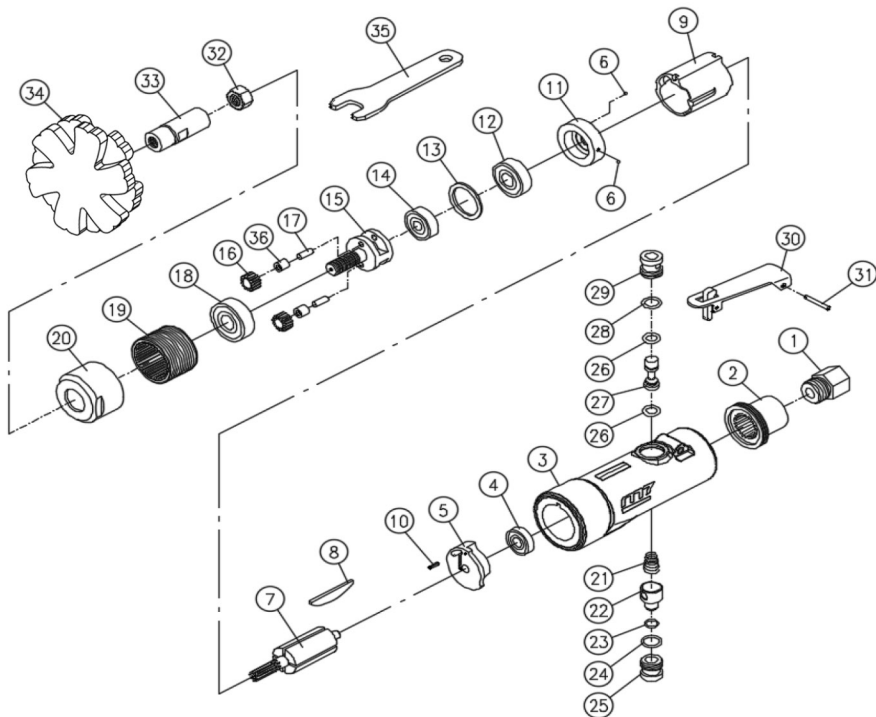

AIR Eraser

Item No : QB-812T

● The consumable parts ▲ The replacement parts ★ The non-replacement parts



Part List

AIR Eraser

QB-812T



	NO.	PART NO.	DESCRIPTION	Q'TY
★	1	QB-812TP01	Air Inlet	1
★	2	QB-812TP02	Exhaust Delfector	1
★	3	QB-812TT03	Motor Housing Ass'y(3,29)	1 SET
▲	4	QB-812TP04	Ball Bearing	1
▲	5	QB-812TT05	End Plate Ass'y(5,10)	1 SET
▲	6	----	Steel Ball (2pcs)	1 SET
▲	7	QB-812TP07	Rotor	1
●	8	QB-812TT08	Rotor Blade (5pcs)	1 SET
▲	9	QB-812TP09	Cylinder	1
▲	10	----	Spring Pin	1
▲	11	QB-812TT11	Front Plate Ass'y(6,11)	1 SET
▲	12	QB-812TP12	Ball Bearing	1
▲	13	QB-812TP13	Washer	1
●	14	QB-812TP14	Ball Bearing	1
▲	15	QB-812TP15	Gear Cage	1
●	16	QB-812TT16	Plante Gear (2pcs)	1 SET
●	17	QB-812TT17	Pin (2pcs)	1 SET
▲	18	QB-812TP18	Ball Bearing	1
★	19	QB-812TP19	Internal Gear	1
★	20	QB-812TP20	Clamp Nut	1
★	21	QB-812TP21	Spring	1
★	22	QB-812TP22	Air Regulator	1
▲	23	QB-812TP23	"O" Ring	1
▲	24	QB-812TP24	"O" Ring	1
★	25	QB-812TP25	Valve Screw	1
▲	26	QB-812TT26	"O" Ring (2pcs)	1 SET
★	27	QB-812TP27	Throttle Valve	1
▲	28	QB-812TT28	"O" Ring (2pcs)	1 SET
★	29	----	Valve Bushing	1
★	30	QB-812TP30	Throttle Lever	1
★	31	QB-812TP31	Pin	1
★	32	QB-812TP32	Nut	1
★	33	QB-812TP33	Spindle	1
●	34	QB-812TP34	Pad	1
★	35	QB-812TP35	Spanner	1
●	36	QB-812TT36	Bushing (2pcs)	1 SET

Discover other air cutting tools on our website.