




## Air Drill Item No : QE-332 QE-334

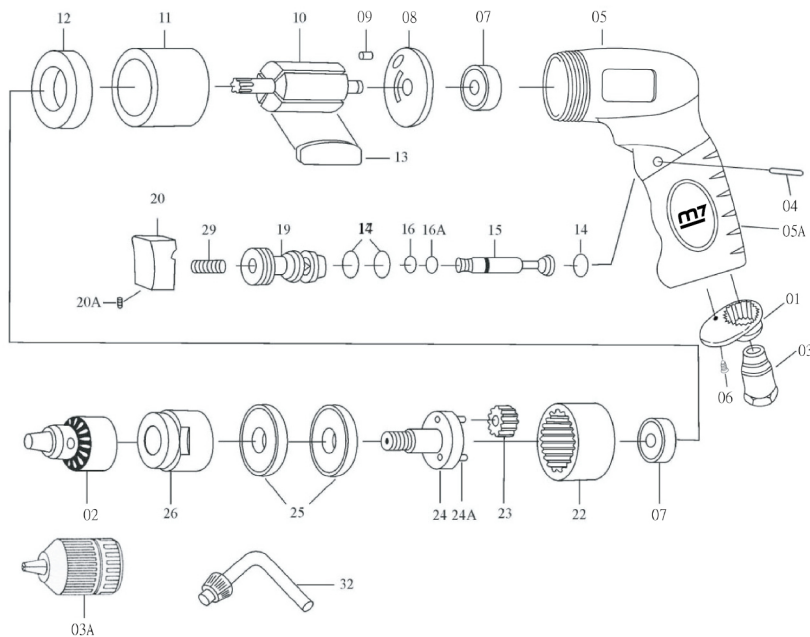

● The consumable parts ▲ The replacement parts ★ The non-replacement parts



## Part List QE-332 QE-334

	NO.	INDEX NO.	DESCRIPTION	Q'TY
★	01	QE-334P01	Exhaust Muffler	1
●	02	QE-334P02	Drill Chuck (3/8") For QE-334	1
★	03	QE-334P03	Air Inlet Bushing	1
●	03A	QE-3A	Keyless Chuck (3/8") For QE-332	1
★	04	QE-334P04	Trigger Pin (∅3x27.8)	1
★	05	QE-334P05	Motor Housing	1
★	05A	QE-334P05A	Grip	1
★	06	QE-334T06	Screw (M3x8) (2 pcs)	1 set
▲	07	QE-334T07	Ball Bearing (626zz) (2 pcs)	1 set
▲	08	QE-334P08	Rear End Plate	1
★	09	QE-334P09	Spring Pin (∅2.5x6)	1
★	10	QE-334P10	Rotor	1
★	11	QE-334P11	Cylinder	1
▲	12	QE-334P12	Front End Plate	1
●	13	QE-334T13	Rotor Blade (4 pcs)	1 set
▲	14	QE-334T14	O-Ring (P14) (3 pcs)	1 set
★	15	QE-334P15	Valve Stem	1
▲	16	QE-334P16	O-Ring (3.5x1.5)	1
▲	16A	QE-334P16A	O-Ring (3.9x2.25x2)	1
★	19	QE-334P19	Throttle Bushing	1
★	20	QE-334P20	Trigger	1
★	20A	QE-334P20A	Set Screw (M4x6)	1
●	22	QE-334P22	Internal Gear	1
●	23	QE-334T23	Planet Gear (3 pcs)	1 set
●	24	QE-334P24	Working Spindle	1
●	24A	QE-334T24A	Planet Pin (∅4x13.8) (3 pcs)	1 set
▲	25	QE-334T25	Ball Bearing (620122zz) (2 pcs)	1 set
★	26	QE-334P26	Gear Housing	1
★	29	QE-334P29	Spring	1
★	32	QE-334P32	Chuck Key	1