



- | | | | | | |
|--------------------|-------------------|------------------|---------------------|-----------------|---------------------|
| 1 Tail cap | 3 Lamp Protector | 6 Barrel | 9 Lamp | 12 O-ring, head | 15 O-ring, face cap |
| 2 O-ring, tail cap | 4 Spare lamp | 7 Switch seal | 10 Retaining collar | 13 Reflector | 16 Face cap |
| | 5 Battery spring* | 8 O-ring, barrel | 11 Head | 14 Clear lens | |

*item 5 inserts into item 1

Thank you for purchasing a Mag-Lite® flashlight.

flashlight". Please review all the information contained in this pamphlet.

OPERATION: Large end of battery spring must be snapped into tailcap. Always install batteries with the "+" end facing the head end of the flashlight and the "-" end facing the tailcap end of the flashlight. **Switch** - Push button switch, 3 position, on-off and signal.

(Manual, momentary on-off). **Flood to Spot** - Rotate head of flashlight to adjust from a wide flood beam to an intense spotlight. **Changing the lamp** - Unscrew the entire head assembly (11), then unscrew the retaining collar (10). There is a spare lamp in the tail cap.

TROUBLESHOOTING: **1. Flashlight failure** - Check the lamp and the batteries. If the lamp has burned out, be sure its replacement was designed specifically for the battery voltage output. **2. Flashlight does not turn on or stay on** - Check the tailcap. The metal surfaces contacting the barrel, tailcap and spring assembly should be shiny metal without obstruction between them. Any corrosion formed by a foreign substance should be carefully removed.

INSPECTION AND MAINTENANCE: For prolonged life and efficiency, it is necessary periodically to inspect and perform preventative maintenance on your flashlight as follows:

1. Inspection - Any battery may leak caustic solutions or gases which can corrode the inside of your flashlight. You should remove the batteries at least once a month and visually inspect the inside of the flashlight for signs of corrosion. If corrosion is seen, follow the instructions in the HOW AND WHEN TO MAKE A WARRANTY CLAIM section. **2. Separate Storage of Batteries** - If your flashlight is used infrequently, e.g., once a month or less, it is recommended to remove the batteries and store them separately. This helps guard against corrosion and may also prolong battery life. **3. Maintenance** - Place a small amount of petroleum jelly on all threads and rubber O-rings every six months.

WARNINGS: Any battery may leak harmful chemicals which may damage skin, clothing, or the inside of the flashlight. TO AVOID RISK OF INJURY, DO NOT LET ANY MATERIAL LEAKED FROM A BATTERY COME IN CONTACT WITH EYES OR SKIN. Any battery may rupture or explode if put in a fire or otherwise exposed to excessive heat. TO AVOID RISK OF INJURY, DO NOT EXPOSE BATTERIES TO EXCESSIVE HEAT. To reduce the risk of personal injury or harm to your flashlight, take the following precautions:

- Use only alkaline batteries from a reputable manufacturer.
- Do not use different brands of batteries in the same flashlight.
- When replacing batteries, always replace the whole set.
- Do not use rechargeable or reuseable alkaline batteries.
- Do not try to recharge batteries that are not specifically designed to be recharged.
- Always install batteries with the "+" end facing the head end of the flashlight and the "-" end facing the tailcap end of the flashlight.
- Do not allow children to install batteries unsupervised.
- Follow battery manufacturer's instructions as to proper handling, storage and disposal of batteries.
- Use of a replacement lamp of improper dimensions or specifications may cause shorting, overheating or other hazard. Use only the recommended Mag-Lite® replacement lamp or its technical equivalent.
- Carefully follow the steps listed under INSPECTION AND MAINTENANCE.
- Not recommended for use by children under seven years of age.