





*Item 2 inserts into item 1

**Do not disassemble.

Function Sets Chart

Function Set	 1 GENERAL (Default)	 2 OUTDOOR	 3 LAW ENFORCEMENT	 4 TACTICAL
1 CLICK	Full Power	Full Power	Momentary	Momentary
2 CLICKS	Low Power	Low Power	Full Power	Full Power
3 CLICKS	Eco	Strobe	Eco	Strobe

ENGLISH - Thank you for purchasing a Mag-Lite® flashlight product. To view the entire product line click on "Products". Please review all the information contained in this pamphlet.

OPERATION: Large end of battery spring must be snapped into tailcap. Always install batteries with the "+" end facing the head end of the flashlight and the "-" end facing the tailcap end of the flashlight. Switch - Push button switch. Flood to Spot - Rotate head of flashlight to adjust from a wide flood beam to an intense spotlight.

Your Flashlight's Function Sets and the Functions Within Each Set

As the chart below shows, your MAGLITE® LED flashlight is capable of five different functions – Full Power, Low Power, Strobe (flashes 12 times per second), Eco and Momentary On/Off (stays on only while the switch button is held down). Not all of these functions are equally important to every user. That is why these functions are organized into four different function sets – so that you can personalize your flashlight to suit your needs, configuring it for quickest access to the functions that best match your preference.

How To Choose A Function Within a Set

The available function sets, and the functions within each one, are shown in the following table:

As it comes out of the package, your MAGLITE® LED flashlight is set to the "Standard" function set (**Function Set #1** in the chart). If you require only those three functions (Full Power, Low Power and Eco), then you never have to change it. You can select a function within that set by the "Quick Click" method: Turn the flashlight on with one Quick Click and it is on at Full Power. Turn it off, then turn it on with two Quick Clicks (about as fast as you would say "Click Click") and it turns on at – the Low Power function. Turn it off, then turn it on with three Quick Clicks (about as fast as you would say "Click Click Click") and you have the Eco function.

Selecting a function within any of the other function sets works the same way –with one, two or three Quick Clicks, as the chart shows. For example, if you are in **Function Set #2** and you want to select the Strobe function, begin with the flashlight off, apply three Quick Clicks, and your flashlight will strobe.

How To Go From One Function Set To Another

Your MAGLITE® LED flashlight's "standard" setting is **Function Set #1**. If you want to keep that setting you don't have to do anything. **Function Set #1** will always be in effect unless it is changed. If you want to choose a different function set, follow these steps:



1. Unscrew the tail cap (you may not have to remove it all the way; you only need to back it out of the barrel enough that the flashlight will not turn on).
2. Pause for 2 seconds.
3. Press the switch button and **keep holding it down**.
4. **While still holding down the switch button**, screw the tail cap back in until it is tight.

5. **Keep holding down the switch button**. Within about 4 seconds the flashlight will start to blink.

6. The number of blinks indicates the new selected Function Set.

7. To choose a new Function Set, release the switch button after the corresponding number of blinks (releasing after 1 blink chooses **Function Set #1**; releasing after 2 blinks chooses **Function Set #2**; release after 3 blinks for **Function Set #3**, and release after 4 blinks to choose **Function Set #4**.) Your choice of a Function Set remains in effect until you change it by repeating the above process.

INSPECTION AND MAINTENANCE: If flashlight is used less than once a month, remove the batteries between uses. Lubricate all threads and rubber O-rings with petroleum jelly twice yearly. Inspect flashlight monthly and carefully remove any damaged batteries and clean any corrosion.

TROUBLESHOOTING: If flashlight does not turn on or stay on - 1. Replace the batteries. If the problem persists, then 2. Check the tail cap. The metal surfaces contacting the barrel, tail cap and spring assembly should be clean, shiny and free of corrosion or other obstruction. Clean as needed.

WARNINGS: • To AVOID RISK OF EYE INJURY, LOOK AWAY IMMEDIATELY IF BEAM IS SHONE DIRECTLY INTO YOUR EYES. • AVOID EXPOSING BATTERIES TO FIRE OR EXCESSIVE HEAT, as this may cause leakage or explosion. • To AVOID RISK OF INJURY TO EYES OR SKIN, AVOID CONTACT WITH ANY MATERIAL LEAKED FROM A BATTERY • THIS FLASHLIGHT IS NOT A TOY; not recommended for use by children.