

Makita Air Compressor Part Breakdown - MODEL MAC700

| Item | Description | Part # | Qty | Item | Description | Part # | Qty |
|------|-----------------------------------|-----------|-----|------|--------------------------------|----------|-----|
| 1 | Cylinder head | 101001-E | 1 | 37 | Electric motor / Crankcase | 251215-E | 1 |
| 2 | Valve seat to head gasket | 211001-E | 1 | 38 | Exhaust valve seat | 114001-E | 1 |
| 3 | Inlet valve seat | 104001-E | 1 | 39 | Oil gauge gasket | 217001-E | 1 |
| 4 | Inlet & Exhaust valve seat gasket | 212001-E | 1 | 40 | Air tank | 401129-E | 1 |
| 5 | Inlet & Exhaust valve plate | 125001-E | 2 | 41 | Spring washer for motor cover | 382004-E | 4 |
| 6 | Inlet & Exhaust spring plate | 127001-E | 2 | 42 | Regulator | 410030-E | 1 |
| 7 | Crankshaft bolt | 352106-E | 1 | 43 | Rubber handle | 435017-E | 1 |
| 8 | Valve plate screw | 126001-E | 4 | 44 | Tank foot assembly | 434002-E | 4 |
| 9 | Cylinder head bolt | 352087-E | 4 | 45 | Quick coupler (1/4") | 447013-E | 1 |
| 10 | Spring washer for head bolt | 382011-E | 4 | 46 | Safety valve (1/4") | 407001-E | 1 |
| 11 | Exhaust Elbow | 151404-E | 1 | 47 | Drain cock | 413008-E | 1 |
| 12 | Discharge tube assembly | 230092S-E | 1 | 48 | Check valve | 409004-E | 1 |
| 13 | Pressure gauge | 411028-E | 2 | 49 | Power cord | 452005-E | 1 |
| 14 | Unloading elbow | 151001-E | 1 | 50 | Pressure switch | 412024-E | 1 |
| 15 | Valve seat to cylinder gasket | 213001-E | 1 | 51 | Regulator nipple | 441001-E | 1 |
| 16 | Cylinder | 201013-E | 1 | 52 | Unloading tube assembly (1/4") | 240082-E | 1 |
| 17 | Piston | 203002-E | 1 | 53 | Motor fan | 431005-E | 1 |
| 18 | Compression ring | 206002-E | 2 | 54 | Handle plug | 439010-E | 2 |
| 19 | Oil control ring | 207002-E | 1 | 55 | Air filter (element only) | 171002-E | 1 |
| 20 | Piston pin | 204002-E | 1 | 56 | Ring kit (#18 and 19) | RK700-E | 1 |
| 21 | Piston pin snap ring | 205001-E | 2 | 57 | Valve kit (#5, 6, and 8) | VK700-E | 1 |
| 22 | Cylinder to crankcase gasket | 214001-E | 1 | 58 | Gasket kit (#2, 4, 15 and 22) | GK700-E | 1 |
| 23 | Set nut (cylinder to crankcase) | 371005-E | 2 | 59 | Plug for pr.switch manifold | 360002-E | 1 |
| 24 | Spring washer (cyl to crankcase) | 382005-E | 2 | 69 | Start Capacitor | 460001-E | 1 |
| 25 | Double head screw | 358001-E | 2 | 71 | Overload Switch | 458001-E | 1 |
| 27 | Crankcase cover gasket | 215001-E | 1 | 72 | Centrifugal Switch | 459001-E | 1 |
| 28 | Crankshaft | 302001-E | 1 | | Compressor oil (1 quart) | 181122-A | 1 |
| 29 | Crankcase cover | 304013-E | 1 | | | | |
| 30 | Connecting rod | 316001-E | 1 | | | | |
| 31 | Oil sight gauge | 321001-E | 1 | | | | |
| 32 | Oil draining plug | 360001-E | 1 | | | | |
| 33 | Motor cover | 433011-E | 1 | | | | |
| 34 | Motor / crankcase cover bolt | 352071-E | 9 | | | | |
| 35 | Air filter assembly | 170006-E | 1 | | | | |
| 36 | Oil filler/crankcase breather | 324003-E | 1 | | | | |

