

IMPORTANT SAFETY INSTRUCTIONS

AWARNING READ AND UNDERSTAND ALL INSTRUCTIONS. When using electric appliances, basic precautions should always be followed, including the following:

Before using the light, read this operator's manual and all labels on the light.

- Read and understand all the instructions before using the appliance.
- To reduce the risk of injury, close supervision is necessary when an appliance is used near children.
- · Store idle light out of reach of children. Warm lights can become hazardous in the hands of children.
- Know your light. Read this manual carefully to learn your light's applications and limitations as well as potential hazards associated with this type of light.



- Do not stare at the operating light source.
 This tool is designed to be powered by alkaline batteries properly inserted. into the tool. Do not attempt to use with any other voltage or power supply.

 • Do not leave batteries within the reach of children.
- Do not mix new and used batteries.
- Do not mix brands (or types within brands) of batteries.
- Do not mix rechargeable and non-rechargeable batteries.
- Install batteries according to polarity (+ / -) diagrams.
 Properly dispose of used batteries immediately.
- Do not incinerate or dismantle batteries.
- Under abusive conditions, liquid may be ejected from the battery, avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.
- Do not dispose of tool or batteries together with household waste material! Appliance and batteries that have reached the end of their life must be collected separately and returned to an environmentally compatible recycling facility.
- Maintain labels and nameplates. These carry important information. If unreadable or missing, contact a MILWAUKEE service facility for a free replacement.

SAVE THESE INSTRUCTIONS

ASSEMBLY

Changing Batteries

Only use alkaline batteries. Do not use zinc-carbon batteries. If the light will not be used for a long time, remove the batteries as a protection against corrosion. To change the batteries:

- 1. Open the battery compartment.
- 2. Insert the batteries according to the polarity marked in the compartment.
- Close the battery compartment.

OPERATION

AWARNING To reduce the risk of injury, do not look directly into the light when the light is on.

Press the power button ① to turn the light on or off.

MAINTENANCE

AWARNING To reduce the risk of injury, always remove the battery before performing any maintenance. Never disassemble the tool. Contact a MILWAUKEE service facility for ALL repairs.

Maintain light

Keep your light in good repair by adopting a regular maintenance program. If the light does not work properly, return the light to a MILWAUKEE service facility for repairs.

WARNII

To reduce the risk of personal injury and damage, never im-

merse your tool in liquid or allow a liquid to low inside them. Cleaning

Keep tool handles clean, dry and free of oil or grease. Use only mild soap and a damp cloth to clean the tool since certain cleaning agents and solvents are harmful to plastics cloth to clean the tool since certain cleaning agents and solvents are harmful to plastics cloth to clean the tool since certain cleaning agents and solvents are harmful to plastics. and other insulated parts. Some of these include gasoline, turpentine, lacquer thinner, paint thinner, chlorinated cleaning solvents, ammonia and household detergents containing ammonia. Never use flammable or combustible solvents around tools.