



M12™ SPOT LIGHT

To reduce the risk of injury, user must read and understand operator's manual.

IMPORTANT SAFETY INSTRUCTIONS

⚠ WARNING READ AND UNDERSTAND ALL INSTRUCTIONS. When using electric appliances, basic precautions should always be followed, including the following:

Before using the light, read this operator's manual, your battery pack and charger operator's manual, and all labels on the battery pack, charger and light.

- **Read and understand all the instructions before using the appliance.**
- **To reduce the risk of injury, close supervision is necessary** when an appliance is used near children.
- **Store idle light out of reach of children.** Warm lights can become hazardous in the hands of children.
- **Do not use outdoors.**
- **For a rechargeable appliance** - Use only the charger supplied by the manufacturer to recharge.
- **Know your light.** Read this manual carefully to learn your light's applications and limitations as well as potential hazards associated with this type of tool.
- **Batteries must be recharged only with the charger specified by the manufacturer.** A charger that
- **Use light only with specifically designated battery pack.** Use of any other batteries may create a risk of
- **When battery pack is not in use, keep it away from metal objects like: paper clips, coins, keys, nails, screws, or other small metal objects that can make a connection from one terminal to another.**
- **Maintain labels and nameplates.** These carry important information. If unreadable or missing, contact a MILWAUKEE service facility for a free replacement.

SAVE THESE INSTRUCTIONS

SYMBOLLOGY



Volts



Direct Current



Underwriters Laboratories, Inc.
United States and Canada

ASSEMBLY

⚠ WARNING Recharge only with the charger specified for the battery. For specific charging instructions, read the operator's manual supplied with your charger and battery.

Inserting/Removing Battery Pack

Insert the battery pack by sliding battery pack into the body of the tool. Insert the battery pack until the battery latches lock.

To **remove** the battery pack, press in both battery latches and slide the battery pack off of the tool.

⚠ WARNING To reduce the risk of injury, do not look directly into the light when the light is on.

Pull the trigger to turn the light on or off. Pull part way for momentary light. Pull fully and release to lock on. Pull fully and release again to turn off.

Use the mode button to select the brightness. The last selected mode will default when the trigger is pulled. Press and hold the mode button to start or stop the strobe.

MAINTENANCE

⚠ WARNING To reduce the risk of injury, always unplug the charger and remove the battery pack from the charger or tool before performing any maintenance. Never disassemble the tool, battery pack or charger. Contact a MILWAUKEE service facility for ALL repairs.

Maintain light

Keep your light, battery pack and charger in good repair by adopting a regular maintenance program. If the light does not work properly, return the light to a MILWAUKEE service facility for repairs.

⚠ WARNING To reduce the risk of personal injury and damage, never immerse your tool, battery pack or charger in liquid or allow a liquid to flow inside them.

Cleaning

Keep tool handles clean, dry and free of oil or grease. Use only mild soap and a damp cloth to clean the tool, battery pack and charger since certain cleaning agents and solvents are harmful to plastics and other insulated parts. Some of these include gasoline, turpentine, lacquer thinner, paint thinner, chlorinated cleaning solvents, ammonia and household detergents containing ammonia. Never use or combustible solvents around tools.

Exceptions

This warranty is not valid in the following situations:

- When the product is used in a different manners from the end-user guide or instruction manual.
- When the conditions of use are not normal.
-

TECHTRONIC INDUSTRIES.

Model: _____
 Date of Purchase: _____
 Distributor or Store Stamp: _____