



LED LANTERN AND FLOODLIGHT




WARNING To reduce the risk of injury, user must read and understand operator's manual.

IMPORTANT SAFETY INSTRUCTIONS

WARNING Read and understand all instructions. When using electric appliances, basic precautions should always be followed, including the following:

Before using the lantern, read this operator's manual, your battery pack and charger operator's manual, and all labels on the battery pack, charger and lantern.

- **Read and understand all the instructions before using the appliance.**
- **To reduce the risk of injury, close supervision is necessary** when an appliance is used near children.
- **Store idle lantern out of reach of children.** Warm lanterns can become hazardous in the hands of children.
- **Do not use outdoors.**
- **For a rechargeable appliance** - Use only the charger supplied by the manufacturer to recharge.
- **Know your lantern.** Read this manual carefully to learn your lantern's applications and limitations as well as potential hazards associated with this type of tool.
- **Batteries must be recharged only with the charger specified by the manufacturer.** A charger that may be suitable for one type of battery may create a risk of fire when used with another battery.
- **Use lantern only with specifically designated battery pack.** Use of any other batteries may create a risk of fire.
- **When battery pack is not in use, keep it away from metal objects like: paper clips, coins, keys, nails, screws, or other small metal objects that can make a connection from one terminal to another.** Shorting the battery terminals together may cause sparks, burns, or a fire.
- **Maintain labels and nameplates.** These carry important information. If unreadable or missing, contact a MILWAUKEE service facility for a free replacement.

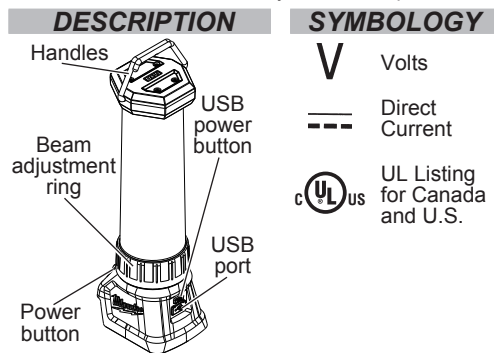

ASSEMBLY

WARNING Recharge only with the charger specified for the battery. For specific charging instructions, read the operator's manual supplied with your charger and battery.

Removing/Inserting the Battery

To **remove** the battery pack, press in both battery latches and slide the battery pack off of the tool. **Insert** the battery pack by sliding battery pack into the body of the tool. Insert the battery pack until the battery latches lock.

WARNING To reduce the risk of injury, do not look directly into the light when lantern is on.

Power

Use the Power button to cycle through the High/Medium/Low settings. Press and hold the Power button for about 2 seconds to activate the strobe setting.

Adjusting

Turn the beam adjustment ring to rotate the LEDs between 180° (task lighting) and 360° (area lighting).

USB Port

To charge a phone or other electronic device using the 2.1A USB port, plug in the USB and press the USB power button. The port will remain ON for about 2 hours.

MAINTENANCE

WARNING To reduce the risk of injury, always unplug the charger and remove the battery pack from the charger or tool before performing any maintenance. Never disassemble the tool, battery pack or charger. Contact a MILWAUKEE service facility for ALL repairs.

Maintaining Lantern

Keep your lantern battery pack and charger in good repair by adopting a regular maintenance program. If the lantern does not work properly, return the lantern to a MILWAUKEE service facility for repairs.

WARNING To reduce the risk of personal injury and damage, never immerse your tool, battery pack or charger in liquid or allow a liquid to flow inside them.

Cleaning

Keep tool handles clean, dry and free of oil or grease. Use only mild soap and a damp cloth to clean the tool, battery pack and charger since certain cleaning agents and solvents are harmful to plastics and other insulated parts. Some of these include gasoline, turpentine, lacquer thinner, paint thinner, chlorinated cleaning solvents, ammonia and household detergents containing ammonia. Never use flammable or combustible solvents around tools.