



M12™ **BOVER** SERVICE & REPAIR FLOOD LIGHT W/ USB CHARGING



IMPORTANT SAFETY INSTRUCTIONS

⚠️WARNING READ AND UNDERSTAND ALL INSTRUCTIONS. When using electric appliances, basic precautions should always be followed, including the following:

Before using the flood light, read this operator's manual, your battery pack and charger operator's manual, and all labels on the battery pack, charger and flood light.

- **Read and understand all the instructions before using the appliance.**
- **Do not use magnet for horizontal overhead mounting.**
- **To reduce the risk of electric shock, do not put light in water or other liquid.** Do not place or store appliance where it can fall or be pulled into a tub or sink.
- **Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the appliance.** Carrying the appliance with your finger on the switch or energizing appliance that have the switch on invites accidents.
- **Disconnect the battery pack from the appliance before making any adjustments, changing accessories, or storing appliance.** Such preventive safety measures reduce the risk of starting the appliance accidentally.
- **To reduce the risk of injury, close supervision is necessary** when an appliance is used near children.
- **Store idle flood light out of reach of children.** Warm flood lights can become hazardous in the hands of children.
- **Do not use outdoors.**
- **For a rechargeable appliance** - Use only the charger supplied by the manufacturer to recharge.
- **Know your flood light.** Read this manual carefully to learn your flood light's applications and limitations as well as potential hazards associated with this type of tool.
- **Batteries must be recharged only with the charger specified by the manufacturer.** A charger that may be suitable for one type of battery may create a risk of fire when used with another battery.
- **Use flood light only with specifically designated battery pack.** Use of any other batteries may create a risk of fire.
- **When battery pack is not in use, keep it away from metal objects like: paper clips, coins, keys, nails, screws, or other small metal objects that can make a connection from one terminal to another.** Shorting the battery terminals together may cause sparks, burns, or a fire.
- **Maintain labels and nameplates.** These carry important information. If unreadable or missing, contact a MILWAUKEE service facility for a free replacement.

SAVE THESE INSTRUCTIONS SPECIFICATIONS

Cat. No.	2367-20
Volts.....	12 DC
Battery Type.....	M12™
Charger Type.....	M12™
USB Output.....	5 V DC
USB Amps.....	2.1
Recommended Ambient Operating Temperature.....	0°F to 125°F

SYMBOLLOGY

	Volts		Do not stare at the operating light source
	Direct		
	Current		
	Amps		UL Listing for Canada and U.S.

LIGHT

⚠️WARNING Recharge only with the charger specified for the battery. For specific charging instructions, read the operator's manual supplied with your charger and battery.

Inserting/Removing Battery Pack

Insert the battery pack by sliding battery pack into the body of the tool. Insert the battery pack until the battery latches lock.

To **remove** the battery pack, press in both battery latches and slide the battery pack off of the tool.

Power

⚠️CAUTION To reduce the risk of injury, do not stare at the operating light source.

Press the power button to cycle through HIGH, LOW, and OFF settings.

USB Port

To charge a phone or other electronic device using the 2.1A USB port, plug in the USB and press the USB wake button. The port will remain ON for about 2 hours.

MAINTENANCE

⚠️WARNING To reduce the risk of injury, always unplug the charger and remove the battery pack from the charger or tool before performing any maintenance. Never disassemble the tool, battery pack or charger. Contact a MILWAUKEE service facility for ALL repairs.

Maintain Light

Keep your light, battery pack and charger in good repair by adopting a regular maintenance program. If the light does not work properly, return the light to a MILWAUKEE service facility for repairs.

⚠️WARNING To reduce the risk of personal injury and damage, never immerse your tool, battery pack or charger in liquid or allow a liquid to flow inside them.

Cleaning

Keep tool handles clean, dry and free of oil or grease. Use only mild soap and a damp cloth to clean the tool, battery pack and charger since certain cleaning agents and solvents are harmful to plastics and other insulated parts. Some of these include gasoline, turpentine, lacquer thinner, paint thinner, chlorinated cleaning solvents, ammonia and household detergents containing ammonia. Never use flammable or combustible solvents around tools.