

# SERVICE GUIDE



## STEP 1:

Remove battery and nails from magazine. Proceed to the next step accordingly.



IF YOUR PROBLEM IS NOT ADDRESSED BELOW, SEE REVERSE SIDE FOR SERVICE INFORMATION.

## TO RESET STRIKER

### STEP 2:

Check for incorrect striker position, it may or may not be visible. If striker does not require a reset, see steps for clearing a jammed nail.



### STEP 3:

Adjust contact bracket all the way out to the minimum depth.

Attach charged battery. Power tool back on.



### STEP 4:

Press contact bracket against a hard surface that can be damaged. Pull and hold back the nail pusher. Fire tool. You will hear striker reset itself.



### STEP 5:

Remove battery. Load nails back in tool. Re-attach battery. Tool is now ready for use.



## TO CLEAR JAMMED NAIL

### STEP 2:

Remove the magazine using the provided hex tool to unscrew the 3 screws highlighted in the photo..



### STEP 3:

Check for jammed nail.



### STEP 4:

Use tool to remove jammed nail.



### STEP 5:

Line up and re-attach the magazine. Reload the magazine and re-attach battery. Tool is now ready for use.

