

SERVICE GUIDE

STEP 1:

Remove battery and nails from magazine.



STEP 2:

Open jam clearing latch to check for incorrect striker position or jammed nail. Proceed to next step accordingly.



IF YOUR PROBLEM IS NOT ADDRESSED BELOW, SEE REVERSE SIDE FOR SERVICE INFORMATION.

TO RESET STRIKER

STEP 3:

Check for incorrect striker position.



STEP 4:

Close jam clearing latch. Re-attach battery. Power tool back on.



STEP 5:

With magazine open and no nails in the tool, press nose against hard surface that can be damaged. Fire tool. You will hear striker reset itself.



STEP 6:

Remove battery. Load nails back in tool. Re-attach battery. Tool is now ready for use.



TO CLEAR JAMMED NAIL

STEP 3:

Check for jammed nail.



STEP 4:

Use tool to remove jammed nail.



STEP 5:

Close jam clearing latch, insert nails and re-attach battery. Tool is now ready for use.

