




SERVICE PARTS LIST

BULLETIN NO.
54-40-1626

SPECIFY CATALOG NO. AND SERIAL NO. WHEN ORDERING PARTS		REVISED BULLETIN 54-40-1625	DATE Mar. 2005
METAL CUTTING SAW			
CATALOG NO.	6370-20	SERIAL NUMBER	A35B
		WIRING INSTRUCTION 58-01-0085	

EXAMPLE:
00 0
Component Parts (Small #)
Are Included When Ordering
The Assembly (Large #).

**SEE REVERSE SIDE
FOR LUBRICATION
AND SERVICE NOTES**

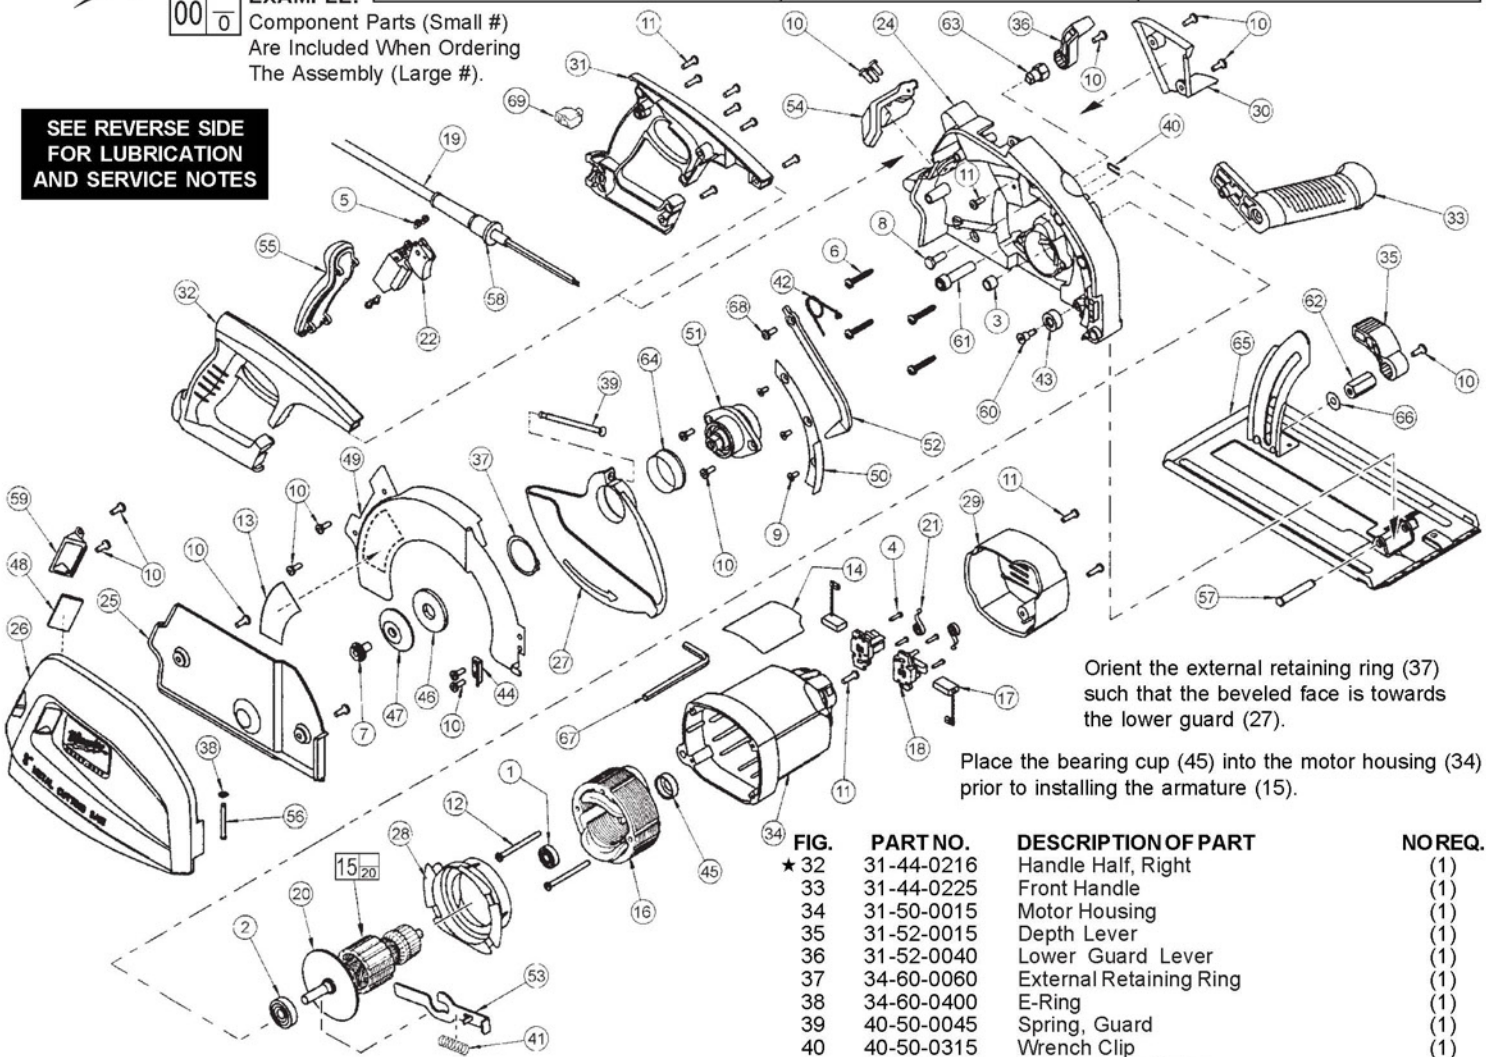


Orient the external retaining ring (37) such that the beveled face is towards the lower guard (27).


Place the bearing cup (45) into the motor housing (34) prior to installing the armature (15).

FIG.	PART NO.	DESCRIPTION OF PART	NOREQ.
1	02-04-0852	Bearing	(1)
2	02-04-1050	Bearing	(1)
3	02-50-0015	Needle Bearing	(1)
4	05-71-0035	Screws	(4)
5	05-78-0305	M3.5 x 0.6 x 7.00mm Pan Hd. Slit. T-15	(4)
6	05-88-9925	TS5 x 30mm Phillips Hd. Screw	(4)
7	06-75-0035	5/16-18 X 9/16" Blade Screw	(1)
8	06-75-5860	1/4-20 X 3/4" Hex Hd. Screw	(1)
9	06-82-3792	8-32 x 3/8" Flat Head Taptite T-15	(3)
10	06-82-5314	10-24 X 1/2" Pan Hd. Taptite T-25	(15)
11	06-82-7270	8-16 X .625 Pan Hd. Slotted Plastite T-20	(13)
12	06-82-7453	8-16 X 2.25 Pan Hd. Slotted Plastite T20	(2)
13	10-20-0002	Warning Label, Inner Guard	(1)
14	12-20-0230	Service Nameplate Kit	(1)
15	16-62-1015	Armature	(1)
16	18-62-1015	Field Assembly	(1)
17	22-16-0060	Carbon Brush	(2)
18	22-22-0260	Brush Holder	(2)
19	22-64-0437	Cord	(1)
20	22-84-0035	Fan	(1)
21	23-52-0020	Brush Spring	(1)
22	23-66-2115	Switch	(1)
★ 23	23-94-0011	Wire Assembly (Not Shown)	(1)
24	28-14-0015	Gearcase	(1)
25	28-20-0015	Collector Cover Plate	(1)
26	28-20-0020	Collector Cover	(1)
27	28-41-0015	Lower Guard	(1)
28	31-05-0075	Fan Baffle	(1)
29	31-15-0030	Motor Cover	(1)
30	31-15-0035	Wire Cover	(1)
★ 31	31-44-0206	Handle Half, Left	(1)
★ 32	31-44-0216	Handle Half, Right	(1)
33	31-44-0225	Front Handle	(1)
34	31-50-0015	Motor Housing	(1)
35	31-52-0015	Depth Lever	(1)
36	31-52-0040	Lower Guard Lever	(1)
37	34-60-0060	External Retaining Ring	(1)
38	34-60-0400	E-Ring	(1)
39	40-50-0045	Spring, Guard	(1)
40	40-50-0315	Wrench Clip	(1)
41	40-50-0345	Spindle Lock Spring	(1)
42	40-50-0355	Torsion Spring	(1)
43	42-38-0222	Bumper	(1)
44	42-70-0050	Cover Clip	(1)
45	42-96-0025	Bearing Cup	(1)
46	43-34-0090	Inner Flange	(1)
47	43-34-0095	Outer Flange	(1)
48	43-50-0015	Glass Window	(1)
49	43-54-0030	Inner Guard	(1)
50	43-56-0015	Chip Guide Plate	(1)
51	43-78-0025	Hub Assembly	(1)
52	44-14-0015	Lower Guard Link	(1)
53	44-20-0015	Spindle Lock	(1)
54	44-20-0050	Latch Assembly	(1)
55	44-52-0681	Grip	(1)
56	44-60-0105	Front Latch Pin	(1)
57	44-60-1180	Pivot Pin	(1)
58	44-76-0210	Cord Protector	(1)
59	44-86-0030	Window Retainer	(1)
60	45-04-0485	Bumper Screw	(1)
61	06-75-3970	Bolt	(1)
62	45-08-0015	Depth Shaft	(1)
63	45-08-0035	Shaft Lower Guard Lever	(1)
64	45-14-0020	Lower Guard Sleeve	(1)
65	45-16-0130	Shoe Assembly	(1)
66	45-88-1545	Washer	(1)
67	49-96-0345	6mm Hex Key	(1)
68	06-82-5560	10-24 X 1/2" Truss Hd. Taptite T-25	(1)
★ 69	22-36-0160	Overload Protector	(1)

Place spindle lock spring (41) into the spring retaining area on the gearcase (24), as shown. Press ball bearing (2) to the shoulder on the armature shaft (15). Orient the spindle lock (53) onto the armature shaft, inbetween the pressed on bearing and the front of the fan, as shown. Carefully insert the armature pinion/bearing into the gearcase. Align the spindle lock with the channel in the gearcase, making sure that the tab on the spindle lock engages the front of the spring.

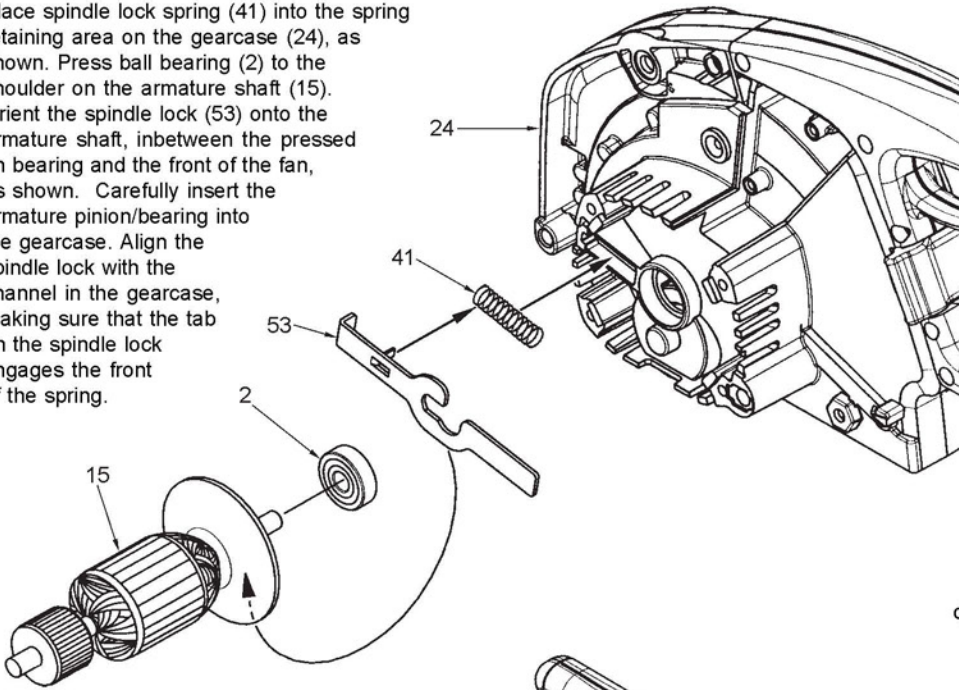


Orient the washer (66) such that the rounded edge is towards the depth rail of the shoe assembly (65).

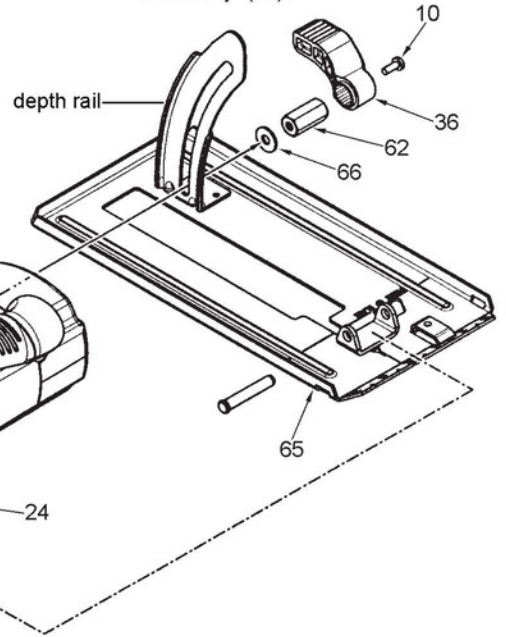

Verify that the hex head bolt (8) is fully seated in the gearcase (24) while assembling the depth shaft (62), as shown.


Press the bearing (3) flush to .015" subflush to the gear cavity wall in the gearcase (24).

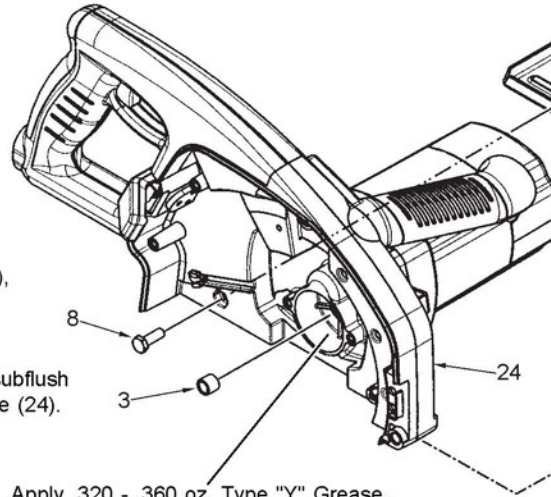

Apply .320 - .360 oz. Type "Y" Grease, No. 49-08-5270, to gear bore of gearcase. The grease should be directed toward the pinion end of the armature.

Orient the textured gripping surface of the lower guard lever (36) so it is parallel ($\pm 20^\circ$) with the back edge of the front handle (33), as shown.

Functionally check the lower guard (27), with the saw set at full depth of cut. Place the saw upside down with the shoe (65) horizontal. Retract the lower guard 100%. Release the lower guard lever (36). The guard should return in a brisk manner.

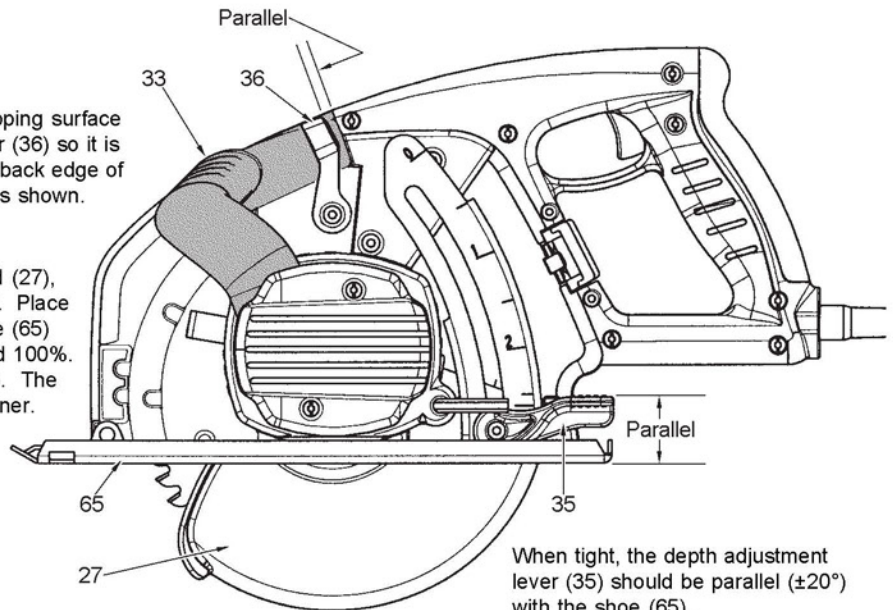

When tight, the depth adjustment lever (35) should be parallel ($\pm 20^\circ$) with the shoe (65).



SERVICE PARTS LIST

BULLETIN NO.
54-40-1627

SPECIFY CATALOG NO. AND SERIAL NO. WHEN ORDERING PARTS		REVISED BULLETIN	DATE
METAL CUTTING SAW		54-40-1626	Sept. 2017
CATALOG NO.	6370-20	SERIAL NUMBER	A35C
		WIRING INSTRUCTION 58-01-0085	

NOTICE:

Metal Cutting Saw 6370-20 underwent a design change from serial break 'C' to serial break 'D'. Unfortunately, there were a number of 'C' nameplates used on 'D' construction tools. The serial number range is A35CD1252XXXXXX thru A35CD1528XXXXXX. See photos below to compare the visual differences between the 'C' and 'D' design. The gripping surface on the handle and the logo on the collector cover help to identify the correct construction and the proper service parts list needed to repair the 6370-20.



Serial 'C' Construction-

If the tool you are servicing looks like this, continue to use this Bulletin, No. 54-40-1627



Serial 'D' Construction-

If the tool you are servicing looks like this, use Bulletin No. 54-40-1628

A35CD1252XXXXXX thru
A35CD1528XXXXXX
or
A35DDXXXXXXXXXX



SERVICE PARTS LIST

BULLETIN NO.
54-40-1627


SPECIFY CATALOG NO. AND SERIAL NO. WHEN ORDERING PARTS		REVISED BULLETIN 54-40-1626	DATE Sept. 2017
METAL CUTTING SAW			
CATALOG NO.	6370-20	SERIAL NUMBER	A35C
		WIRING INSTRUCTION 58-01-0085	

EXAMPLE:

00	0
----	---

 Component Parts (Small #)
 Are Included When Ordering
 The Assembly (Large #).

**SEE REVERSE SIDE
FOR LUBRICATION
AND SERVICE NOTES**

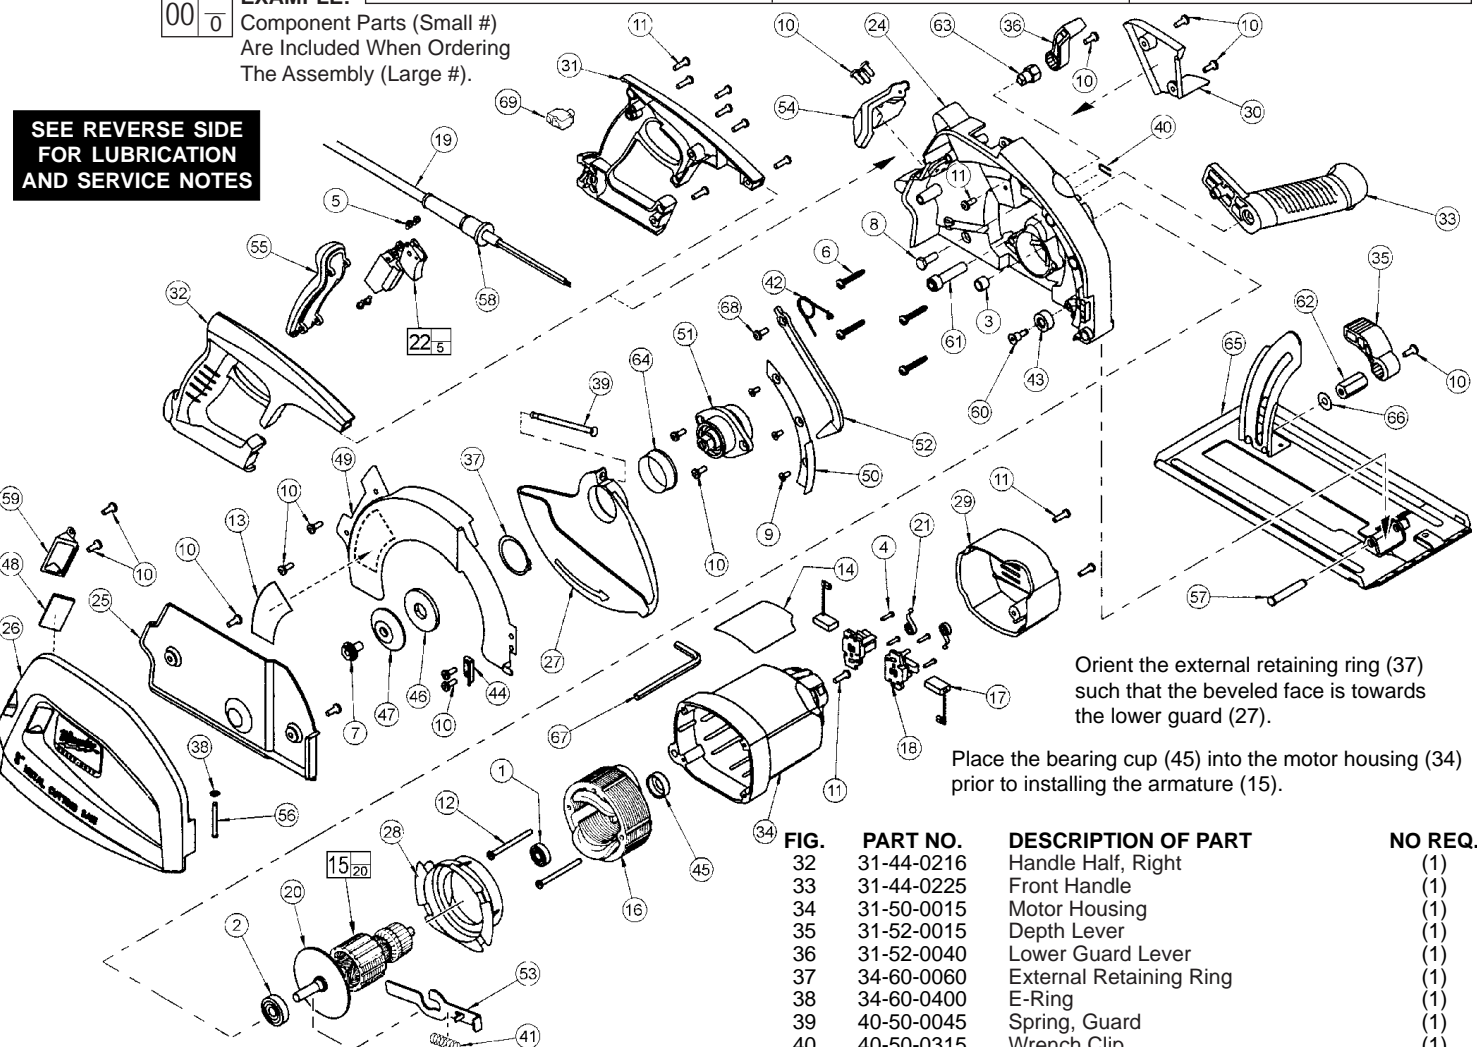


Orient the external retaining ring (37) such that the beveled face is towards the lower guard (27).

Place the bearing cup (45) into the motor housing (34) prior to installing the armature (15).


FIG.	PART NO.	DESCRIPTION OF PART	NO REQ.
1	02-04-0852	Bearing	(1)
2	02-04-1050	Bearing	(1)
3	02-50-0015	Needle Bearing	(1)
4	05-71-0035	Screws	(4)
★ 5	05-78-0130	Switch Screw	(4)
6	05-88-9925	TS5 x 30mm Phillips Hd. Screw	(4)
7	06-75-0035	5/16-18 X 9/16" Blade Screw	(1)
8	06-75-5860	1/4-20 X 3/4" Hex Hd. Screw	(1)
9	06-82-3792	8-32 x 3/8" Flat Head Taptite T-15	(3)
10	06-82-5314	10-24 X 1/2" Pan Hd. Taptite T-25	(15)
11	06-82-7270	8-16 X .625 Pan Hd. Slotted Plastite T-20	(13)
12	06-82-7453	8-16 X 2.25 Pan Hd. Slotted Plastite T20	(2)
13	10-20-0002	Warning Label, Inner Guard	(1)
14	12-20-0230	Service Nameplate Kit	(1)
15	16-62-1015	Armature	(1)
16	18-62-1015	Field Assembly	(1)
17	22-16-0060	Carbon Brush	(2)
18	22-22-0260	Brush Holder	(2)
19	22-64-0437	Cord	(1)
20	22-84-0035	Fan	(1)
21	23-52-0020	Brush Spring	(2)
★ 22	23-66-2118	Switch	(1)
23	23-94-0011	Wire Assembly (Not Shown)	(1)
24	28-14-0015	Gearcase	(1)
25	28-20-0015	Collector Cover Plate	(1)
26	28-20-0020	Collector Cover	(1)
27	28-41-0015	Lower Guard	(1)
28	31-05-0075	Fan Baffle	(1)
29	31-15-0030	Motor Cover	(1)
30	31-15-0035	Wire Cover	(1)
31	31-44-0206	Handle Half, Left	(1)

FIG.	PART NO.	DESCRIPTION OF PART	NO REQ.
32	31-44-0216	Handle Half, Right	(1)
33	31-44-0225	Front Handle	(1)
34	31-50-0015	Motor Housing	(1)
35	31-52-0015	Depth Lever	(1)
36	31-52-0040	Lower Guard Lever	(1)
37	34-60-0060	External Retaining Ring	(1)
38	34-60-0400	E-Ring	(1)
39	40-50-0045	Spring, Guard	(1)
40	40-50-0315	Wrench Clip	(1)
41	40-50-0345	Spindle Lock Spring	(1)
42	40-50-0355	Torsion Spring	(1)
43	42-38-0222	Bumper	(1)
44	42-70-0050	Cover Clip	(1)
45	42-96-0025	Bearing Cup	(1)
46	43-34-0090	Inner Flange	(1)
47	43-34-0095	Outer Flange	(1)
48	43-50-0015	Glass Window	(1)
49	43-54-0030	Inner Guard	(1)
50	43-56-0015	Chip Guide Plate	(1)
51	43-78-0025	Hub Assembly	(1)
52	44-14-0015	Lower Guard Link	(1)
53	44-20-0015	Spindle Lock	(1)
54	44-20-0050	Latch Assembly	(1)
55	44-52-0681	Grip	(1)
56	44-60-0105	Front Latch Pin	(1)
57	44-60-1180	Pivot Pin	(1)
58	44-76-0210	Cord Protector	(1)
59	44-86-0030	Window Retainer	(1)
60	45-04-0485	Bumper Screw	(1)
61	06-75-3970	Bolt	(1)
62	45-08-0015	Depth Shaft	(1)
63	45-08-0035	Shaft Lower Guard Lever	(1)
64	45-14-0020	Lower Guard Sleeve	(1)
65	45-16-0130	Shoe Assembly	(1)
66	45-88-1545	Washer	(1)
67	49-96-0345	6mm Hex Key	(1)
68	06-82-5560	10-24 X 1/2" Truss Hd. Taptite T-25	(1)
69	22-36-0160	Overload Protector	(1)

Place spindle lock spring (41) into the spring retaining area on the gearcase (24), as shown. Press ball bearing (2) to the shoulder on the armature shaft (15). Orient the spindle lock (53) onto the armature shaft, inbetween the pressed on bearing and the front of the fan, as shown. Carefully insert the armature pinion/bearing into the gearcase. Align the spindle lock with the channel in the gearcase, making sure that the tab on the spindle lock engages the front of the spring.

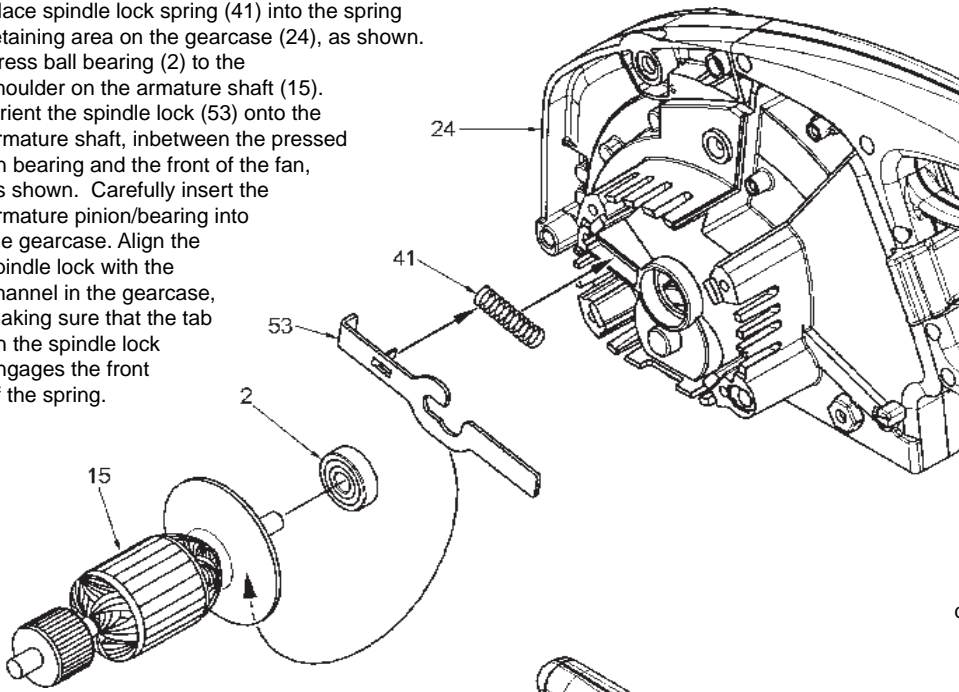


Orient the washer (66) such that the rounded edge is towards the depth rail of the shoe assembly (65).

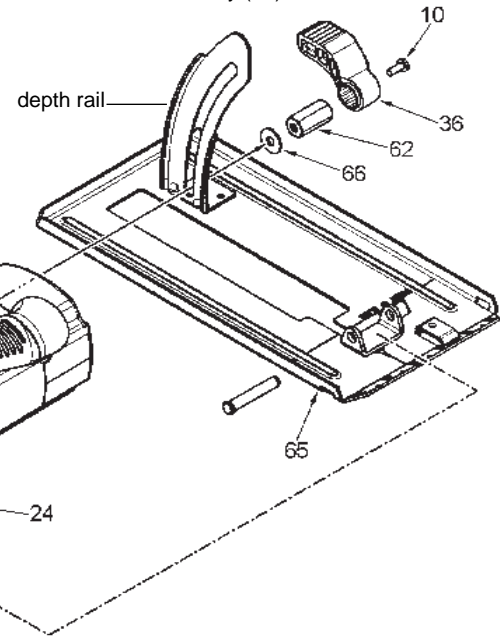

Verify that the hex head bolt (8) is fully seated in the gearcase (24) while assembling the depth shaft (62), as shown.


Press the bearing (3) flush to .015" subflush to the gear cavity wall in the gearcase (24).

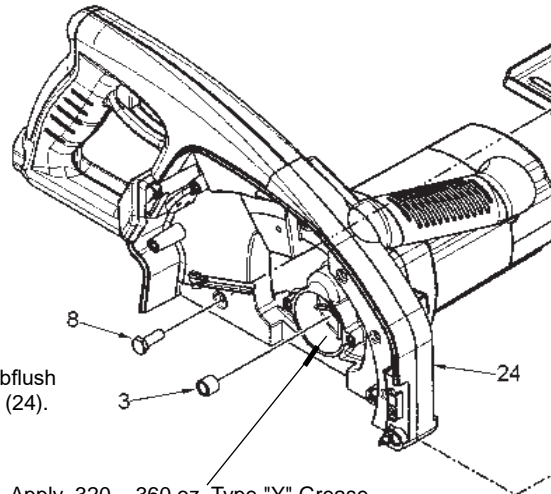

Apply .320 - .360 oz. Type "Y" Grease, No. 49-08-5270, to gear bore of gearcase. The grease should be directed toward the pinion end of the armature.

Orient the textured gripping surface of the lower guard lever (36) so it is parallel ($\pm 20^\circ$) with the back edge of the front handle (33), as shown.

Functionally check the lower guard (27), with the saw set at full depth of cut. Place the saw upside down with the shoe (65) horizontal. Retract the lower guard 100%. Release the lower guard lever (36). The guard should return in a brisk manner.

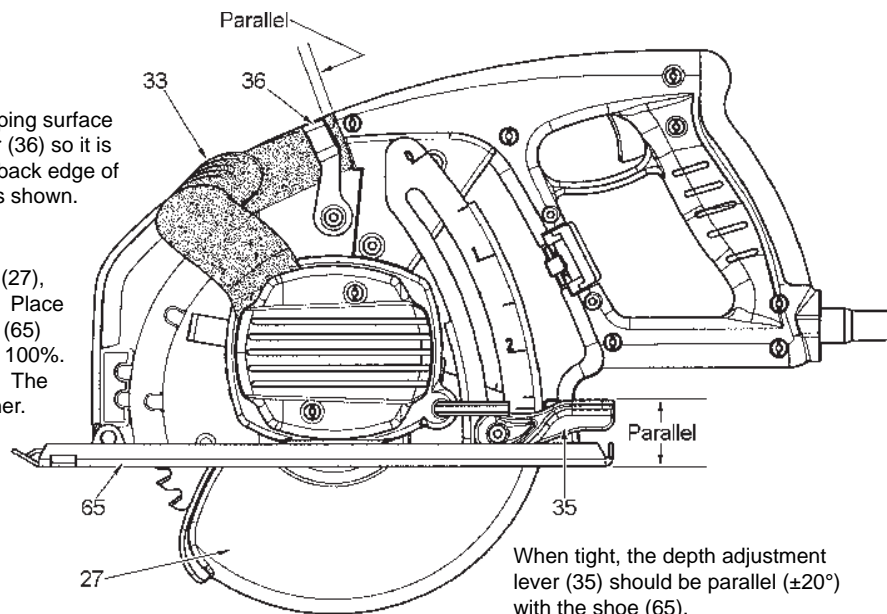

When tight, the depth adjustment lever (35) should be parallel ($\pm 20^\circ$) with the shoe (65).



SERVICE PARTS LIST

**BULLETIN NO.
54-40-1628**

SPECIFY CATALOG NO. AND SERIAL NO. WHEN ORDERING PARTS		REVISED BULLETIN	DATE
METAL CUTTING SAW		54-40-1627	July 2016
CATALOG NO. 6370-20	STARTING SERIAL NUMBER A35C and A35D	WIRING INSTRUCTION SEE PAGE 5	

NOTICE:

Metal Cutting Saw 6370-20 underwent a design change from serial break 'C' to serial break 'D'. Unfortunately, there were a number of 'C' nameplates used on 'D' construction tools. The serial number range is A35CD1252XXXXXX thru A35CD1528XXXXXX. See photos below to compare the visual differences between the 'C' and 'D' design. The gripping surface on the handle and the logo on the collector cover help to identify the correct construction and the proper service parts list needed to repair the 6370-20.



Serial 'C' Construction-

If the tool you are servicing looks like this, use Bulletin No. 54-40-1627



Serial 'D' Construction-

If the tool you are servicing looks like this, continue to use this Bulletin, No. 54-40-1628


A35CD1252XXXXXX thru
A35CD1528XXXXXX
or
A35DDXXXXXXXXXX



SERVICE PARTS LIST

BULLETIN NO.
54-40-1628

SPECIFY CATALOG NO. AND SERIAL NO. WHEN ORDERING PARTS		REVISED BULLETIN 54-40-1627	DATE July 2016
METAL CUTTING SAW		WIRING INSTRUCTION SEE PAGE 4	
CATALOG NO. 6370-20	STARTING SERIAL NUMBER A35D		

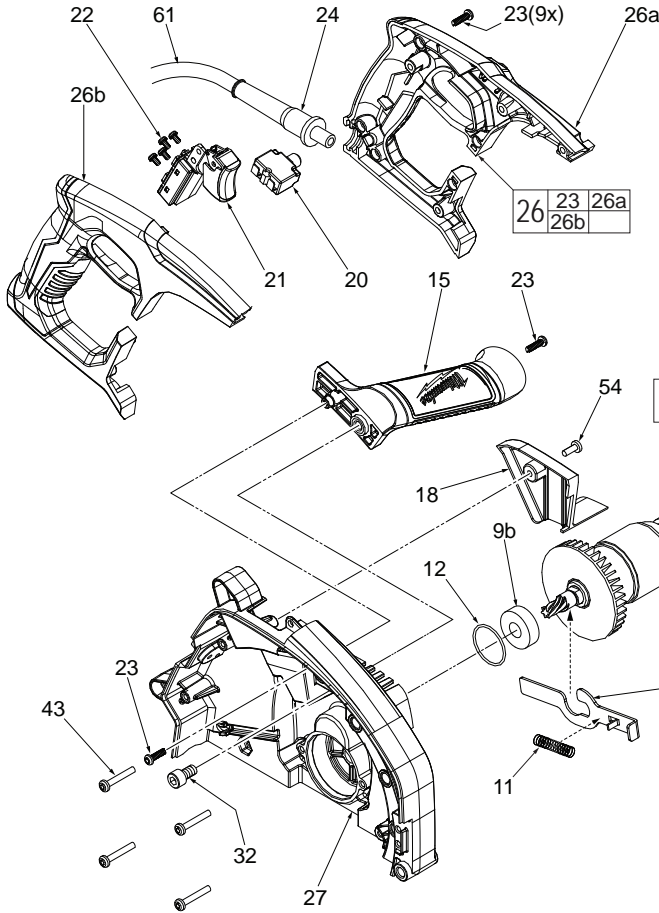

★ = Part number change from previous service parts list.


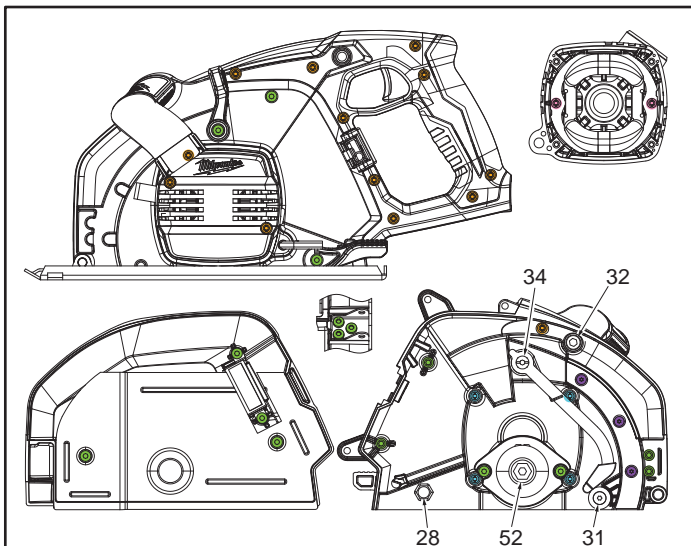


FIG.	PART NO.	DESCRIPTION	QTY.
● 54	06-82-5314	10-24 x 1/2" Pan Hd. Taptite T-25	(16)
● 23	06-82-7270	8-16 x 5/8" Pan Hd. Plastite T-20	(13)
● 43	05-88-9926	M5 x 16 x 2.14" Pan Hd. Tapt. T-25	(4)
● 37	06-82-3792	8-32 x 3/8" Flat Hd. Taptite T-15	(3)
● 14	06-82-7395	8-16 x 1.75" Pan Hd. Plastite T-20	(2)

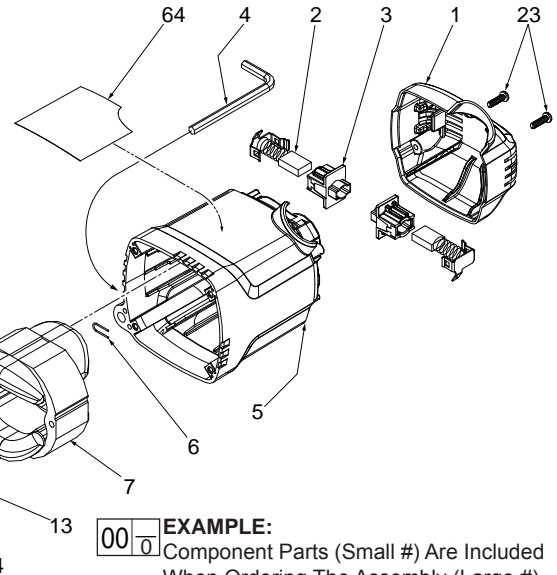


EXAMPLE:
Component Parts (Small #) Are Included When Ordering The Assembly (Large #).

FIG.	PART NO.	DESCRIPTION OF PART	NO. REQ.
★ 1	31-15-0031	Motor Housing Cover	(1)
★ 2	22-18-1075	120V Carbon Brush Assembly	(2)
★ 3	22-22-1030	Carbon Brush Holder	(2)
★ 4	49-96-0345	6mm Hex Key	(1)
★ 5	31-50-0016	Motor Housing	(1)
★ 6	40-50-0316	Spring Clip	(1)
★ 7	18-70-1016	120V Service Field	(1)
★ 8	42-96-0026	Rubber Bearing Cup	(1)
★ 9	16-70-1016	120V Service Armature Assembly	(1)
★ 9a	02-04-0847	Ball Bearing	(1)
★ 9b	02-04-1850	Ball Bearing	(1)
★ 10	44-20-0016	Spindle Lock	(1)
★ 11	40-50-0346	Spindle Lock Spring	(1)
★ 12	34-40-1375	O-Ring	(1)
★ 13	31-05-0076	Fan Baffle	(1)
★ 14	06-82-7395	8-16 x 1.75" Pan Hd. Sit. Plast. T-20	(2)
★ 15	31-44-0226	Front Handle Assembly	(1)
★ 18	31-15-0036	Wire Cover	(1)
★ 20	22-36-0161	120V 15A Overload Protector	(1)
★ 21	23-66-2685	Switch	(1)
★ 22	05-78-0305	M3.5 x 0.6 x 0.7mm Pan Hd. Sit. T-15	(4)
★ 23	06-82-7270	8-16 x 5/8" Pan Hd. Plast. T-20	(13)
★ 24	44-76-0210	Cord Protector	(1)
★ 26	14-34-6370	Rear Handle Assembly	(1)
★ 26a	-----	Left Rear Handle Halve	(1)
★ 26b	-----	Right Rear Handle Halve	(1)
★ 27	28-14-0016	Gearcase	(1)
★ 32	06-75-3971	M8 x 1.25 Bolt	(1)
★ 43	05-88-9926	M5 x 16 x 2.14" Pan Hd. Taptite T-25	(4)
★ 54	06-82-5314	10-24 x 1/2" Pan Hd. Tapt. T-25 (1 of 16)	(16)
★ 61	22-64-0437	Power Cord	(1)
★ 62	23-94-1220	Leadwire Assembly - Black (Not Shown)	(1)
★ 64	12-20-0232	Service Nameplate	(1)

FASTENER TORQUE CHART			
FIG.	DESCRIPTION	KG/CM	IN/LBS
14	8-16 x 1.75" Pan Hd. Plastite T-20	17-23	14-20
22	M3.5 x .7mm Switch Screw	3-6	3-5
23	8-16 x 5/8" Pan Hd. Plastite T-20	15-20	13-17
31	10-32 x 13/16" Bumper Screw T-25	30-40	26-34
32	M8 X 1.25 Bolt	25-35	21-30
34	10-24 Pan Hd. Taptite T-25	30-40	26-34
37	8-32 x 3/8" Flat Hd. Taptite T-15	4-8	3-7
39	Depth Shaft	30-36	26-31
43	M5 x 16 x 2.14" Pan Hd. Tapt. T-25	40-50	34-43
54	10-24 x 1/2" Pan Hd. Tapt. T-25 (For #18)	17-23	14-20
54	10-24 x 1/2" Pan Hd. Tapt. T-25 (For #19)	20-30	17-26
54	10-24 x 1/2" Pan Hd Tapt. T-25 (For all other)	34-40	29-34

★ = Part number change from previous service parts list.

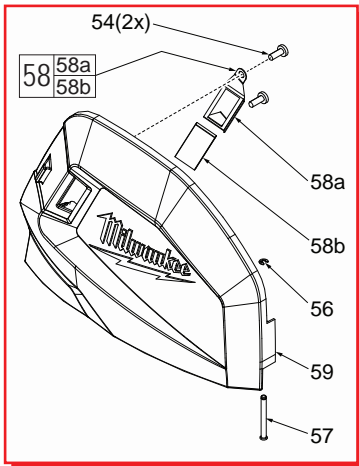

NOTE:
The original design of Collector Cover (59) 28-50-0022 is being discontinued and replaced by Collector Cover (59a), 28-20-0024.

Collector Cover (59) has unthreaded screw bosses for the Window Retainer Screws (54) that are self-tapping.

Replacement Collector Cover (59a) has *threaded* screw bosses that utilize two M5 Machine Screws (65), 05-81-2000. These screws have a blue thread locking patch.

When servicing Window Assembly (58) be sure to identify the Collector Cover (59 or 59a) for the proper screws to be used (54 or 65).




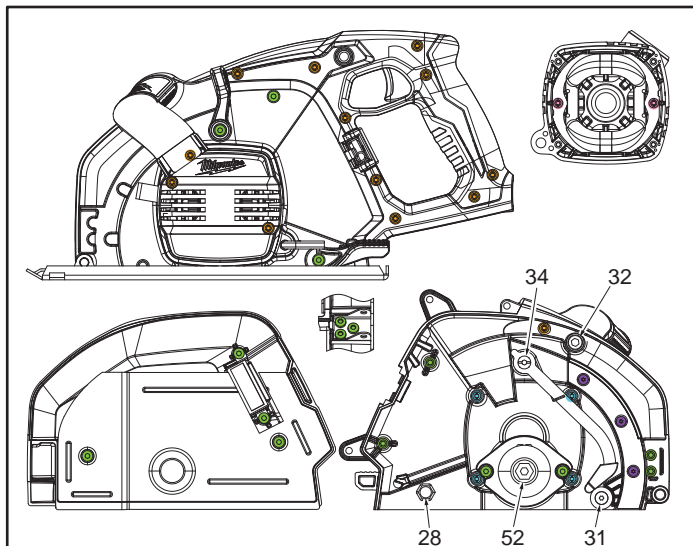


FIG.	PART NO.	DESCRIPTION OF PART	NO. REQ.
★ 16	31-52-0041	Lower Guard Lever	(1)
★ 17	45-08-0036	Lower Guard Shaft	(1)
★ 19	44-20-0051	Service Latch Assembly	(1)
★ 27	28-14-0016	Gearcase	(1)
28	06-75-5860	1/4-20 x 3/4" Hex Hd. Screw	(1)
★ 29	02-50-0015	Needle Bearing	(1)
30	42-38-0222	Rubber Bumper	(1)
31	45-04-0485	10-32 x 13/16" T-25 Bumper Screw	(1)
★ 33	40-50-0356	Torsion Spring	(1)
★ 34	06-82-5561	10-24 Pan Hd. Taptite T-25	(1)
★ 35	44-14-0016	Lower Guard Link Assembly	(1)
★ 36	43-56-0016	Chip Guide Plate	(1)
★ 37	06-82-3792	8-32 x 3/8" Flat Hd. Taptite T-15	(3)
★ 38	31-52-0017	Depth Lever	(1)
★ 39	45-08-0016	Depth Shaft	(1)
★ 40	45-88-8461	Washer	(1)
★ 41	45-16-0131	Shoe Assembly	(1)
42	44-60-1180	Pivot Pin	(1)
★ 44	43-78-0026	Service Hub Assembly	(1)
★ 45	45-14-0021	Lower Guard Sleeve	(1)
46	40-50-0045	Lower Guard Spring	(1)
★ 47	28-41-0016	Lower Guard	(1)
★ 48	34-60-0860	Retaining Ring	(1)
★ 49	43-54-0031	Inner Guard	(1)
★ 50	43-34-0091	Inner Flange	(1)
★ 51	43-34-0093	Outer Flange	(1)
52	06-75-0035	5/16" 18 x 9/16" Blade Screw	(1)
★ 53	42-70-0051	Cover Latching Clip	(1)
54	06-82-5314	10-24 x 1/2" Pan Hd. Tapt. T-25 (15 of 16)	(16)
★ 55	28-20-0016	Collector Cover Plate	(1)
★ 56	34-60-0401	E-Ring	(1)
★ 57	44-60-0106	Front Latch Pin	(1)
★ 58	43-50-0020	Window Assembly	(1)
★ 58a	-----	Window Retainer	(1)
★ 58b	-----	Window Glass	(1)
★ 59	28-20-0021	Collector Cover	(1)
★ 63	10-20-0000	Warning Label	(1)


FIG.	PART NO.	DESCRIPTION	QTY.
● 54	06-82-5314	10-24 x 1/2" Pan Hd. Taptite T-25	(16)
● 23	06-82-7270	8-16 x 5/8" Pan Hd. Plastite T-20	(13)
● 43	05-88-9926	M5 x 16 x 2.14" Pan Hd. Tapt. T-25	(4)
● 37	06-82-3792	8-32 x 3/8" Flat Hd. Taptite T-15	(3)
● 14	06-82-7395	8-16 x 1.75" Pan Hd. Plastite T-20	(2)

Place spindle lock spring (11) into the spring retaining area on the gearcase (27), as shown. Press ball bearing (9b) to the shoulder on the armature shaft (9). Orient the spindle lock (10) onto the armature shaft, inbetween the pressed on bearing and the front of the fan, as shown. Carefully insert the armature pinion/bearing into the gearcase. Align the spindle lock with the channel in the gearcase, making sure that the tab on the spindle lock engages the front of the spring.

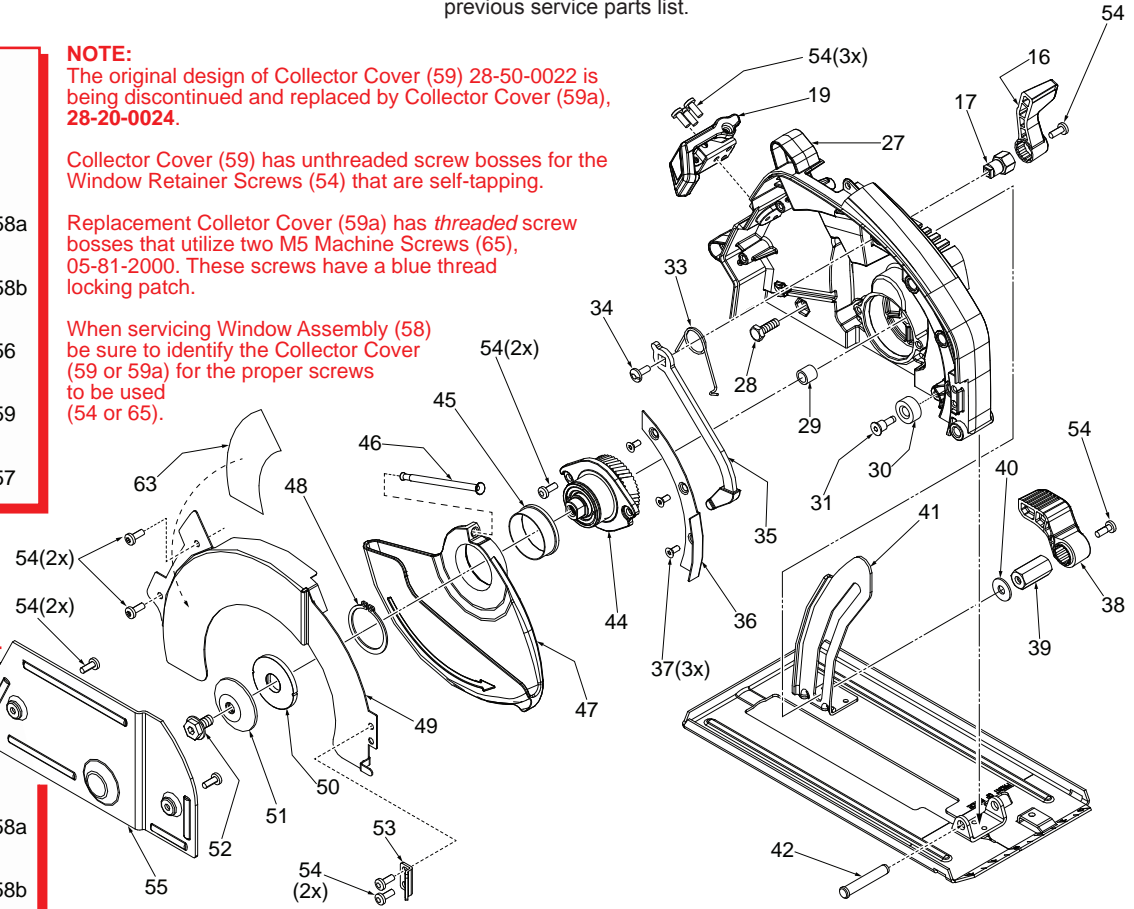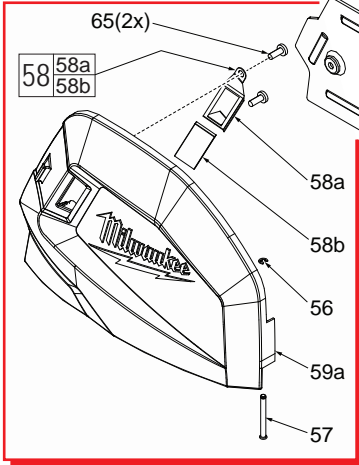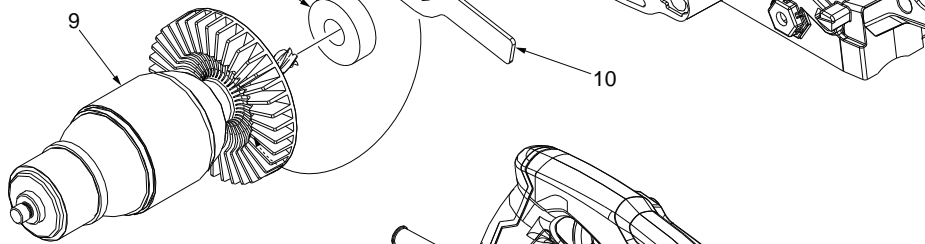


Verify that the hex head bolt (28) is fully seated in the gearcase (27) while assembling the depth shaft (39), as shown.

Press the bearing (29) flush to .015" subflush to the gear cavity wall in the gearcase (27).

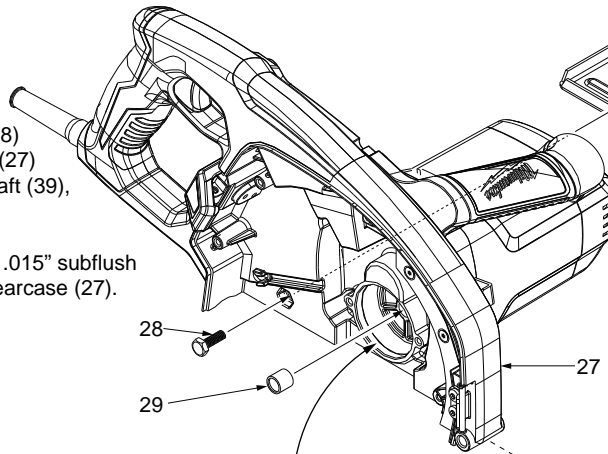

Orient the washer (40) such that the rounded edge is towards the depth rail of the shoe assembly (41).

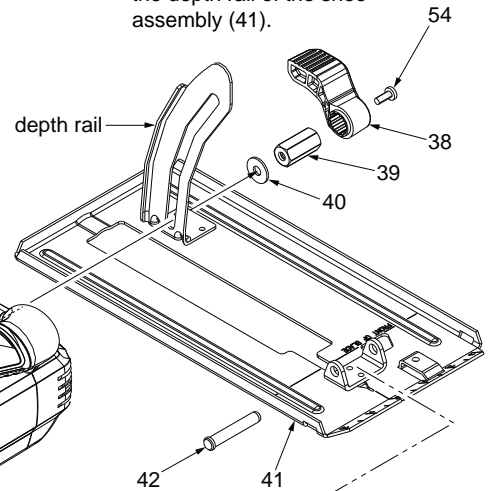

When servicing, remove 90-95% of the existing grease prior to installing Type 'Y' grease. Original grease maybe similar in color but not compatible with 'Y'.

LUBRICATION


Type 'Y' Grease, No. 49-08-5270

Note: Approx. 20 grams (.7 oz.) will be used


- Place a light coat of grease on the lower guard shaft (17) before assembling into the gearcase hole. (Approx. 1g/.035oz.).
- Coat o-ring (12) with grease prior to installing in groove of bearing cavity of gearcase (27). Coat bearing cavity (with o-ring installed) with grease prior to installing ball bearing (9b). (Approx. 2g/.07oz.).
- Place a heavy coating of grease over and around all teeth of the pinion gearing of the armature (9). (Approx. 2g/.07oz.).
- Place 9-11 grams (.32-.39oz.) of grease into the gear cavity of gearcase (27) prior to installing the service hub assembly (44).
- Place a heavy coating of grease over and around all of the teeth of the gear of the service hub assembly. (Approx. 3g/.1oz.).
- Coat the outside surface of needle bearing (29) and the needle bearing cavity of gearcase (27) with grease. (Approx. 1g/.035oz.)

Orient the textured gripping surface of the lower guard lever (16) so it is parallel ($\pm 20^\circ$) with the back edge of the front handle (15), as shown.

Functionally check the lower guard (47), with the saw set at full depth of cut. Place the saw upside down with the shoe (41) horizontal. Retract the lower guard 100%. Release the lower guard lever (16). The guard should return in a brisk manner.

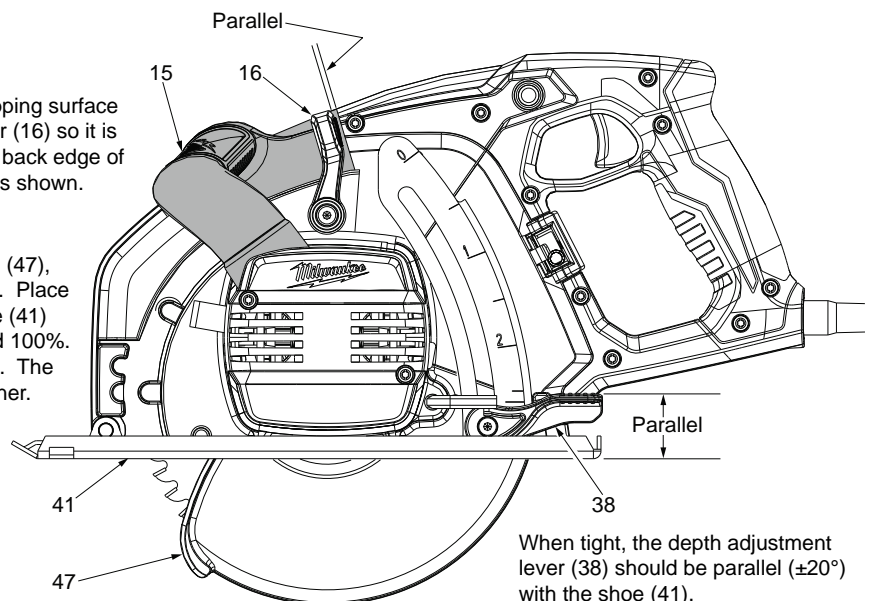

When tight, the depth adjustment lever (38) should be parallel ($\pm 20^\circ$) with the shoe (41).

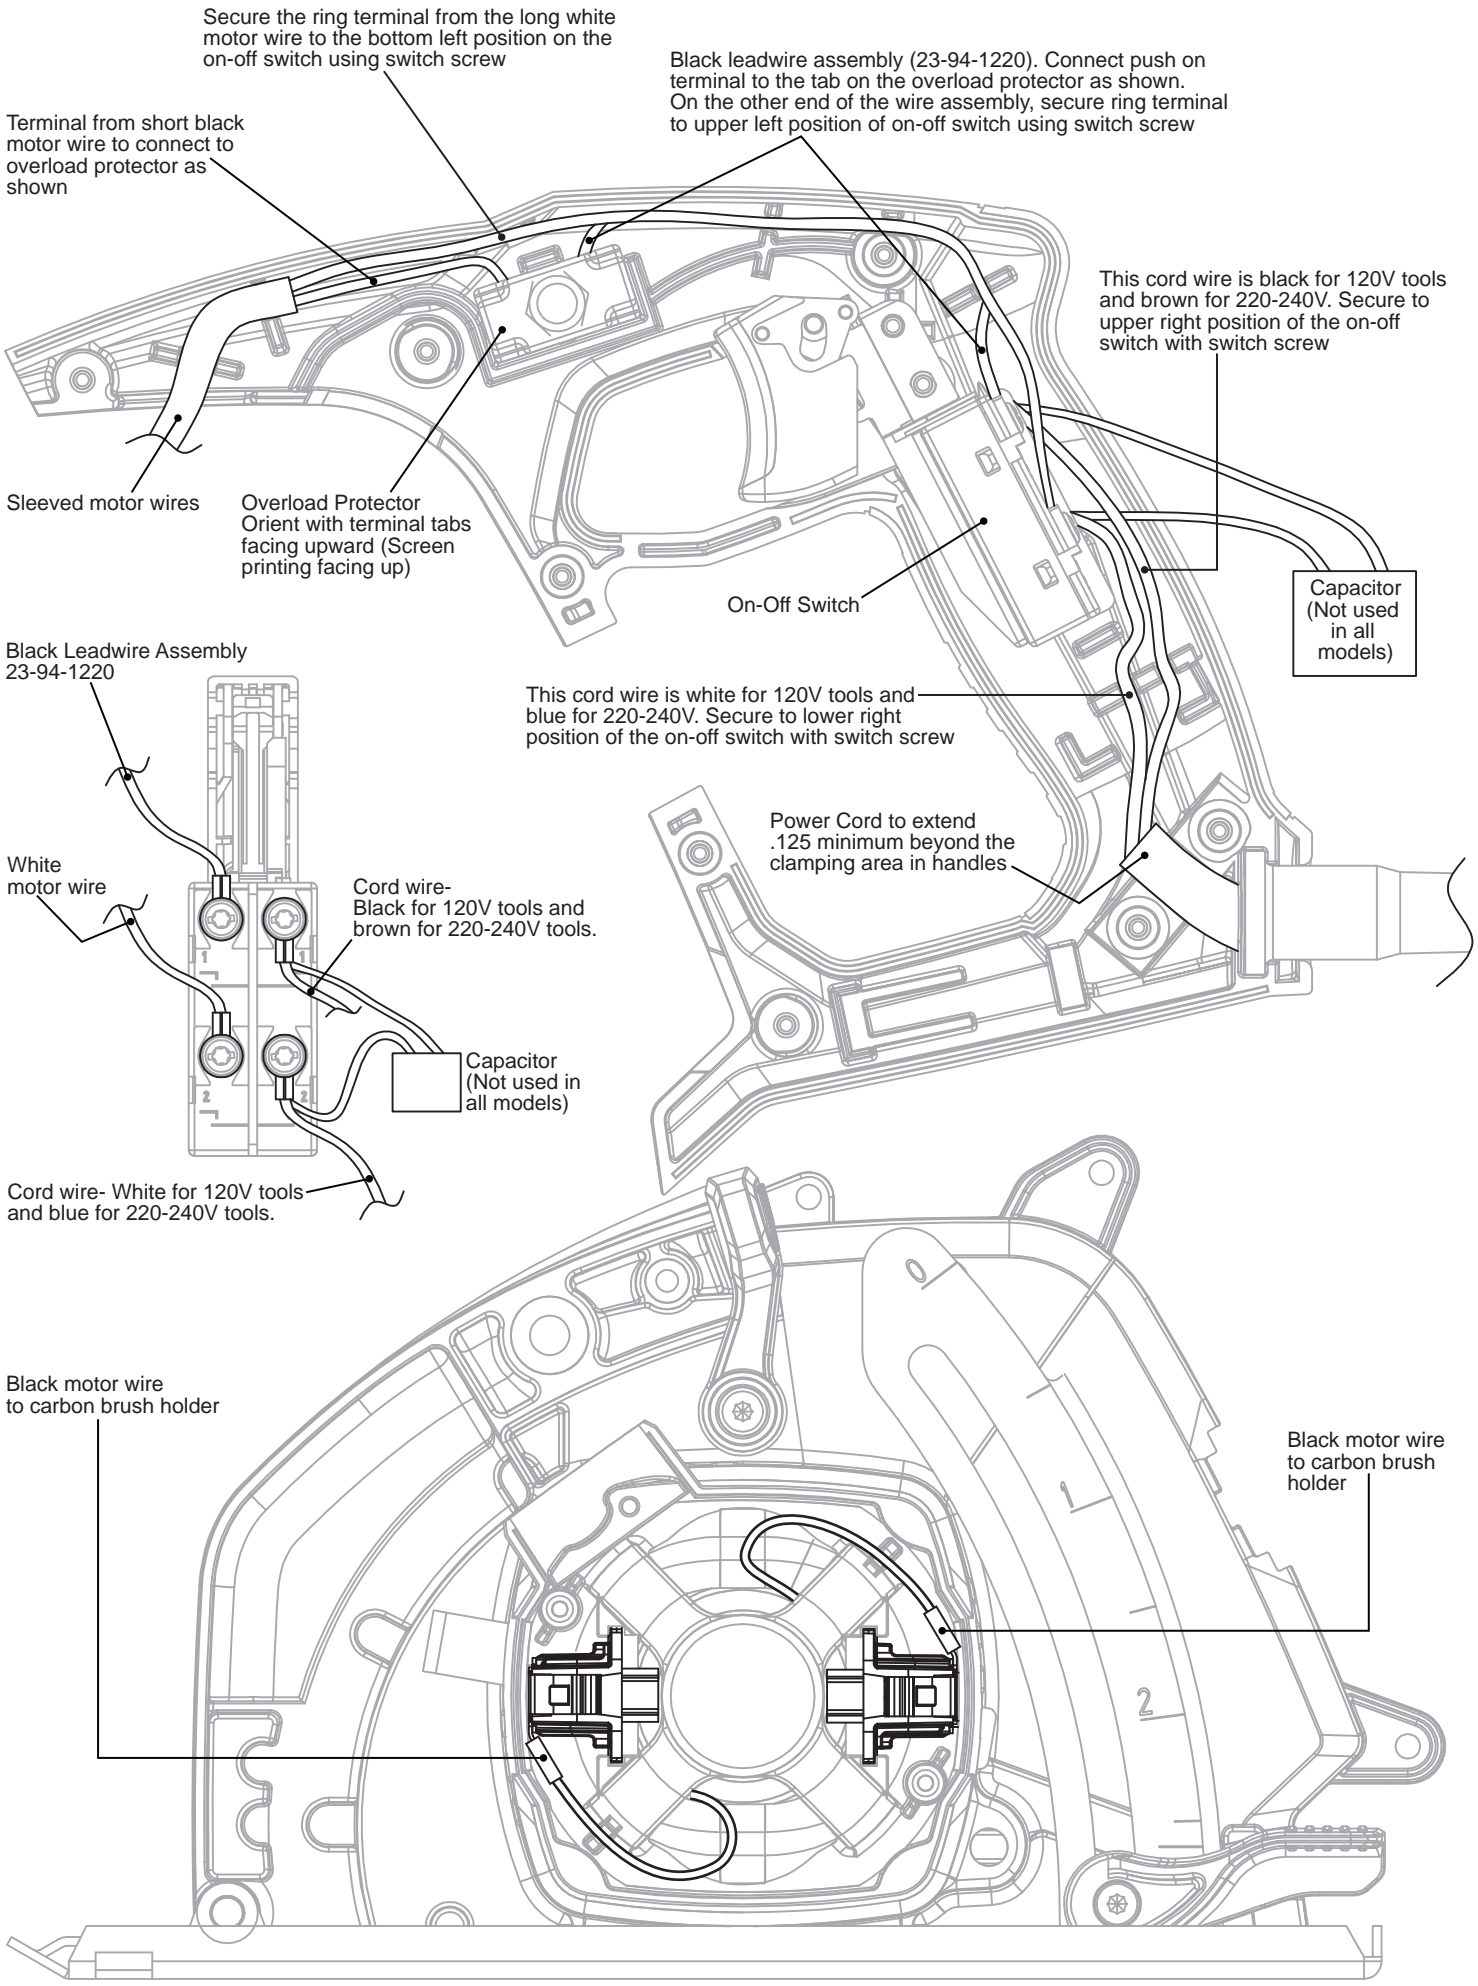

Secure the ring terminal from the long white motor wire to the bottom left position on the on-off switch using switch screw

Black leadwire assembly (23-94-1220). Connect push on terminal to the tab on the overload protector as shown. On the other end of the wire assembly, secure ring terminal to upper left position of on-off switch using switch screw

Terminal from short black motor wire to connect to overload protector as shown

This cord wire is black for 120V tools and brown for 220-240V. Secure to upper right position of the on-off switch with switch screw

Sleeved motor wires

Overload Protector Orient with terminal tabs facing upward (Screen printing facing up)

On-Off Switch

Capacitor (Not used in all models)

Black Leadwire Assembly 23-94-1220

This cord wire is white for 120V tools and blue for 220-240V. Secure to lower right position of the on-off switch with switch screw

White motor wire

Cord wire- Black for 120V tools and brown for 220-240V tools.

Capacitor (Not used in all models)

Power Cord to extend .125 minimum beyond the clamping area in handles

Cord wire- White for 120V tools and blue for 220-240V tools.

Black motor wire to carbon brush holder

Black motor wire to carbon brush holder



Metco Part Number: **58-14-6372**

TTi Part Number: **961075229**

ECO	36277	36927	39965	39963				
ECO Date	09/14/2012	12/10/12	02/11/2014	02/11/2014				

* See back page for date code and revisions.