
SERVICE PARTS LIST

Milwaukee SPECIFY CATALOG NO. AND SERIAL NO. WHEN ORDERING PARTS REVISED BULLETIN DATE Aug. 2019 **DIGITAL LEVELS** WIRING INSTRUCTION CATALOG NO. MLDIG14 MLDIG48 MLDIG24 MLDIG72

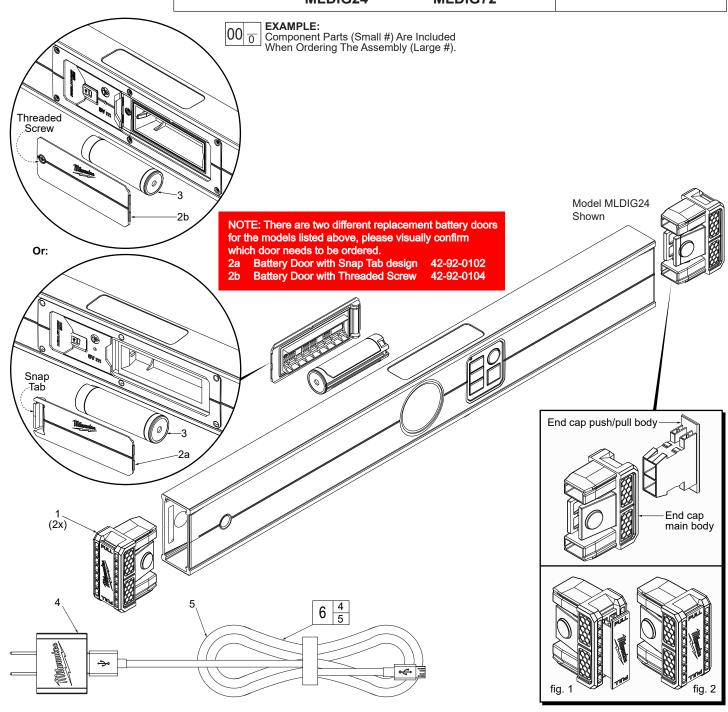

| FIG. | PART NO. | DESCRIPTION OF PART | NO. REQ. |
|------|------------|---|----------|
| 1 | MLDENDCP | Replacement End Cap Kit (Set of 2) | (1) |
| 2a | 42-92-0102 | Replacement Battery Door with Snap Tab | (1) |
| 2b | 42-92-0104 | Replacement Battery Door with Threaded Screw | (1) |
| 3 | 48-11-2130 | REDLITHIUM USB Battery Pack | (1) |
| 4 | | USB Wall Adapter | (1) |
| 5 | | 36" Micro USB Cable | (1) |
| 6 | 48-59-1202 | USB Micro Cable and AC Plug Kit | (1) |
| 7 | MLDSB14 | Soft Case for MLDIG14 Digital Level (Not Shown) |) (1) |
| | MLDSB24 | Soft Case for MLDIG24 Digital Level (Not Shown) |) (1) |
| | MLDSB48 | Soft Case for MLDIG48 Digital Level (Not Shown) |) (1) |
| | MLDSB72 | Soft Case for MLDIG72 Digital Level (Not Shown) | (1) |

Each End Cap Assembly should come fully assembled.

Open the push/pull body to allow easy installation of End Cap Assembly into frame of level, as shown in fig. 1.

With End Cap Assembly fully seated in frame, depress the push/pull body to lock assembly in place, see fig. 2.