

HOW TO USE:



Step 1:
Spray sufficient amount of lubricant on the vehicle glass surface
Note: Do not allow the lubricant to run dry on the surface.



Step 2:
Use a DA on low speed slide Autoscrub across the lubricated glass surface with light to medium pressure.



You can also use Autoscrub handheld sliding Autoscrub across the lubricated glass surface in a back and forth motion.



Step 3:
Wipe and buff dry residual lubricant off the glass surface using light pressure.



Step 1:
Spray sufficient amount of lubricant on the vehicle paint surface
Note: Do not allow the lubricant to run dry on the surface.



Step 2:
Use a DA on low speed slide Autoscrub across the lubricated paint surface with light to medium pressure.



You can also use Autoscrub handheld sliding Autoscrub across the lubricated paint surface in a back and forth motion.



Step 3:
Wipe and buff dry residual lubricant off the paint surface using light pressure.

HOW TO USE:



Step 1:
Spray sufficient amount of lubricant on the paint surface.
NOTE: Do not allow the lubricant to run dry on the surface.



Step 2:
Using DA or handheld, slide Autoscrub across the lubricated paint surface in a back and forth motion with light to medium pressure.
NOTE: Work in a 12" x 12" area at a time. Do not allow lubricant to dry on the surface



Step 3:
Wipe and buff dry residual lubricant off the paint surface using light pressure.



Step 1:
Spray sufficient amount of lubricant on the glass surface.
NOTE: Do not allow the lubricant to run dry on the surface.



Step 2:
Using DA or handheld, slide Autoscrub across the lubricated glass surface in a back and forth motion with light to medium pressure.
NOTE: Work in a 12" x 12" area at a time. Do not allow lubricant to dry on the surface



Step 3:
Wipe and buff dry residual lubricant off the glass surface using light pressure.