

**Assembly Instructions
for:**1734
1734A**Heavy-duty Truck
Wheel Step**

Max. Capacity: 300 lbs.


The heavy-duty truck wheel step is designed to help the technician easily reach engine parts.

Safety Precautions


Caution: To prevent equipment failure or damage resulting in personal injury:



- Read, understand, and follow these instructions.
- If the operator cannot read English, operating instructions and safety precautions must be read and discussed in the operator's native language.

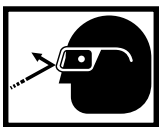

- Wear eye protection that meets the requirements of ANSI Z87.1 and OSHA.
- Inspect the condition of the wheel step before each use; do not use a wheel step if it's damaged, altered, or in poor condition.
- Do not exceed the rated capacity of the wheel step.

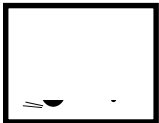

- The vehicle must be located on a hard, level surface to use the wheel step. The vehicle must be stable.
- Chock the wheels of the vehicle and set the parking brake before using the wheel step.

Placement Instructions**Wheel Step Placement**

1. Remove pins and adjust wheel step to best fit the width and the height of the tire; then replace pins.
2. Carefully place wheel step over the tire.
3. Before standing on the step, test it by placing one foot onto the grid to verify the wheel step is secure.

