CONVERSION TABLES

Foot Pounds	Kilo-gram Meters (Kgm or	Newton Meters	Newton Meters	Foot Pounds	Kilo-gram Meters (Kgm or	Kilo-gram Meters (Kgm or	Newton Meters	Foot Pounds
(ft.lbs)	mkp)	(Nm)	(Nm)	(ft.lbs)	mkp)	mkp)	(Nm)	(ft.lbs)
5	0.69	6.78	10	7.38	1.02	1	9.81	7.23
10	1.38	13.56	20	14.75	2.04	2	19.61	14.47
15	2.07	20.34	30	22.13	3.06	3	29.42	21.70
20	2.76	27.12	40	29.50	4.08	4	39.23	28.93
25	3.46	33.90	50	36.88	5.10	5	49.04	36.17
30	4.15	40.68	60	44.26	6.12	6	58.54	43.40
35	4.84	47.46	70	51.63	7.14	7	68.65	50.63
40	5.53	54.24	80	59.01	8.16	8	78.46	57.87
45	6.22	61.02	90	66.38	9.18	9	88.26	65.10
50	6.91	67.80	100	73.76	10.20	10	98.07	72.33
55	7.60	74.58	110	81.14	11.22	11	107.88	79.57
60	8.59	81.36	120	88.51	12.24	12	117.68	86.80
65	8.98	88.14	130	95.89	13.26	13	127.49	94.03
70	9.67	94.92	140	103.26	14.28	14	137.30	101.27
75	10.37	101.70	150	110.64	15.30	15	147.11	108.50
80	11.06	108.48	160	118.02	16.32	16	156.91	115.74
85	11.75	115.26	170	125.39	17.34	17	166.72	122.97
90	12.44	122.04	180	132.77	18.36	18	176.53	130.20
95	13.13	128.82	190	140.14	19.38	19	186.33	137.43
100	13.82	135.60	200	147.52	20.40	20	196.14	144.67
105	14.51	142.38	210	154.90	21.42	21	205.95	151.90
110	15.20	149.16	220	162.27	22.44	22	215.75	159.13
115	15.89	155.94	230	169.65	23.46	23	225.37	166.37
120	16.58	162.72	240	177.02	24.48	24	235.37	173.60
125	17.28	169.50	250	184.40	25.50	25	245.18	180.84
130	17.97	176.28	260	191.78	26.52	26	254.98	188.08
135	18.66	183.06	270	199.15	27.54	27	264.79	195.30
140	19.35	189.84	280	206.53	28.56	28	274.60	202.54
145	20.04	196.62	290	213.91	29.58	29	284.41	209.77
150	20.73	203.40	300	221.29	30.60	30	294.22	217.00
155	21.42	210.18	310	228.67	31.62	31	304.03	224.23
160	22.11	216.96	320	236.05	32.64	32	313.84	231.46
165	22.80	223.74	330	243.43	33.66	33	323.65	238.69
170	23.49	230.52	340	250.81	34.68	34	333.46	245.92
175	24.19	237.70	350	258.30	35.70	35	343.35	253.05
180	24.88	244.08	360	265.68	36.72	36	353.16	260.28
185	25.57	250.86	370	273.06	37.74	37	362.97	267.51
190	26.26	257.64	380	280.44	38.76	38	372.78	274.74
195	26.95	264.42	390	287.82	39.78	39	382.59	281.97
200	27.64	271.20	400	295.20	40.80	40	392.40	289.20
205	28.33	277.98	410	302.58	41.82	41	402.21	296.43
205	29.02	284.76		502.50	11.02		102.21	270.43
215	29.71	291.54						
220	30.40	298.32	^		ERSIO			٨C
225	31.09	305.10					VINIOL	A3
230	31378	311.88		MKG = 13.8			$Nm = 14.16^{\circ}$	

1 CMKG = 13.883 IN-O2 1 CMKG = 0.8677 IN-LB 1 MKG = 7.233 FT-LB 1 CMKG = 1 CMKG 1 CMKG = 0.098 Nm

1 dNm	= 14.161 IN-OZ
1 Nm	= 8.8507 IN-LB
1 Nm	= 0.73756 FT-LB
1 KpM	= 1 MKG
1 MKG	= 9.80665 Nm

ADJUSTMENT OF TORQUE SETTING



HOW TO USE YOUR NEW TORQUE WRENCH

- A. Balancing wrench in hand with graduations visible unlock knurled handle by turning lock nut counter clockwise. (see fig. 1)
- B. Set amount of torque required by turning knurled handle to read exact amount on case graduations. Example: 86 ft. lbs.
 - Turn knurled handle until the zero graduation on the beveled edge of the knurled handle is lined up with the vertical mark on the case and is even with the 80 ft. lbs. graduations.
 - 2. Turn knurled handle clockwise until the 6 ft. lbs. graduation on the beveled edge of the handle is in line with the vertical line on the case.
 - Lock handle securely by turning lock Nut clockwise wrench. Wrench is now set at 86 ft. lbs. and is ready to use. (see fig. 2)
- C. When setting for metric (KpM), use same procedures as setting for ft. lbs.
- D. Install the proper socket or attachment to the square drive and apply to nut or bolt and pull handle until you feel and/or here wrench click. Release, pull and wrench automaticaly resets for next operation. CAUTION:

DO NOT CONTINUE TO PULL AFTER WRENCH RELEASES. USE SPECIAL CARE AT LOW TORQUE SETTINGS THAT PULL STOPS WHEN WRENCH CLICKS.

- If wrench has not been used or has been in storage for some time, operate it several times at a low torque setting which permits special internal lubricants to recoat internal working parts
- When wrench is not in use, keep adjustment at lowest torque setting.
- 3. Do not turn handle below lowest torque setting.

- 4. Do not continue pulling on the wrench after pre-set torque has been reached and the wrench has released. Pressure must be taken off the handle and the wrench allowed to automatically reset itself, continuing to apply pressure after the wrench has released, will result in damage to the part being torqued by applying more than the specified amount of torque.
- Tool is rugged and designed for shop use, but is also a precision measuring instrument and should be treated as such.
- Clean wrench by wiping: Do not immerse in any type of cleaner which may affect special high pressure lube with which the wrench is packed at the factory.
- This torque wrench was calibrated and tested before leaving the factory and is accurate to ± 4%.

THIS IS A PRECISION MEASURING INSTRUMENT, CALIBRATION AND SERVICING MUST BE DONE REGULARLY AND IS THE OWNERS RESPONSIBILITY.



Fig. 2

Fig. 1



325.44

332.22

339.00

352.56

366.12

379.68

393.24

406.80

240

245

250

260

270

280

290

300

33.16

33.85

34.54

35.88

37.26

38.64

40.02

41.40

Check out the collection of hand tools we offer.