

GRIP CLIP™ TRANSFER PUMP

Grip Clip™ Bomba De Transferencia

Model No. W1156

OPERATOR'S MANUAL

 


PT
Performance Tool™

FOR YOUR SAFETY,
please read these instructions carefully and retain them for future use.

SPECIFICATIONS

- Quick change fittings for easy attach and release
- Clear view barrel allows visual inspection
- Quickly transfers low-viscosity fluids, such as water and oils
- Also works as an air pump
- Ideal for changing oil, inflating beach balls, siphoning liquids and more
- Not for use with caustic or flammable liquids

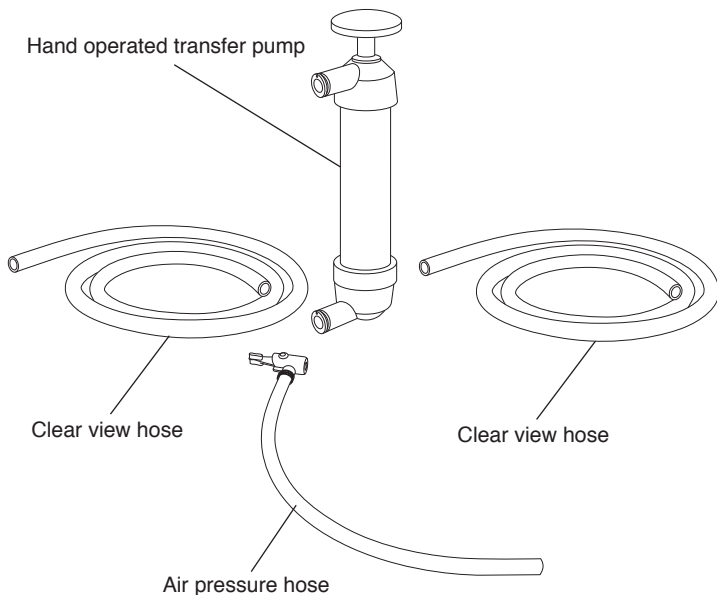

OPERATION

To use as a siphon:

1. Insert the clear hoses to the top and bottom nozzles on the pump. Depress the white fittings on the connectors when inserting the hose, then release. Firmly pull hoses to ensure a secure fit.
2. Insert the clear hose from the top nozzle (intake) into the liquid needing to be transferred. Insert the clear hose from the bottom nozzle (discharge) into where the liquid is to go. NOTE: For proper siphoning, the discharge hose must be lower than the intake hose.
3. Prime the pump by pumping the handle 3-4 times. Once the liquid begins to flow, it will flow without further pumping.

After siphoning gasoline, oil, or any flammable liquid, it is very important to clean the pump.

To change oil:

 
 
1. To remove motor oil from the crankcase of an engine, follow steps 1 & 2 above.
2. Insert the top (intake) hose into the engine dipstick hole until it reaches the bottom of the crankcase.
3. Place the bottom (discharge) hose into a drain pan and start pumping.

To use as an air pump:

1. Place the air pressure hose into the bottom nozzle (discharge) and tighten securely. Attach Snap-shut valve and begin pumping.
2. To inflate footballs, beach balls, etc., place the inflation needle into the Snap-shut valve on the end of the air hose and begin pumping.

Cleaning Instructions:

Usually flushing the pump and hoses with hot water is all that is needed for cleaning. For a more thorough cleaning, the pump can be disassembled, without the use of tools, and cleaned.



Learn more about fuel transfer systems and parts we have.