

25 FT RETRACTABLE CORD REEL

Stock Number W2272

OWNERS MANUAL



▲ WARNING

It is the owner and/or operators' responsibility to study all WARNINGS, operating, and maintenance instructions contained on the product label and instruction manual prior to operation of this cord reel. The owner/operator shall retain product instructions for future reference.

The owner and/or operator are responsible for maintenance, maintaining all decals or warning labels and while in use, maintaining the unit in good working order. If the owner and/or operator are not fluent in English, the product warnings and instructions shall be read and discussed with the operators' native language by the purchaser/owner or his designee. Make sure that the operator comprehends its contents. Safety information shall be emphasized and understood prior to usage. The cord reel shall be inspected per the operating instructions.

Users of this cord reel must fully understand these instructions. Each person operating this product must also be of sound mind and body and must not be under the influence of any substance that might impair their vision, dexterity, or judgment.

Protect yourself and others by observing all safety information.

Failure to comply with instructions could result in personal injury and/or property damage!

PT
Performance Tool®

Please read these instructions carefully and retain them for future use.

On occasion, after printing of our literature is completed, our manufacturers may make changes and/or modifications to merchandise which will not be reflected in this manual. Although we strive to maintain complete and accurate information, it is possible in some instances, that the product may differ slightly from printed specifications. Illustrations are intended for reference only. Actual merchandise may vary. Wilmar is not responsible for typographical errors.

Performance Tool®

SPECIFICATIONS

Cord Length: 25 ft.
Cord Type/Gauge:..... 16/3 SJTW
Max. outlet rating:..... 125V, 60Hz
1250 Watts, 10Amps

Specifications are subject to change without notice

IMPORTANT SAFETY INFORMATION

Read these safety warnings before operation.

WARNING: DO NOT OVERLOAD!

Check the amperages of the tools or appliances to be plugged into the outlets of the extension cord reel. Listed below are the maximum amperage ratings.

WARNING! To avoid serious injury or death from electrical shock or fire.

1. **DO NOT** handle this cord reel or try to plug it in when your hands are wet or damp or when you are standing on a wet or damp surface or in water.
2. Where possible use a Ground Fault Circuit Interrupter (GFCI) protected supply. Use of a GFCI reduces the risk of electric shock.
3. Inspect before every use; do not use if parts are loose or damaged or if insulation is worn.
4. Wear ANSI-approved safety goggles and heavy-duty work gloves during use.
5. This cord reel **MUST ALWAYS BE USED** in accordance with all electrical and safety codes and ordinances, including the most recent National Electric Code (NEC) and with the Occupational Safety and Health Act (OSHA) Volume 1 on General Industry Standards and interpretations.
6. ALWAYS make certain that the power source conforms to the requirements on the cord reel.
7. ALWAYS disconnect the power before servicing or inspecting the cord reel for any reason.
8. This cord reel is only for use on 10-125V and is equipped with an approved 3 conductor cord with a 3-prong, grounded plug. **TO REDUCE THE RISK OF ELECTRICAL SHOCK**, it should only be plugged into a properly grounded 3-prong outlet. Never modify the plug in any way. Do not use any adapter plugs.
9. **CORD REEL IS NOT WATERPROOF** and is not intended for use in showers, saunas or in potentially wet locations. ALWAYS keep this cord reel away from sinks, tubs, showers, etc. NEVER attempt to pick up plugged-in power tools or appliance should they fall into standing water. Electrocution could result!
10. This cord reel comes equipped with a 3-prong grounded plug.
DO NOT remove the third prong or try to modify the plug. If it will not fit the outlet, have the proper outlet installed by a qualified electrician. Improper connection of the grounding conductor can result in a risk of electrical shock.
11. **NEVER** attempt to plug the cord reel into a non-grounded outlet or extension cord and ALWAYS be sure that the extension cord is in good electrical condition.
12. When pulling cord from the Cord Reel, grasp the Reel's cord itself, and not the device or tool the cord is plugged into.
13. Maintain product labels and nameplates. These carry important safety information.
14. This cord reel is intended for use as a general indoor power source,
DO NOT use in potential dangerous locations, such as in flammable or explosive atmospheres.
15. Avoid body contact with grounded surfaces such as pipes, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is grounded.
16. Do not attach an extension cord to this item's input cord.
17. Keep away from heating vents, radiators, or other sources of heat.
18. **KEEP OUT OF REACH OF CHILDREN.**
19. Use as intended only.

INSTALLATION

CAUTION: Read and understand Mounting instructions before attempting installation and use of this product.

Installation Precautions

1. Unplug the cord reel before installing.
2. Install only according to these instructions. Improper Installation can create hazards.
3. Wear ANSI-approved safety goggles and heavy-duty work gloves during installation.
4. Keep Installation area clean and well lit.
5. Keep bystanders out of the area during installation.

INSTALLATION CONT.

CAUTION: DRYWALL WILL NOT HOLD THE WEIGHT OF THE REEL ASSEMBLY.

6. Do not install when tired or when under the influence of alcohol, drugs or medication.
7. Install the Cord Reel properly before connecting to the power supply.
8. If mounted in an area that is not readily accessible, connect this Cord Reel to a switch-controlled outlet; then, if a malfunction occurs, the Reel can be disconnected immediately.
9. Install out of reach of children.
10. Verify that installation surface has no hidden utility lines before drilling or driving screws.

Option 1: Ceiling Mount Installation (360° Rotation)

1. Select location within 2 feet of an electrical outlet (such as the receptacle near your garage door opener if available).
2. Locate a ceiling joist (using a stud finder) and using the mounting bracket as template, mark the holes so they are centered on the ceiling joist.
3. Attach the mounting bracket to the ceiling joist using the 2 wood screws provided.
4. Align the holes on the side of the reel with the holes in the side of the mounting bracket and insert the pin.
5. Place the retaining ring on the pin and twist until the entire ring is through the hole in the pin.

DO NOT operate this cord reel without the retaining ring in place on the pin.

Option 2: Wall Mount Installation (180° Rotation)

1. Select location within 2 feet of an electrical outlet.
2. Use a stud finder to locate a stud and using the mounting bracket as template, mark the holes so they are centered on the wall stud.

CAUTION: DRYWALL WILL NOT HOLD THE WEIGHT OF THE REEL ASSEMBLY.

3. Attach the mounting bracket to the wall stud using the 2 wood screws provided.
4. Align the holes on the side of the reel with the holes in the side of the mounting bracket and insert the pin.
5. Place the retaining ring on the pin and twist until the entire ring is through the hole in the pin.

DO NOT operate this cord reel without the retaining ring in place on the pin.

OPERATION

1. Plug into any 110-125V 60Hz polarized outlet. Be aware of the plug and insert properly.
2. Pull cord out to desired length. Notice a clicking noise when pulling the cord.
The cord will stay at the desired length during the clicking and rewind after a pull past the clicking noise.
3. Extended length when retracted can be achieved by sliding the rubber stop on the cord to the desired position.
4. To retract, pull cord out and guide cord slowly back into the reel.

CAUTION: Outlet is energized at all time. DO NOT OVERLOAD!

NOTE: Cord length is 25 feet long fully extended. DO NOT pull on cord after cord is fully extended.

CAUTION: DO NOT ALLOW THE CORD TO RETRACT BY ITSELF AS DAMAGE OR INJURY MAY OCCUR FROM EXCESSIVE REWIND SPEED.

WARNING: TO AVOID INJURY ALWAYS UNPLUG UNIT BEFORE PERFORMING ANY MAINTENANCE.

Remove dirt and grime as soon as it accumulates. Use a soft damp cloth and a mild soap if needed. Be sure not to get the electrical plug wet. NEVER submerge any part of the cord reel in any solution to clean it.

DO NOT USE solvents such as gasoline, turpentine, etc. to clean unit. Keep reel cord clean to maintain smooth retraction. To clean, simply pull cord to its full length and allow to retract through a dampened rag. Pull out full length again and allow to retract through clean rag sprinkled with talcum powder.

DRY THOROUGHLY BEFORE PLUGGING BACK INTO OUTLET.

1 YEAR LIMITED WARRANTY

PERFORMANCE TOOL® extends only the following warranties, and only to original retail purchasers. These warranties give specific legal rights. Except where prohibited by local law, the law of the State of Washington governs all warranties and all exclusions and limitations of warranties and remedies. There may be other rights which vary from state to state.

PERFORMANCE TOOL® warrants the product to be free from defects in materials and workmanship under normal use and service. A defective product may be returned for a free replacement within 90 days from the date of purchase, provided that product is returned to place of purchase immediately after discovery of defect. After 90 days and up to one year from date of purchase, PERFORMANCE TOOL® will replace at no charge any parts which our examination shall disclose to be defective and under warranty.

These warranties exclude blades, bits, punches, dies, bulbs, fuses, hoses, and other consumables which must be replaced under normal use and service. These warranties shall not apply to any product or part which is used for a purpose for which it is not designed, or which has been repaired or altered in any way so as to affect adversely its performance or reliability, nor shall these warranties apply to any product or part which has been subject to misuse, neglect, accident or wear and tear incident to normal use and service.

PERFORMANCE TOOL® does not authorize any other person to make any warranty or to assume any liability in connection with its products.

Except for warranties of title and the limited express warranties set forth above, PERFORMANCE TOOL® makes no express or implied warranties of any kind with respect to its products. In particular, PERFORMANCE TOOL® makes no implied warranty of merchantability and no implied warranty of fitness for any particular purpose, except that for goods purchased primarily for personal, family or household use and not for commercial or business use, PERFORMANCE TOOL® makes an implied warranty of merchantability (and, if otherwise applicable, an implied warranty of fitness for a particular purpose), but only for the particular qualities or characteristics, and for the duration, expressly warranted above.

The laws on limitation of implied warranties may differ from state to state, so the above limitations may not apply in all cases.

PERFORMANCE TOOL® shall not be liable for consequential, incidental or special damages resulting from or in any manner related to any product, or to the design, use, or any inability to use the product. The sole and exclusive remedy for a defective product or part shall be the repair, or replacement thereof as provided above. The laws on limitation of remedies or on consequential, incidental or special damages may vary from state to state, so the above limitations may not apply in all cases.