


# AIR VALVE HOLDER

1. Use with vehicle in "Neutral or Park"
2. Attach hose to air supply line with 1/4" N.P.T. fitting
3. Remove spark plug
4. Install air hose into spark plug hole
5. Apply air pressure (90 to 120 p.s.i.)

Use in conjunction with Valve Spring Compressor  
(Performance Tool #W80567, W84001, W84002) to service  
overhead valve components without removing head from engine block

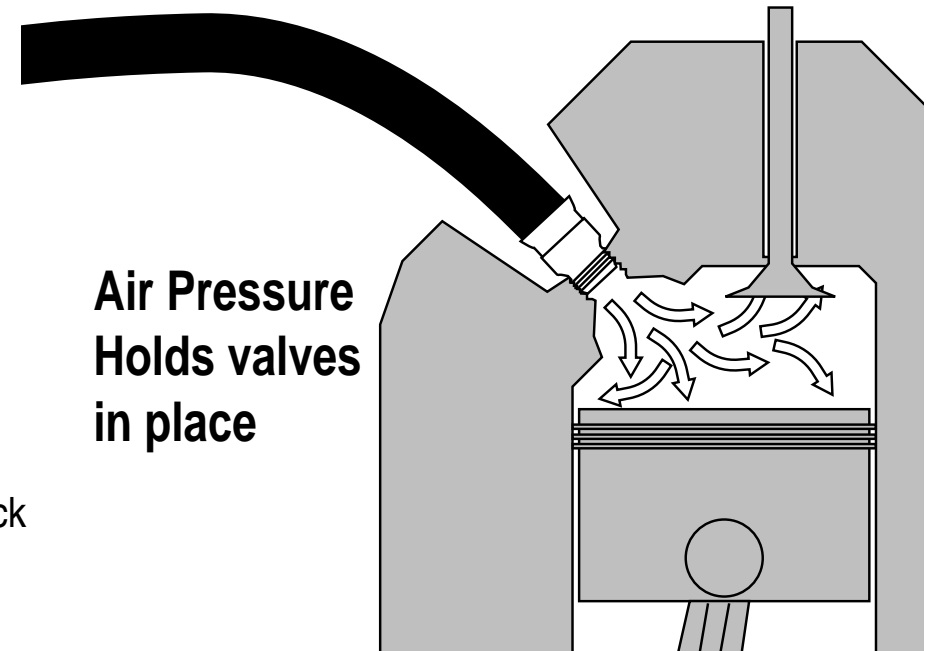

**CAUTION:**

Place vehicle in park or neutral with the emergency brake on prior to applying air pressure to the cylinders. Applying air pressure to the cylinder may cause the crankshaft to rotate, possibly causing vehicle movement. Keep clear of all belts, pulley and the fan.

**PT**  
Performance Tool®