

PIT PAL PRODUCTS


Thank You For Choosing Pit Pal Products! Your Purchase Is Greatly Appreciated!

Please continue to choose Pit Pal Products for all of your organizational needs in the trailer, shop, or at the track.

Installation Instructions for #294E 48" Tire Rack Extension Kit Installation Instructions for #295E 64" Tire Rack Extension Kit

Using components and fasteners, assemble carefully using these instructions and mount on trailer or garage wall, using 5/16" bolts or #12 stainless self tapping screws (not provided). Design allows for mounting on 16" centers, to align with vertical studs in wall. More assembly instructions on reverse side.

Figure 1

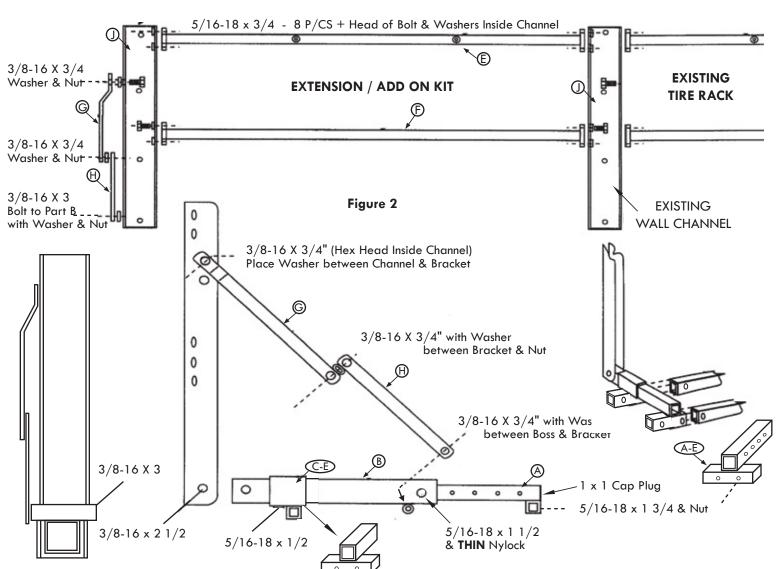

ASSEMBLY INSTRUCTIONS

Lay out all pieces of your tire rack to make sure all pieces are correct. Separate all hardware.

- 1. Decide which side of your existing mounted Adjustable Tire Rack is going to be extended. Remove the Hinge Tube Assembly on that side (Parts A B C). Leave the Scissors Support Bracket assembly attached. Put hardware to the side, you will reuse in Step 2.
- 2. Replace the just removed Scissors Support Bracket assembly with your new extension kit Parts A B C. (Part A) will have a two hole tube weldment on the end and the Part C weldment will have two holes. Install and reattach the Scissors Support Bracket assembly using the hardware from Step 1.
- 3. Fasten the Wall Cross Tube, top Part E (two holes) and Part F Tire Bumper Wall Cross Tube. Using four $5/16-18 \times 3/4$ " hardware, screw head and washer through the inside of the channel.
- 4. Fasten the wall channel Part J to the Wall Cross Tube with the same hardware as Step 3. Level or line up with existing frame, fasten to wall.
- 5. Install the existing Hinge Assembly from Step 1 into the channel using $3/8-16 \times 2 \cdot 1/2$ " screw and lock nut. Assemble Scissors Support Brackets $3/8-16 \times 3/4$ " with washer in between brackets. Attach Scissor Support Bracket to round sleeve on Part B using $3/8-16 \times 3$ " screw and lock nut.
- 6. Install Tire Cross Tubes into extension brackets A and C using four 5/16-18 x 1 3/4" screw and lock nut.

ADJUSTABLE TIRE RACK PIECES

PART	T DESCRIPTION		QTY PER RACK MATERIAL		LENGTH	ADJUSTABLE TIRE RACK - 48" AND 64" EXTENSION KIT HARDWARE LIST:	
A-E	Adjustable Telescoping Support (With Weldment) LH/RH Hinge Support Tube Tire Cross Tube Sleeve (Universal LH/RH)		1	1 x 1 Tube	18.000"	BOLTS: 5/16-18 x 1/2" 5/16-18 x 3/4" 5/16-18 x 1 3/4" 5/16-18 x 1 1/2" 3/8-16 x 3/4"	QTY 2
B			1	1 1/4 x 1 1/4 Tube	17.000"		QTY 8 QTY 4
C-E			1	1 1/2 x 1 1/2 with 1 X 1 Weldment	3.000"		QTY 1 QTY 2
D	Tire Cross Tube	48" Tire Rack 64" Tire Rack	2 2	1 x 1 Tube	47 3/4" 63 7/8"	3/8-16 x 2 1/2" 3/8-16 x 3"	QTY 1 QTY 1
E	Wall Cross Tube - T	op 48" Tire Rack 64" Tire Rack	1 1	$1/2 \times 1 \ 1/2$ Rect. Tube with 2-1" holes	46 1/8" 62 1/8"	NUTS: 5/16-18 Nylon Lock Nuts 5/16-18 Nylon Lock Nuts (Thin)	QTY 12 QTY 1
F	Wall Cross Tube Tire Bumper	48" Tire Rack 64" Tire Rack	1 1	1/2 x 1 1/2 Rect. Tube Weldment	46 1/8" 62 1/8"	3/8-16 Nylon Lock Nuts WASHERS: 5/16"	QTY 4
©	Top Scissors Support Bracket Formed		1	1/8 x 1	16"	3/8" PLASTIC PLUGS:	QTY 3
\mathbf{H}	Bottom Scissors Support Bracket		1	1/8 x 1	12"	1 x 1 Tube Plastic Cap Plug 1" Round Plastic Cap Plug	QTY 1 QTY 2
J	Wall Channel		1			2 1/4 x 5/16" Snap Pins	QTY 1