

MINI MAG PRO

03.5692



UK MINI MAG PRO

WARNING / CHARGING INSTRUCTION / BATTERY TIPS

- Avoid looking directly into the beam of light, as this will result in dazzling
- Do not use the lamp near a naked flame
- · Before using the lamp for the first time, the battery must be fully charged
- Recharge frequently
- Always replace the battery with an original SCANGRIP battery
- Do not leave the battery without charge for an extended period
 Deep discharge risks damaging the battery
- The light source of this lamp is not replaceable; when the light source reaches its end of life the whole lamp shall be replaced

USE

 The lamp has an indicator for charging and battery capacity. 4 LEDs for indicating 25%, 50%, 75% and 100%



- During charging the LEDs light red. All LEDs will turn green when fully charged
- For battery capacity, press and hold power button while the lamp is off. When battery capacity
 is below 25%, the bottom left LED is flashing green



- Switch sequence: MAIN, SPOT, OFF
- If the power button is not pressed within 3 seconds, the next press will turn off the lamp
- Press and hold the power button while main light is on to start dimming. Release, press and hold again to increase
- · Lowest and highest levels are indicated by flashing of the light until the button is released
- When the lamp is turned off the lamp will remember the setting of the main light

Discarded electrical products must not be disposed of together with household waste. Please use recycling facilities. Ask your local authority or retailer for advice on recycling. The better user to see and for the davies the davies in the fore this house on the second sec

- The battery must be removed from the device before it is broken up
- The device must be disconnected from the mains when the battery is removed
- Please dispose of the battery safely