



ATTENTION! BEFORE OPERATING THIS PUMP, REMOVE THE METAL SHIPPING PLUG FROM THE TOP OF THE PUMP AND INSTALL THE BREATHER.



1. Using an 8mm allen wrench, remove the metal oil plug from the top of the pump. Turning the wrench counter-clockwise will loosen the plug.



2. Thread in the supplied breather by hand turning clockwise. Use a crescent wrench to fully tighten the breather to the pump.