

12V Cyclone Auto Vac




User's Manual

We are constantly improving our products so specifications are subject to change without notice.

12V Cyclone Auto Vac by Wagan Tech®

Thank you for purchasing the 12V Cyclone Auto Vac by Wagan Tech®. With normal care and proper treatment, it will provide years of reliable service. Please read all operating instructions carefully before use.

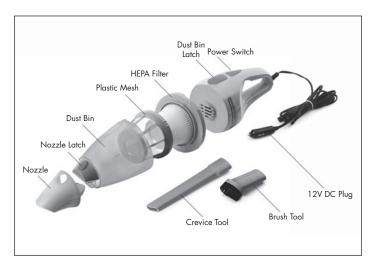

BEFORE USE

- Familiarize yourself thoroughly with the operation of this product before using.
- 2. Ensure that the filters are properly installed and secured to the housing.
- 3. Ensure that the filters are clean before use.



1

FFATURES

- Powered by automobile 12V DC socket
- Removable and washable filters
- Includes brush and crevice attachments
- Extra-long 11-ft power cord

SPECIFICATIONS

Operation voltage	12V
Motor rating	120W
Recommended vehicle DC socket fuse	15A

CAUTION

- This is not a toy. Keep away from children.
- This vacuum cleaner operates from 12V sockets only.

OPERATION

- Plug into a 12V power source, such an automobile cigarette lighter socket. Make sure your socket is rated at 15A or higher.
- Turn ignition to the "accessory" position. If you plan on using the vacuum for more than 15 minutes, you may want to run your engine to avoid draining your battery (be sure you are parked in a well-ventilated area).
- 3. Turn off all other electrical equipment in the car.
- 4. Push the power switch to the ON position and begin vacuuming.
- A Do not vacuum liquids or burning objects
- A Do not cover either of the side air vents while using

12V Cyclone Auto Vac by Wagan Tech®

CARE AND MAINTENANCE

- To empty the vacuum, press the dust bin latch and separate dust bin from motor unit.
- 2. Carefully remove the filter from dust bin and discard contents.
- 3. To clean the filters, hand-wash with mild soap and water.
- The motor unit can be wiped with a damp sponge. Do not use detergents, cleaners, or solvents.
- 5. Allow all parts to dry completely before reassembling the vacuum.
- A Do not submerge the motor unit
- A Do not use when the filter is wet
- ▲ Do not run the vacuum without the filter in place

