



**ATD-6559
Masking Film Dispenser
Owner's Manual**



Features:

- Holds box firmly as you pull sheeting
- Keep sheeting clean and dry
- 8" rubber wheels allow easy movement in work area
- Stands upright for convenient storage
- Fits box lengths from 14" – 55"

ATD-6559 Assembly Instructions



1. Ensure that you have all the parts upon opening your unit. Listed in the order as shown above:

(2) Wheels

(1) Hardware set containing:

- | | |
|------------------|------------------------------|
| (1) Knob | (1) Lower Vertical Tube |
| (3) M8 Lock Nuts | (1) Upper Vertical Tube |
| (3) M8 Bolts | (1) Upper Film Holder |
| (3) M8 Washers | (1) Lower Film Holder (Base) |
| (2) M10 Bolts | |



2. Attach the Wheels to the Lower Film Holder (Base) using the M10 Bolts



3. Attach Lower Vertical Tube to the Lower Film Holder (Base) using an M8 Bolt, Washer and Lock Nut.




4. Slide the Upper Vertical Tube into the Lower Vertical Tube and secure with an M8 Bolt, Washer and Lock Nut.



5. Slide Upper Film Holder over the Upper Vertical Tube as shown. Secure with the Knob. The Knob can be loosened so that the Upper Film Holder can slide to adjust for your film roll. Be sure to tighten the Knob after loading your film roll.



6. Assembled unit.

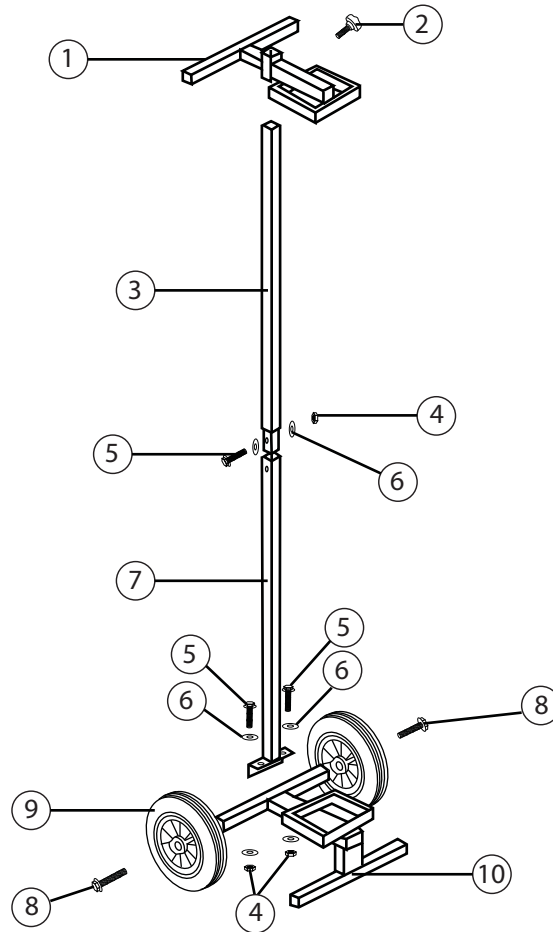

ITEM#	ORDERING PART#	PART DESCRIPTION
1	PRT6559-01	UPPER FILM HOLDER
2	PRT6559-HK	KNOB
3	PRT6559-03	UPPER VERTICAL TUBE
4	PRT6559-HK	LOCK NUT (M8)
5	PRT6559-HK	BOLT (M8)
6	PRT6559-HK	WASHER (M8)
7	PRT6559-07	LOWER VERTICAL TUBE
8	PRT6559-HK	BOLT (M10)
9	PRT6559-09	WHEEL
10	PRT6559-10	LOWER FILM HOLDER (BASE)

*PRT6559-HK includes items 2, 4, 5, 6 and 8)