


INSTRUCTIONS


#11-921 Wall Scraper

The bolt assembly unit for Bon Wall Scraper (#11-921) includes:


REF #	DETAIL	QTY/UNIT
001	Bolt	1
002	Dimpled Washer	1
003	Washers	2
004	Small Lock Washer	1 of 2
005	Nut	1
006	Large Washer	1
007	Small Lock Washer	2 of 2
008	Wing Nut	1

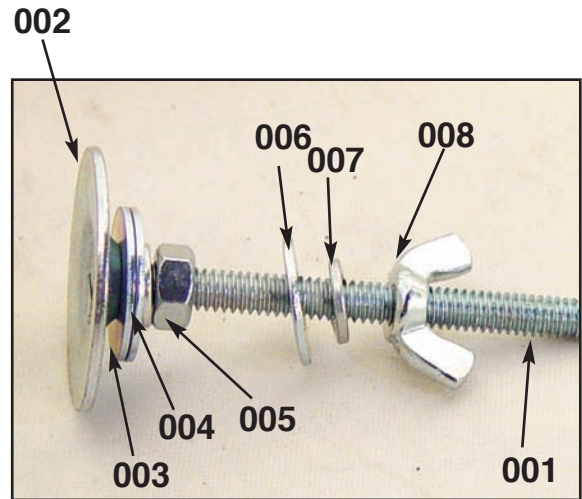

ATTACHING THE SCRAPER DISC

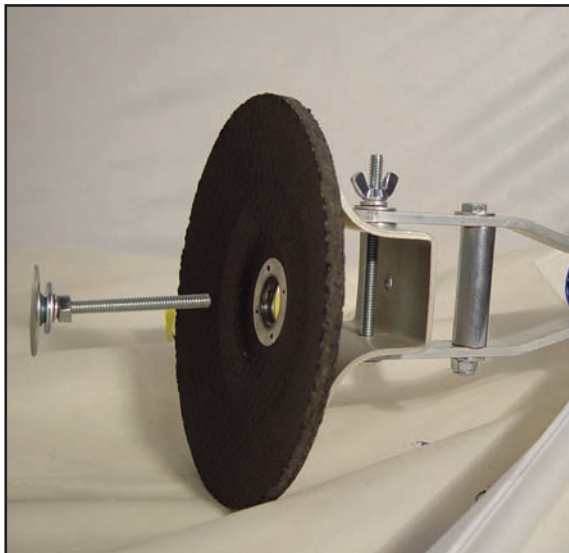

1. Thread the bolt with dimpled washer (002), two washers (003), 1 small lock washer (004), and the nut (005) through the hole in the bottom of the disc and through the hole in the assembly bracket.

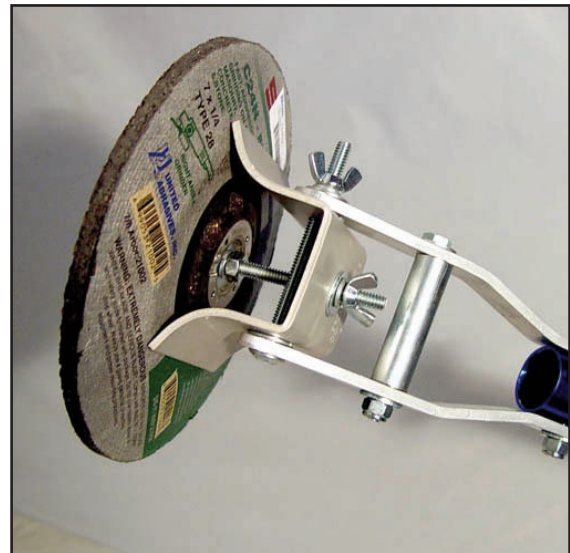

2. Place the large washer (006) and the small washer (007) on the bolt. Secure with the wing nut (008).

Bon[®]
Trusted since 1958