

# INSTRUCTIONS

# Shagged Stipple Brush

## DIRECTIONS

### Loading Instructions:


1. Take 5 gallons of all purpose drywall compound and add 8 oz. of paint or water. Mix until compound is consistent, let set for 8 minutes, and remix. The more or less water or paint you add will alter the design. Loosen or tighten to your desire.
2. Breaking in the Brush: The Stipple Brush will change design if not broken in properly before texturing. Break brush in by applying topping to brush until coated. Then stomp the brush on a coated part of the ceiling until the brush achieves a consistent design.
3. After your compound is ready, apply the compound to the ceiling with a paint roller. Roll in two different directions to achieve an even coat. Then stomp the brush into the compound to create your textured patterns.



MIX  
COMPOUND



ROLL ON  
COMPOUND

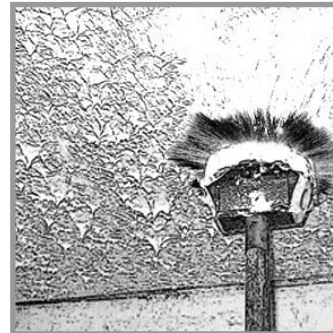

STAMP IN  
TEXTURE



**Bon**<sup>®</sup>  
Trusted since 1958

When it comes to quality concrete, masonry, drywall tools, Bon is the brand you can depend on.