


INSTRUCTIONS #21-166 Smart Level Mounting Bracket

Instructions:

- 1.** Remove screws (2) that secure the battery cover to the **Smart Level**. Set aside.
- 2.** Place the **Smart Level** against the mounting bracket and secure it in place with the (2) 1/4 - 28 black plastic thumb screws supplied with the bracket.
- 3.** Lay the **Smart Level** onto the screed or straight edge and lock in place using the (2) 5/16 - 18 thumb screws supplied with the bracket.
- 4.** Verify the **Smart Level** is sitting flush on the screed or straight edge prior to use.

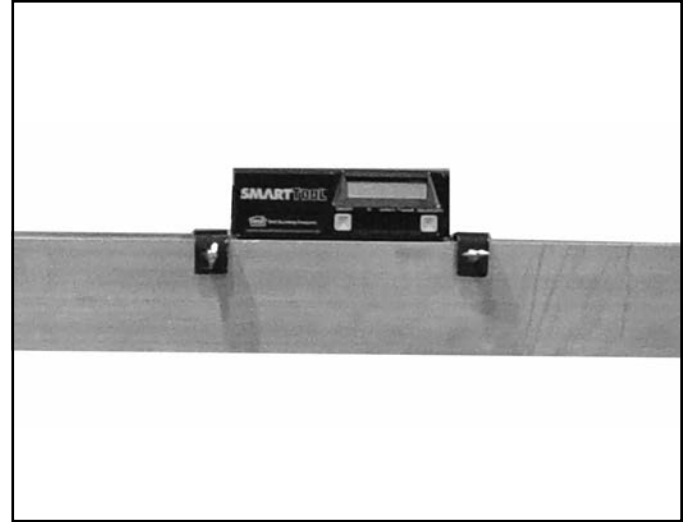

Bon[®]
Trusted since 1958

When it comes to quality concrete, masonry, drywall tools, Bon is the brand you can depend on.